



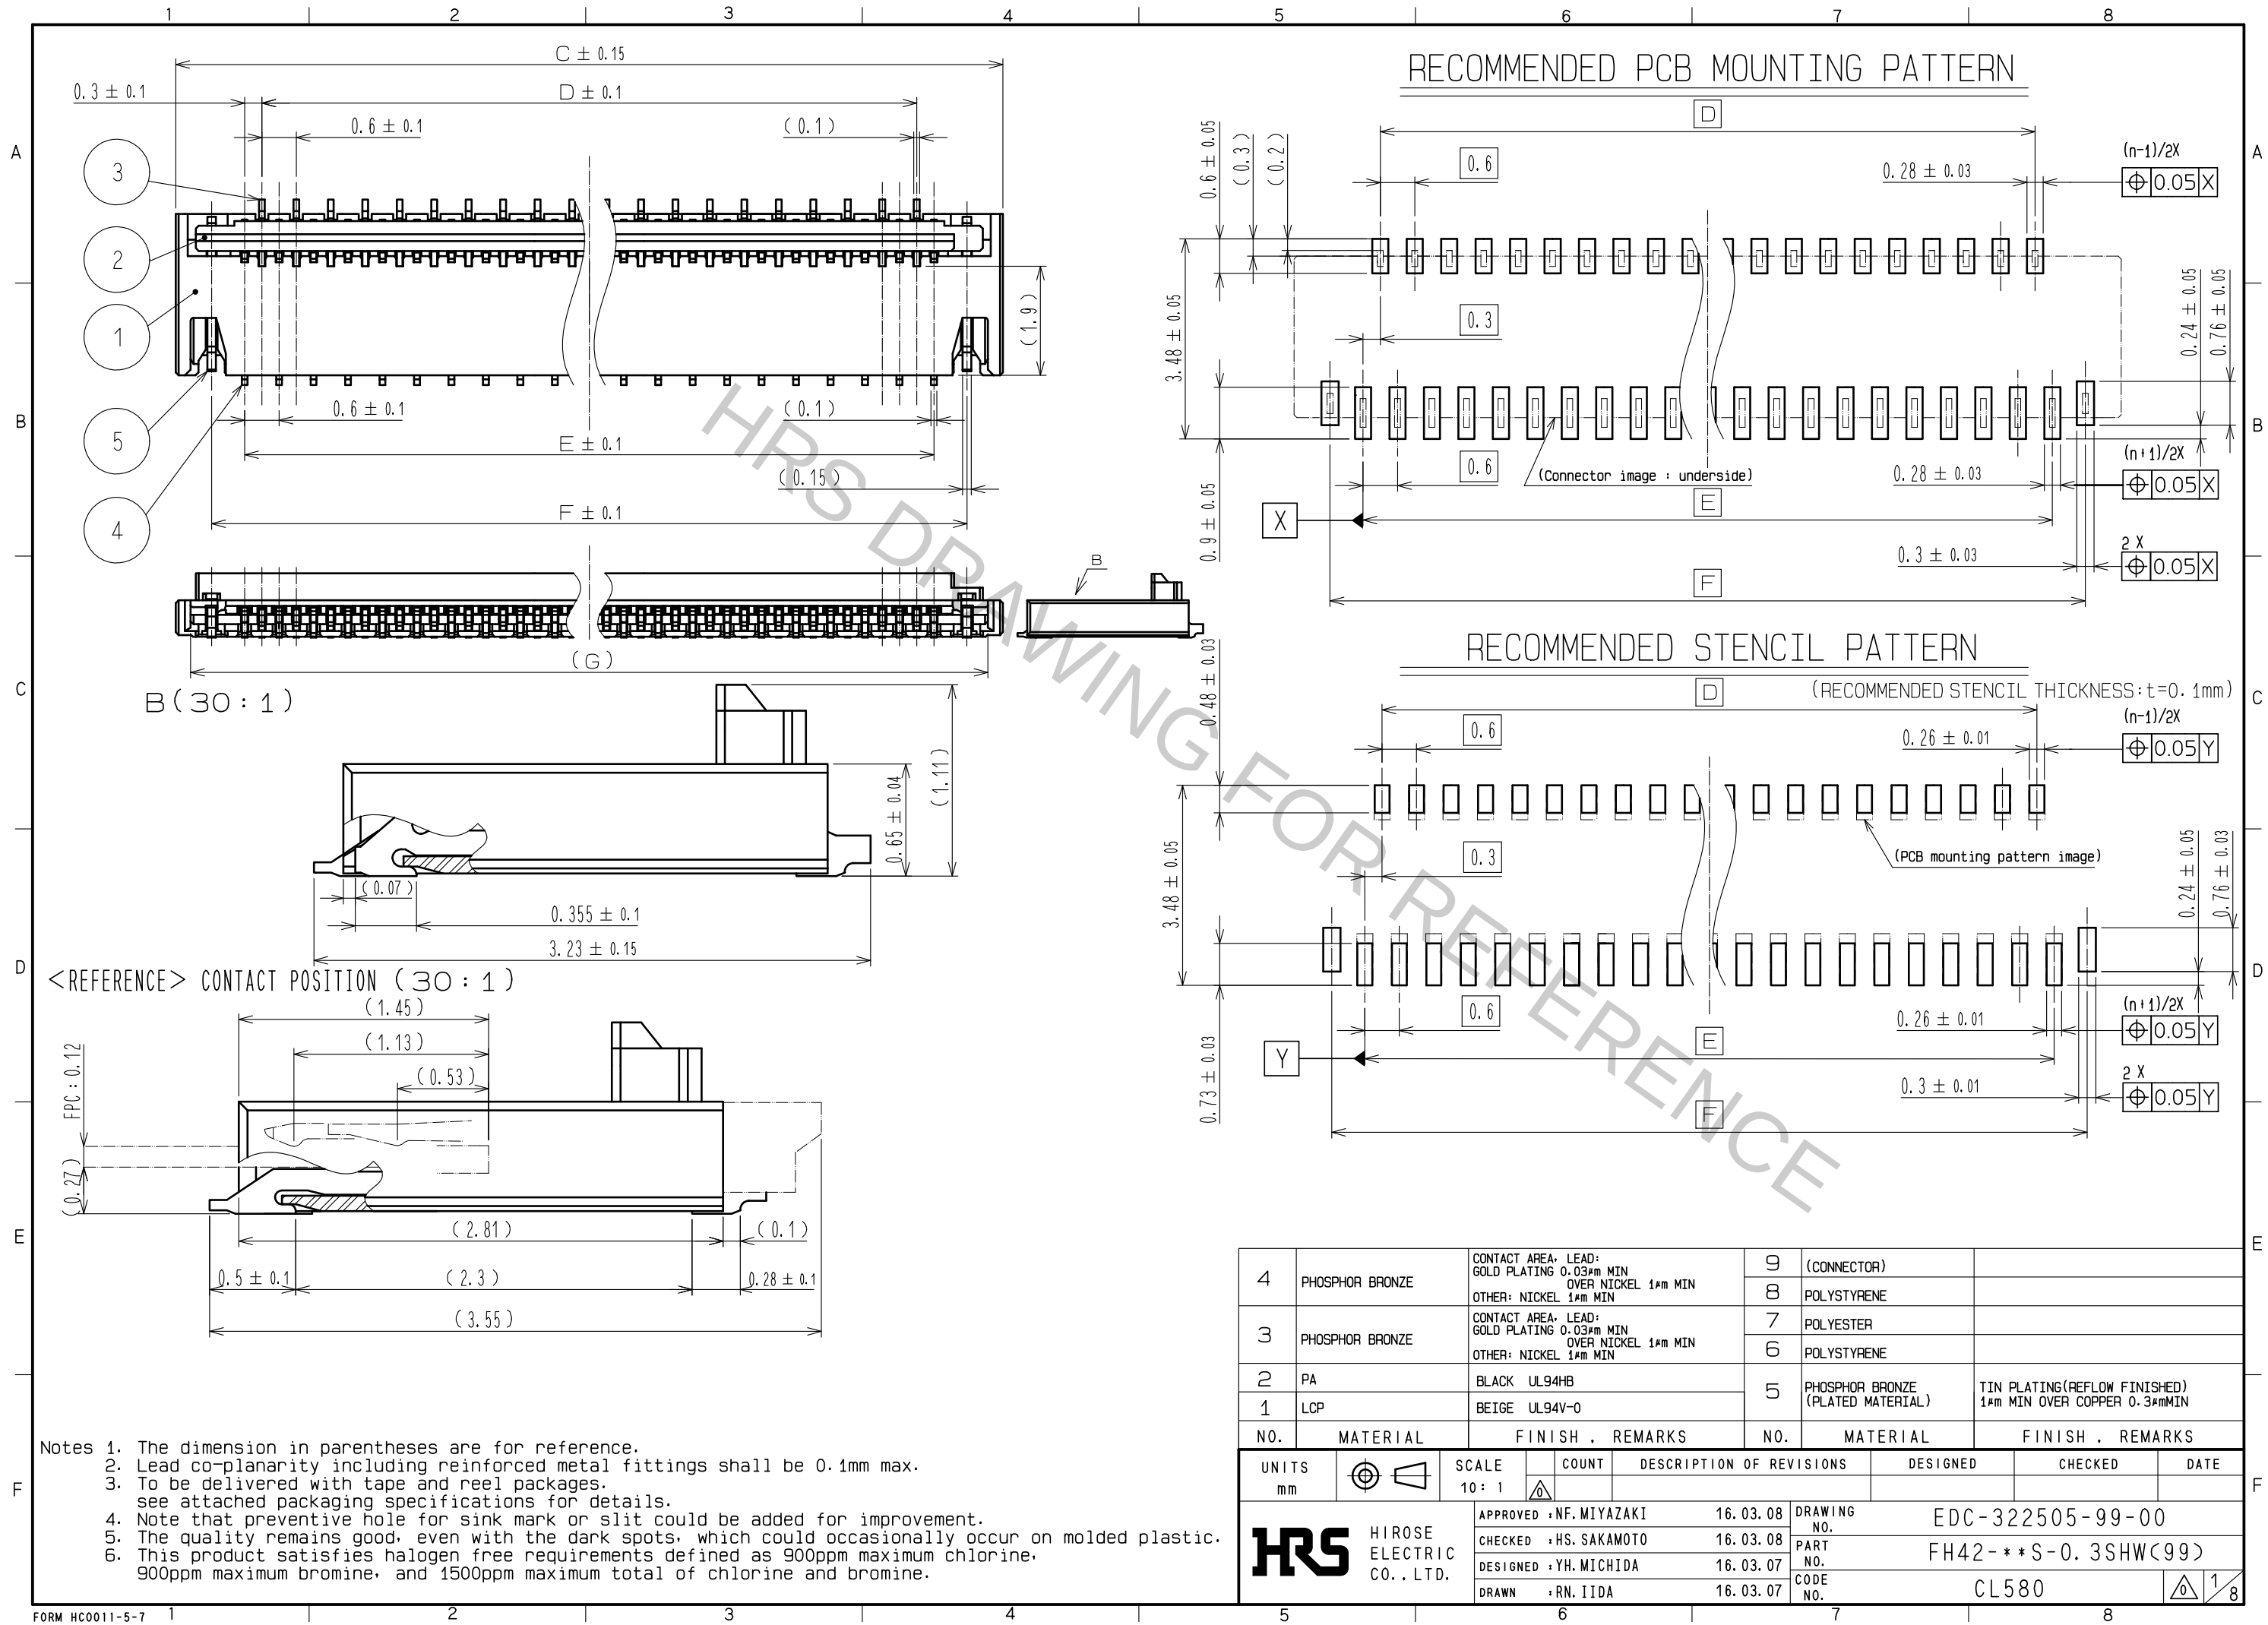

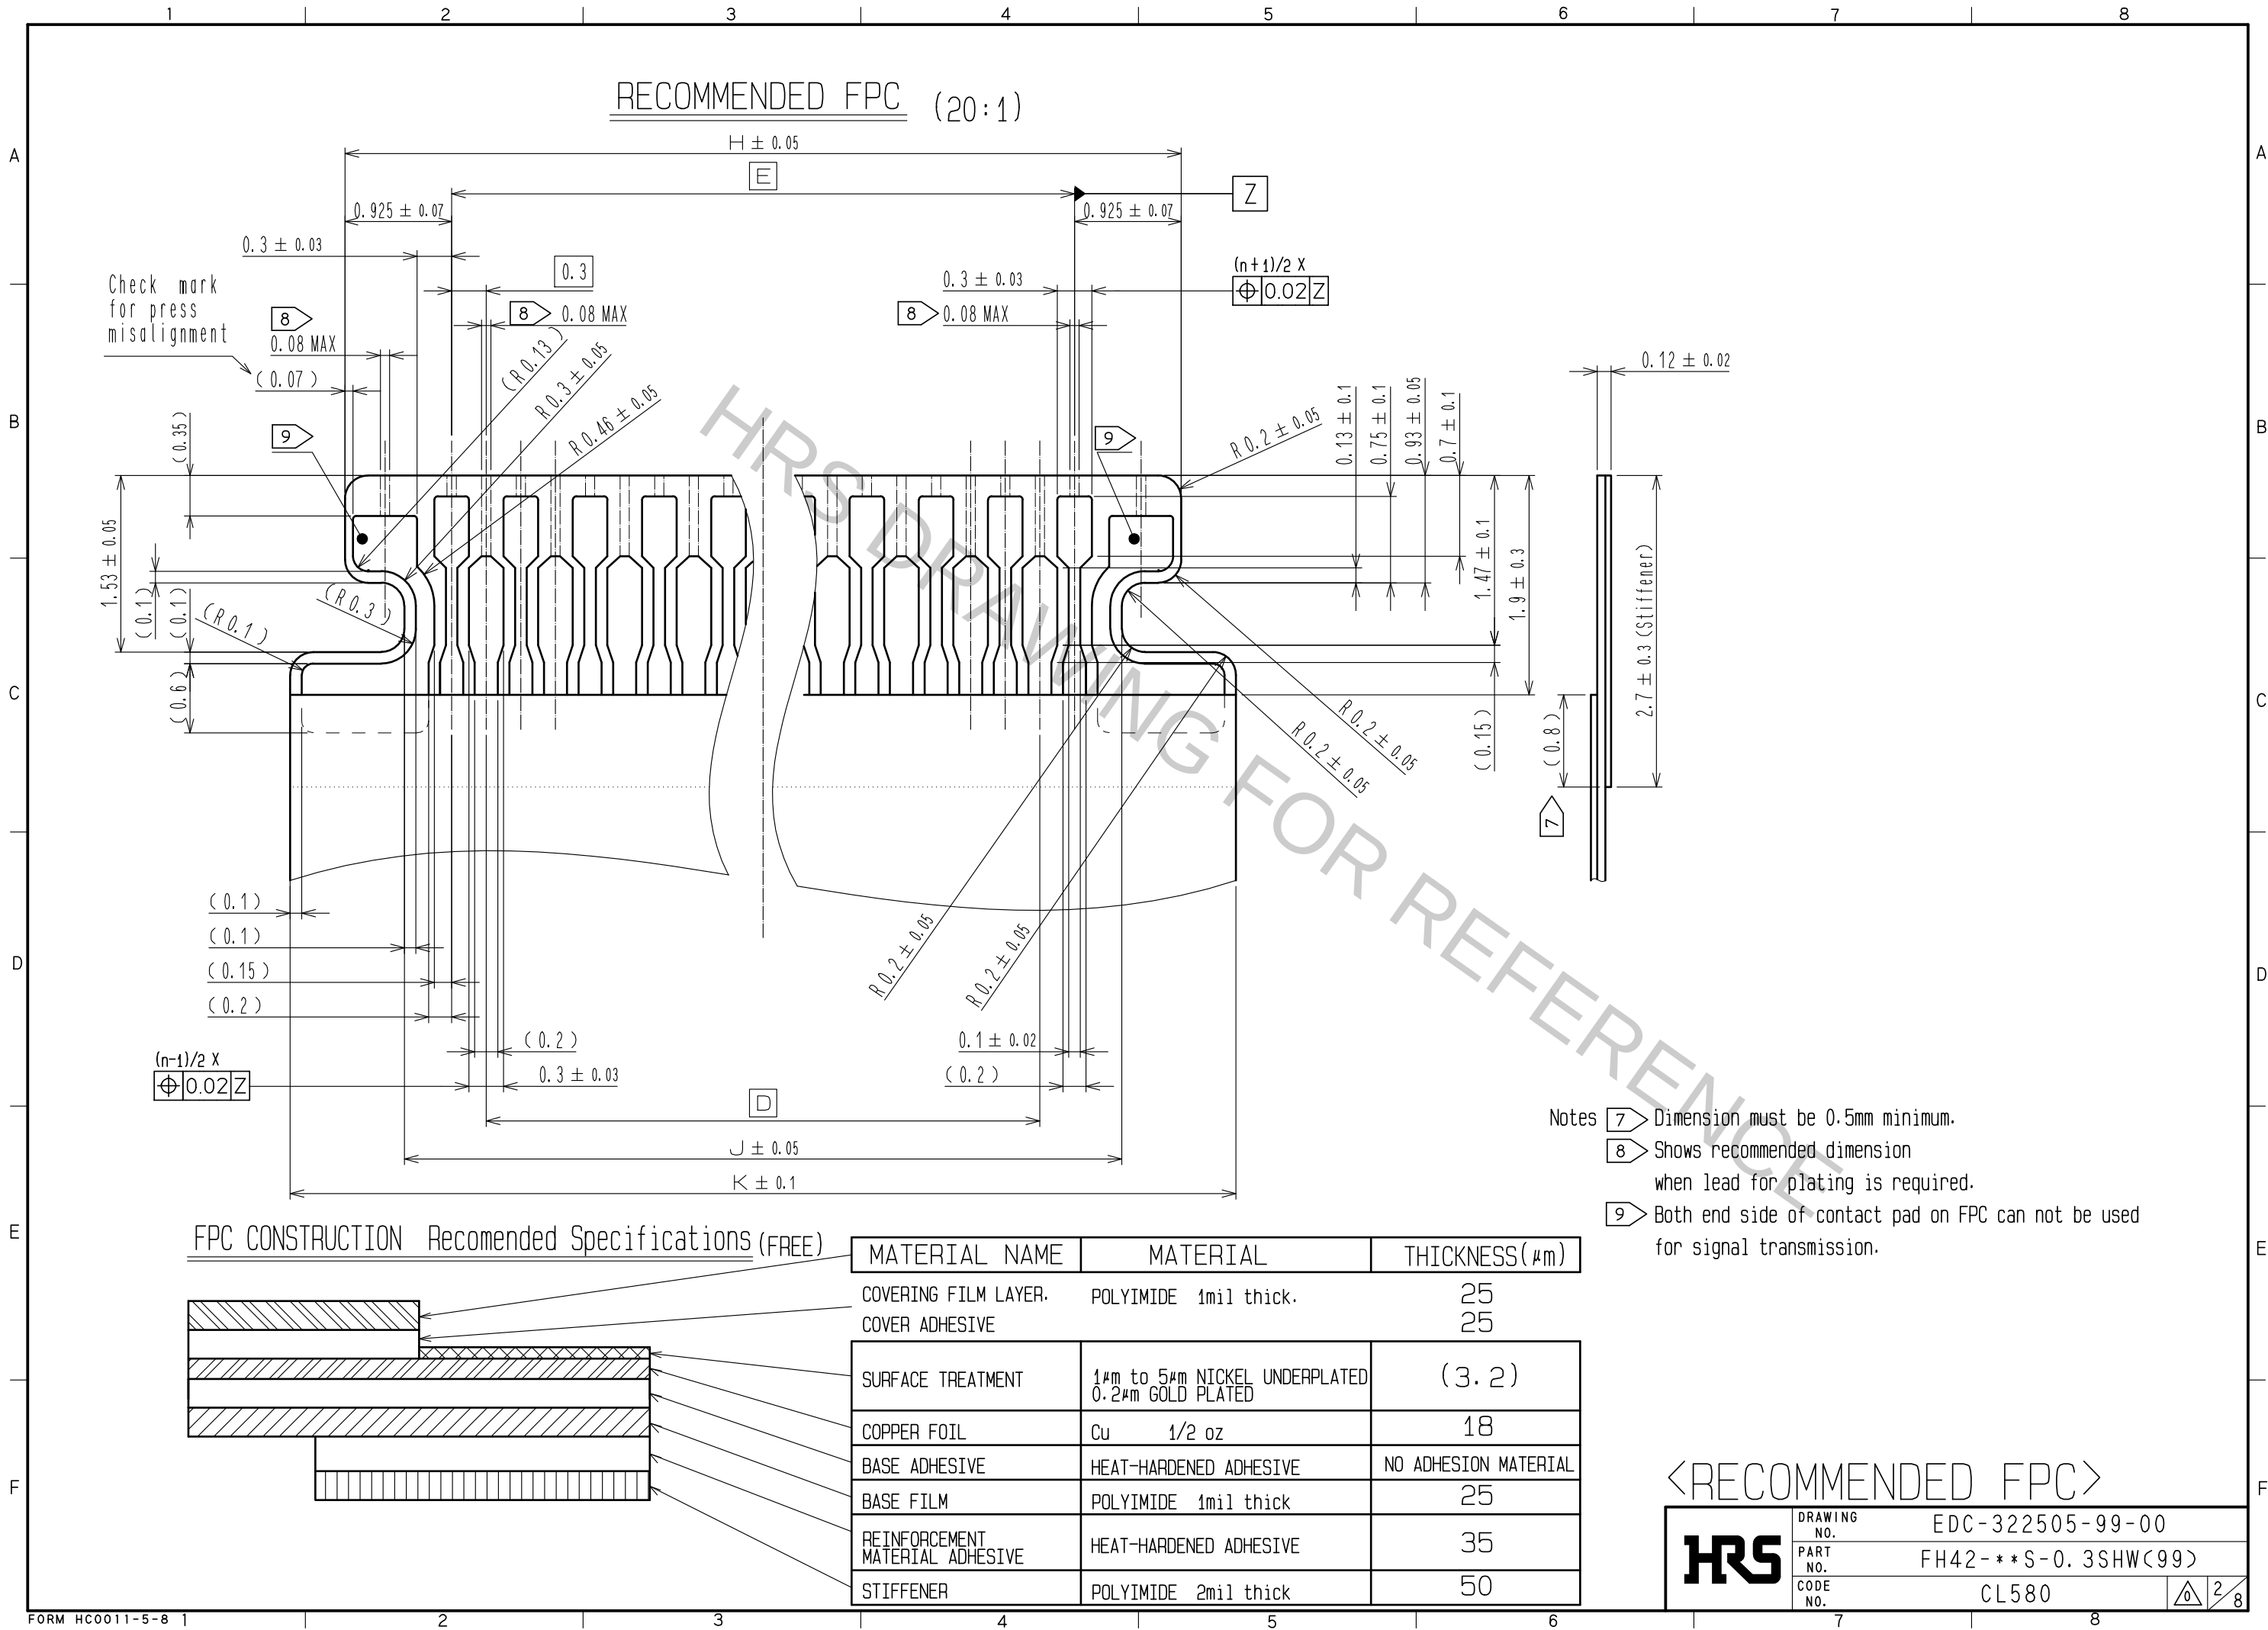


<RECOMMENDED FPC>

|     |             |                      |
|-----|-------------|----------------------|
| HRS | DRAWING NO. | EDC-322505-99-00     |
|     | PART NO.    | FH42-**-S-0.3SHW(99) |
|     | CODE NO.    | CL580                |
|     |             | 2/8                  |


Oct.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.  
In case that the application demands a high level of reliability, such as automotive,  
please contact a company representative for further information.

EMBOSSED CARRIER TAPE DIMENSION (2:1)


◎TAPE WIDTH TO 24mm MAX.

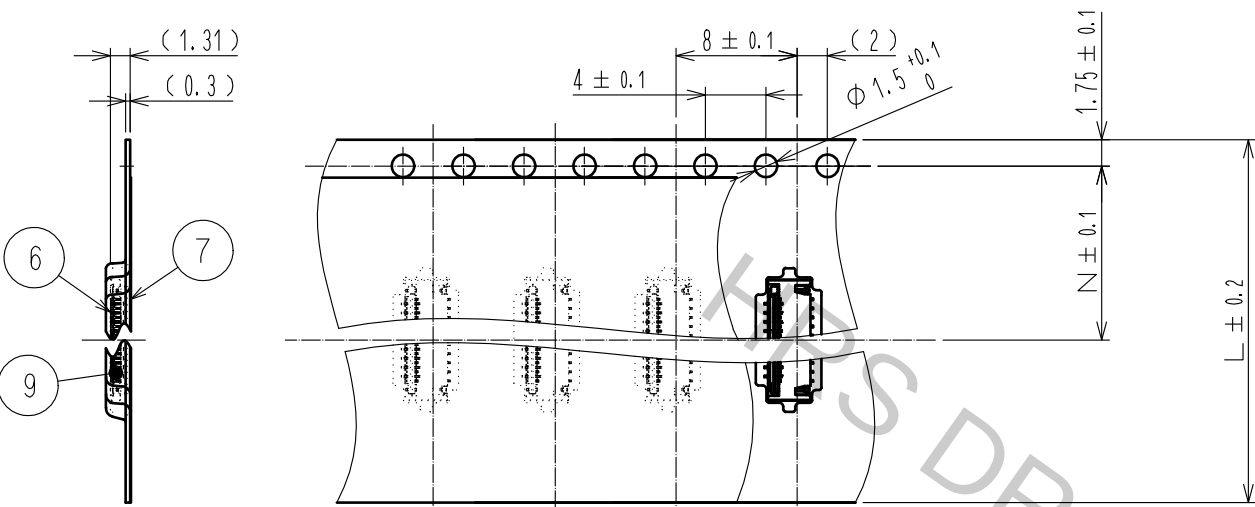


◎TAPE WIDTH TO 32mm MIN.

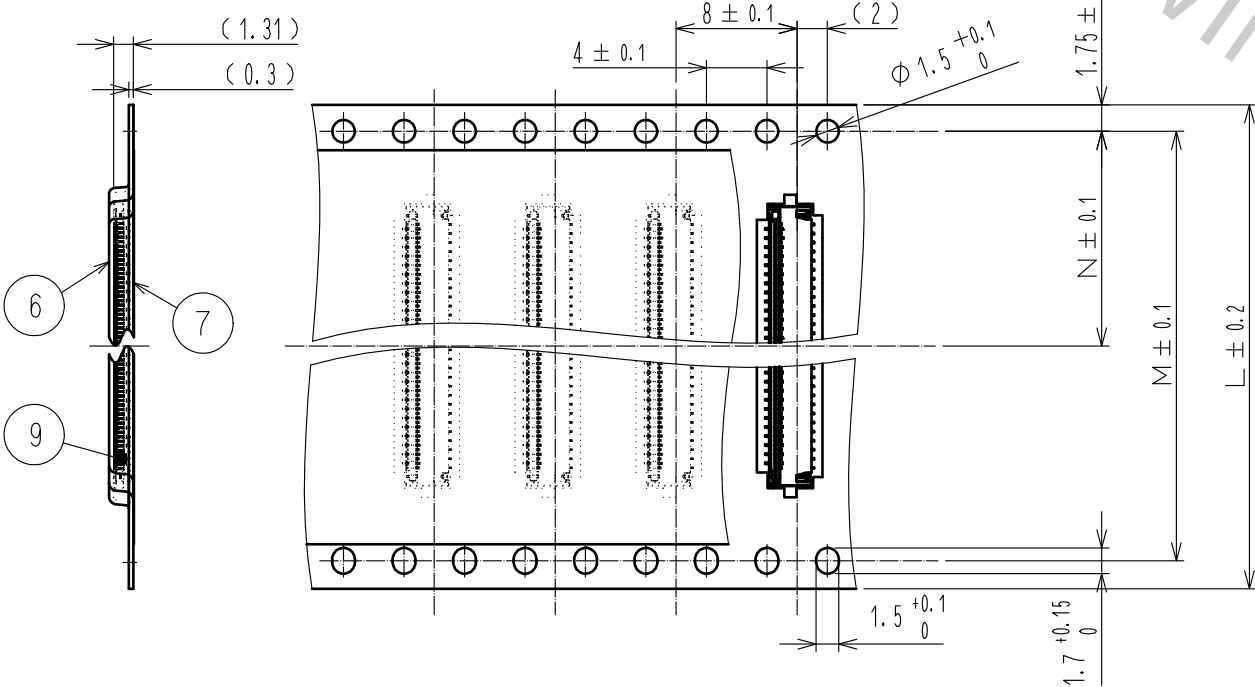

REEL DIMENSION (FREE)

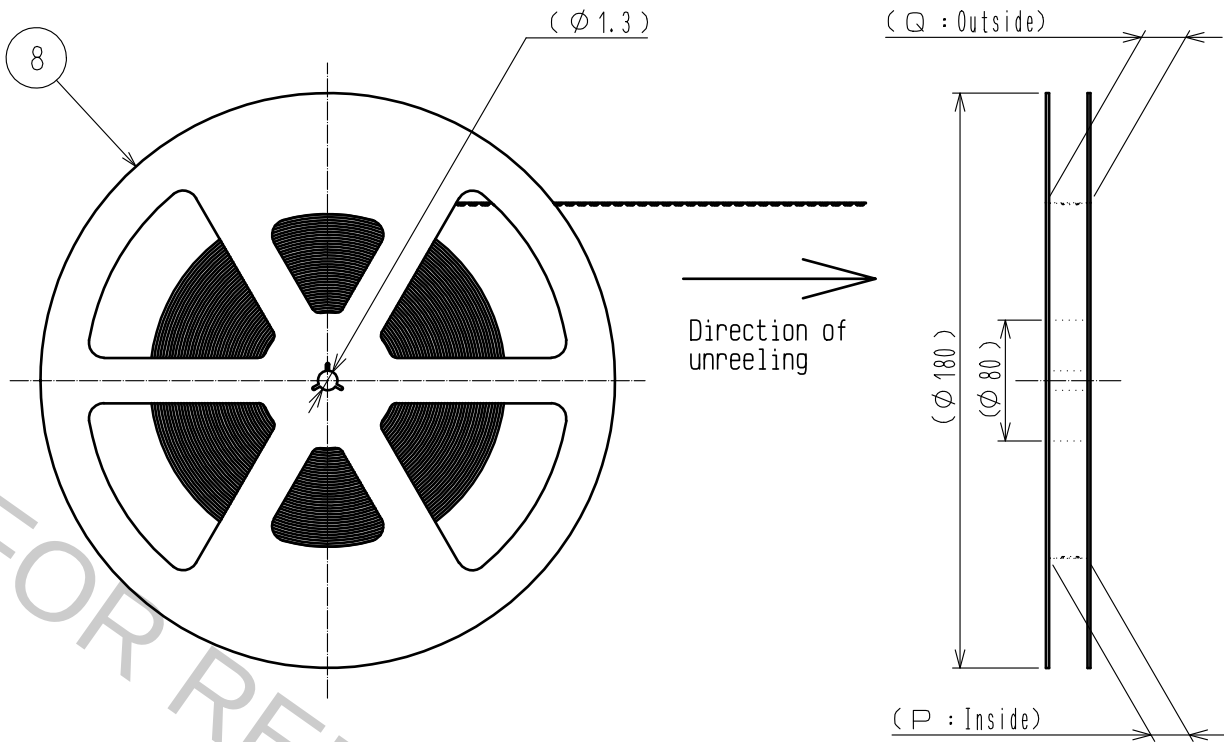

LEADER, TRAILER DIMENSION (FREE)

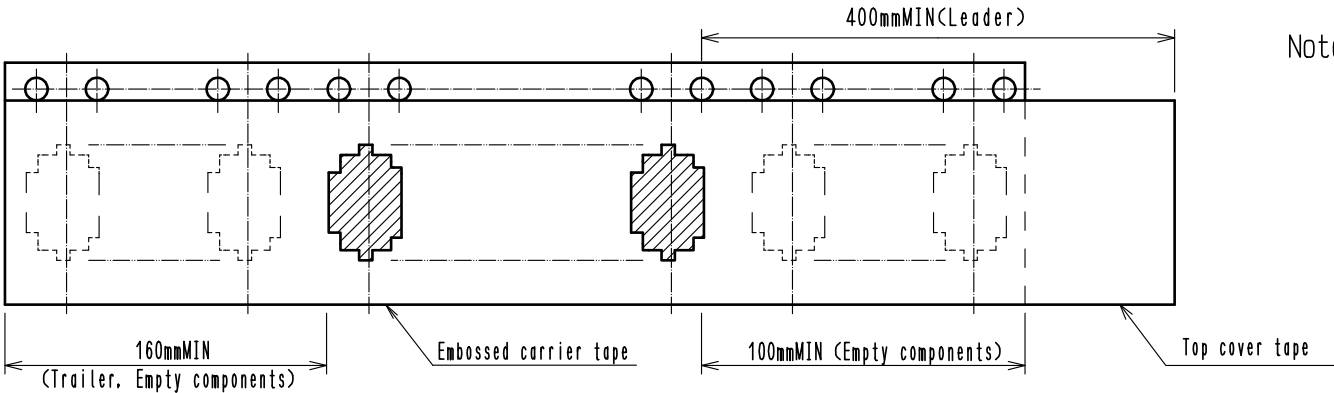

- Notes 10. Per reel : 500 connectors.  
11. Refer to JIS C 0806 and IEC 60286-3 (Packaging of components for automatic handling.)

<PACKING SPECIFICATIONS>

|     |             |                     |
|-----|-------------|---------------------|
| HRS | DRAWING NO. | EDC-322505-99-00    |
|     | PART NO.    | FH42-**S-0.3SHW(99) |
|     | CODE NO.    | CL580               |
|     |             | 3/8                 |

Oct.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.  
In case that the application demands a high level of reliability, such as automotive,  
please contact a company representative for further information.

| PART NUMBER         | CODE NUMBER     | NUMBER OF CONTACTS | DIMENSION OF CONNECTOR, FPC, PCB MOUNTING PATTERN AND METAL MASK |      |      |       |       |       |       |      | DIMENSION OF DRAWING FOR PACKING |   |      |      |      |
|---------------------|-----------------|--------------------|------------------------------------------------------------------|------|------|-------|-------|-------|-------|------|----------------------------------|---|------|------|------|
|                     |                 |                    | C                                                                | D    | E    | F     | G     | H     | J     | K    | L                                | N | M    | P    | Q    |
| FH42-7S-0.3SHW(99)  | CL580-2308-6-99 | 7                  | 4.2                                                              | 1.2  | 1.8  | 2.95  | 3.68  | 3.65  | 2.62  | 4.6  | 16                               | — | 7.5  | 17.4 | 21.4 |
| FH42-9S-0.3SHW(99)  | CL580-2315-0-99 | 9                  | 4.8                                                              | 1.8  | 2.4  | 3.55  | 4.28  | 4.25  | 3.22  | 5.2  | 16                               | — | 7.5  | 17.4 | 21.4 |
| FH42-11S-0.3SHW(99) | CL580-2306-0-99 | 11                 | 5.4                                                              | 2.4  | 3    | 4.15  | 4.88  | 4.85  | 3.82  | 5.8  | 16                               | — | 7.5  | 17.4 | 21.4 |
| FH42-15S-0.3SHW(99) | CL580-2302-0-99 | 15                 | 6.6                                                              | 3.6  | 4.2  | 5.35  | 6.08  | 6.05  | 5.02  | 7    | 16                               | — | 7.5  | 17.4 | 21.4 |
| FH42-19S-0.3SHW(99) | CL580-2305-8-99 | 19                 | 7.8                                                              | 4.8  | 5.4  | 6.55  | 7.28  | 7.25  | 6.22  | 8.2  | 24                               | — | 11.5 | 25.4 | 29.4 |
| FH42-23S-0.3SHW(99) | CL580-2309-9-99 | 23                 | 9                                                                | 6    | 6.6  | 7.75  | 8.48  | 8.45  | 7.42  | 9.4  | 24                               | — | 11.5 | 25.4 | 29.4 |
| FH42-31S-0.3SHW(99) | CL580-2301-7-99 | 31                 | 11.4                                                             | 8.4  | 9    | 10.15 | 10.88 | 10.85 | 9.82  | 11.8 | 24                               | — | 11.5 | 25.4 | 29.4 |
| FH42-39S-0.3SHW(99) | CL580-2311-0-99 | 39                 | 13.8                                                             | 10.8 | 11.4 | 12.55 | 13.28 | 13.25 | 12.22 | 14.2 | 24                               | — | 11.5 | 25.4 | 29.4 |

<DIMENSION TABLE>

|            |             |                     |  |  |  |  |  |  |  |  |  |     |  |  |  |
|------------|-------------|---------------------|--|--|--|--|--|--|--|--|--|-----|--|--|--|
| <b>HRS</b> | DRAWING NO. | EDC-322505-99-00    |  |  |  |  |  |  |  |  |  |     |  |  |  |
|            | PART NO.    | FH42-**S-0.3SHW(99) |  |  |  |  |  |  |  |  |  |     |  |  |  |
|            | CODE NO.    | CL580               |  |  |  |  |  |  |  |  |  | 4/8 |  |  |  |

Oct.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.  
In case that the application demands a high level of reliability, such as automotive,  
please contact a company representative for further information.

This connector features small, thin and back flip design, requiring delicate and careful handling.  
To prevent connector/FPC breakage and contact failure (mating failure, FPC pattern breakage, etc),  
read through the instructions shown below and handle the connector properly.  
Each values indicating here are for reference and may differ from standard value.


[Operation and Precautions]

1. Initial condition


Actuator does not have to be operated before inserting FPC,  
as the connector is delivered with the actuator opened.

[Caution]

- Do not close the actuator before inserting FPC.  
Closing the actuator without FPC could make the contact  
gap smaller, which could increase the FPC insertion force.
- Do not insert FPC or operate actuator before mounting.

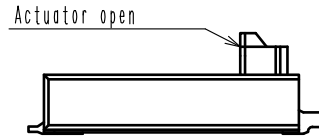

- Open when delivered -

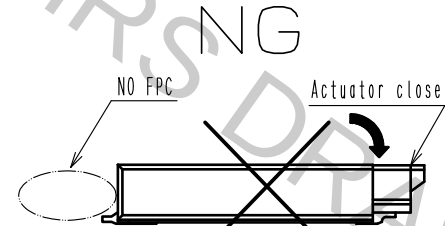


- Incorrect operation -

2. How to insert FPC


This connector has contacts on the top. Insert the FPC with the exposed conductors face up.

[Caution]


- Insert the FPC with the actuator opened.
- Do not insert the FPC with the conductor surface face down.
- Insert the FPC into the connector opening horizontally to the PCB plane.  
Insert it properly to the very end.
- Do not twist the FPC to up and down, right and left or an angle.

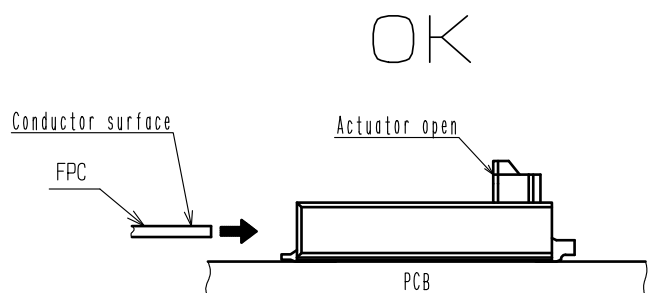


- Correct operation -

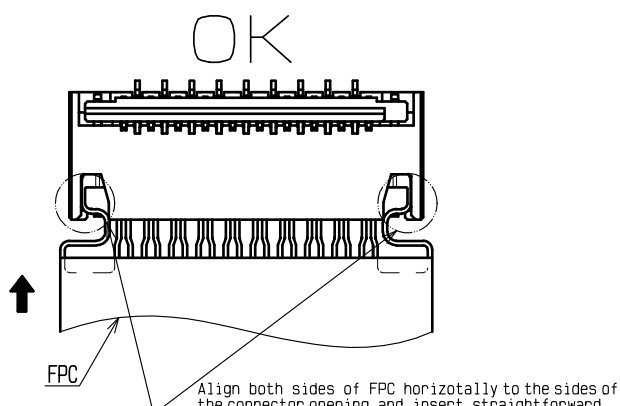


- Correct operation -

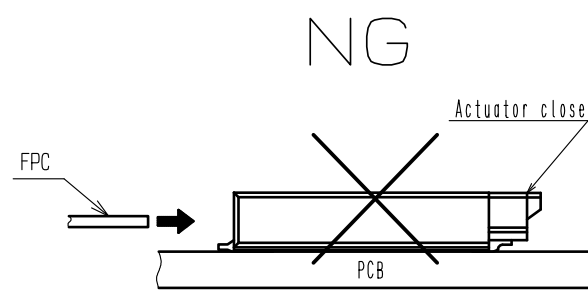


- Incorrect operation -

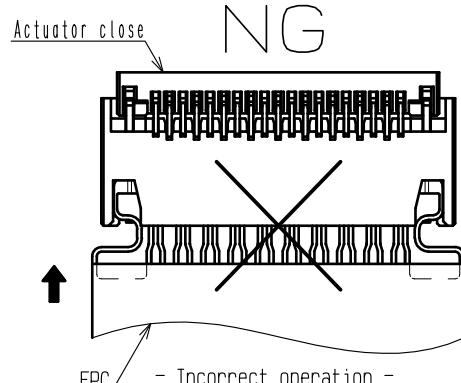

- Incorrect operation -

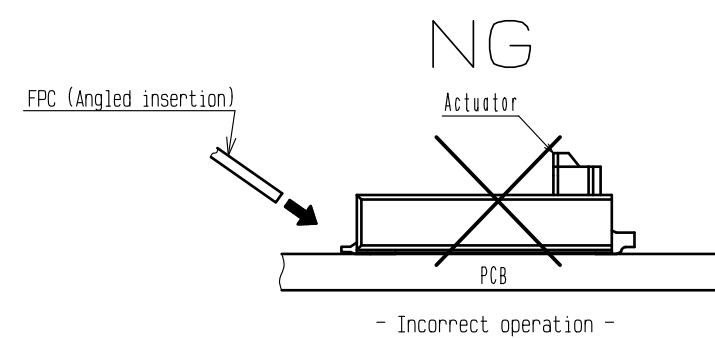

- Incorrect operation -

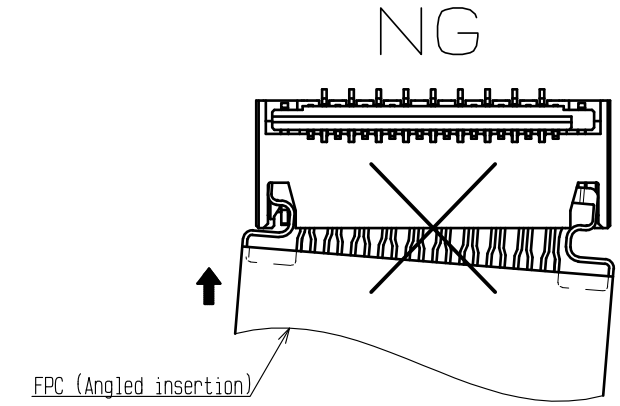


- Incorrect operation -

3. FPC insertion check


Metal fittings guide the FPC tabs to the correct position.  
Make sure that the FPC tabs are located in proper position as shown in the figure below after FPC insertion.

[Caution]


- Do not insert the FPC at an angle and/or stop it before insertion is complete.

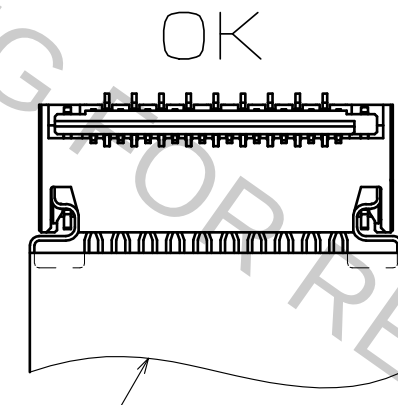


- Correct assembled -

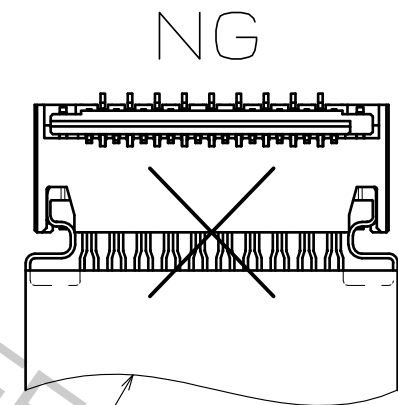

- Incorrect assembled -  
(Insufficiently inserted)

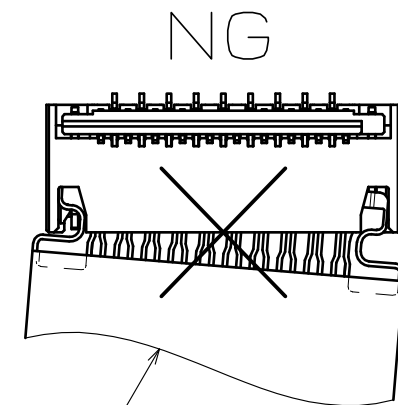


- Incorrect assembled -  
(Angle insertion)

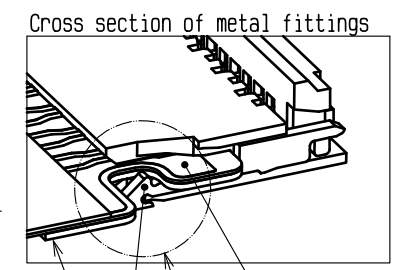


Metal fittings

Hook of the metal fittings fits in FPC cutout.

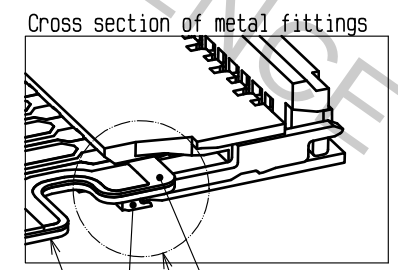

Metal fittings

FPC TAB run on the metal fittings.

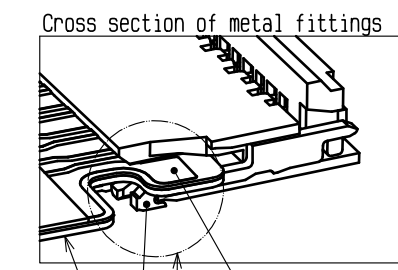

Metal fittings

FPC TAB run on the metal fittings.

<INSTRUCTION MANUAL (1)>



|             |                     |
|-------------|---------------------|
| DRAWING NO. | EDC-322505-99-00    |
| PART NO.    | FH42-**S-0.3SHW(99) |
| CODE NO.    | CL580               |








Oct.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.  
In case that the application demands a high level of reliability, such as automotive,  
please contact a company representative for further information.

4. How to lock

Apply load to rotate the actuator by 90 degree after inserting the FPC.

[Caution]

- The actuator rotates around the rotational axis as shown below.
- Do not rotate the actuator to the counter direction.
- Do not pinch or pick the actuator to lift.
- Operate the actuator by hand without using sharp tool such as Tweezers.
- To close the actuator, operate at the center of the actuator.
- To close the actuator, do not operate the actuator at one end only.
- Do not apply excess force to the housing during the operation.

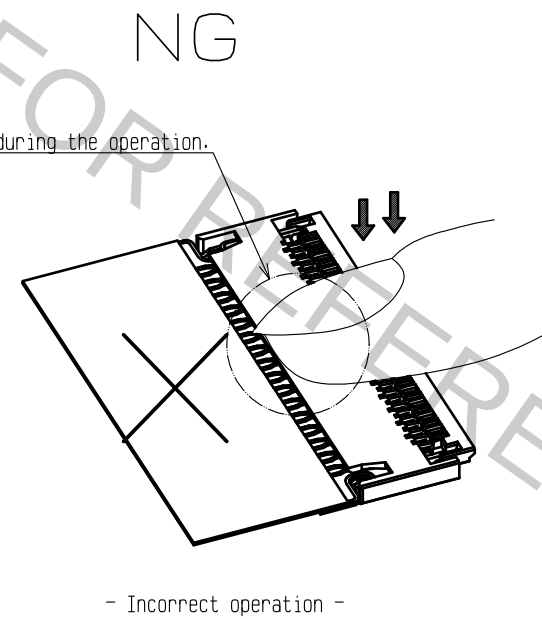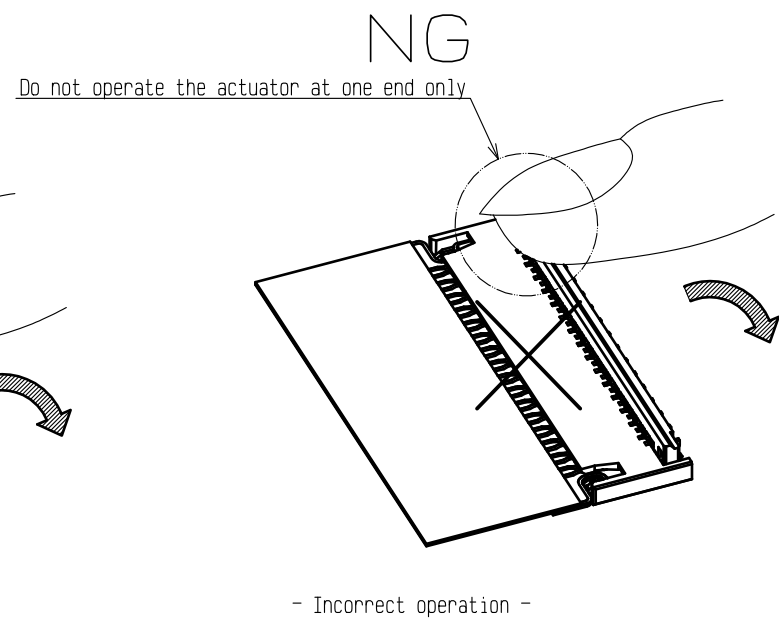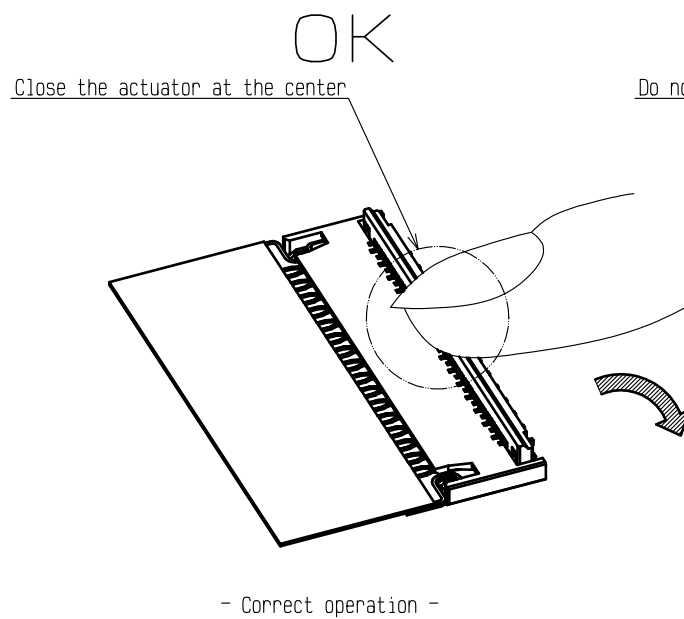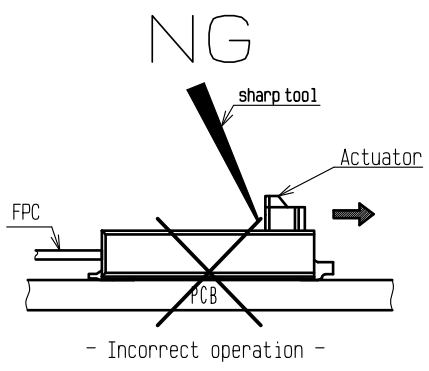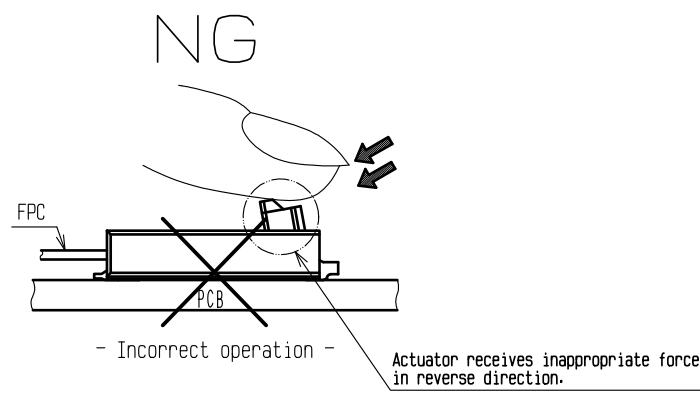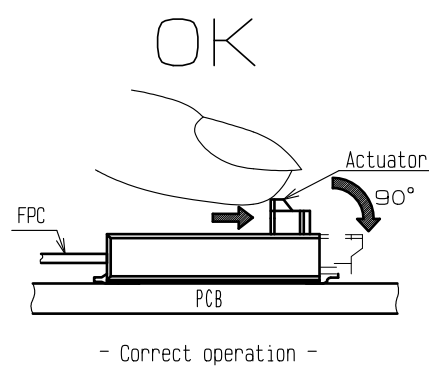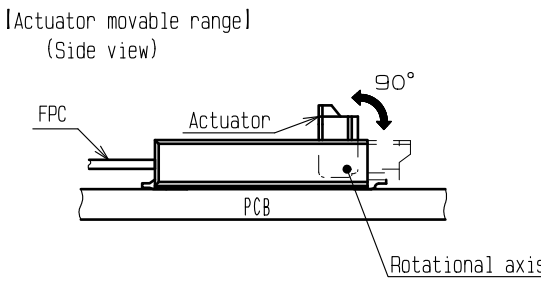

<INSTRUCTION MANUAL (2)>

|     |             |                     |
|-----|-------------|---------------------|
| HRS | DRAWING NO. | EDC-322505-99-00    |
|     | PART NO.    | FH42-**S-0.3SHW(99) |
|     | CODE NO.    | CL580               |
|     |             | 6/8                 |







Oct.1.2018 Copyright 2018 HIROSE ELECTRIC CO., LTD. All Rights Reserved.  
In case that the application demands a high level of reliability, such as automotive,  
please contact a company representative for further information.

5. How to unlock

Slowly flip up the actuator to release the lock.


[Caution]

- The actuator is opened up to the movable limit, 90 degree.  
Do not open the actuator beyond the specified degree or  
apply excess force to the actuator.
- Open the actuator right above.  
Do not attempt to open further or to open it by applying horizontal force as this may cause its damage.
- Please note that the connector is back flip style connector,  
and the opening for FPC insertion and the actuator face  
the opposite direction. Do not try to lift the actuator at the FPC  
insertion opening side.
- Operate the actuator by hand without using sharp tool such as Tweezers.
- To open the actuator, operate at the center of the actuator.
- To open the actuator, do not operate the actuator at one end only.

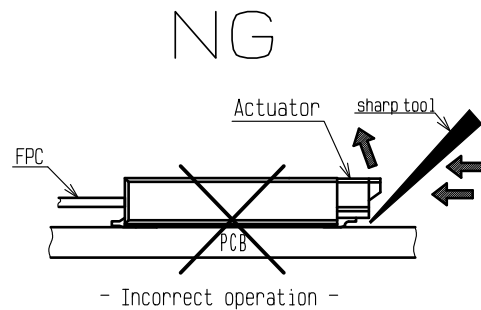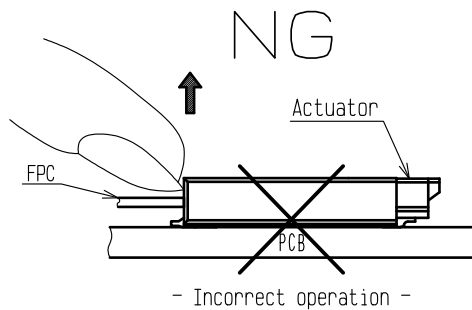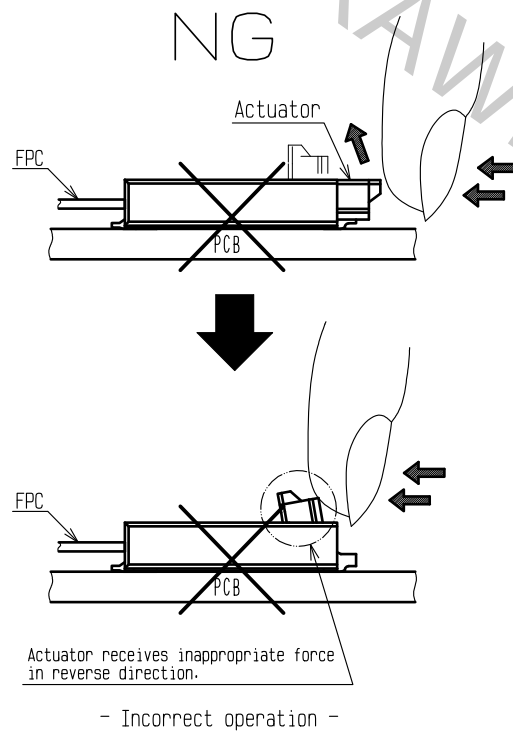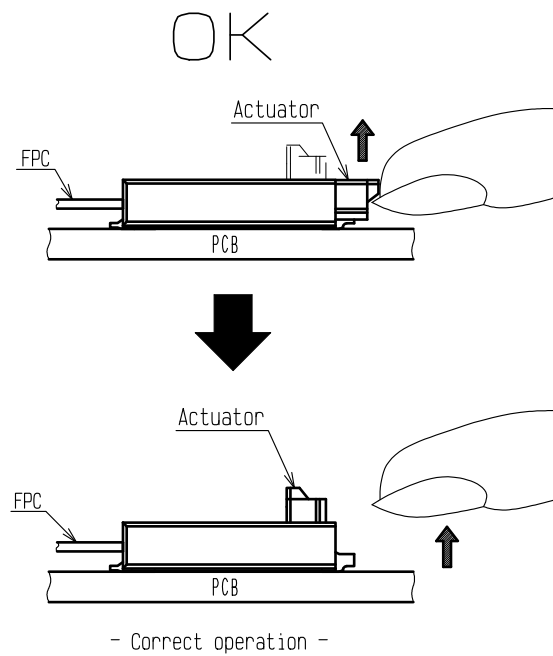


Open the actuator at the center

OK

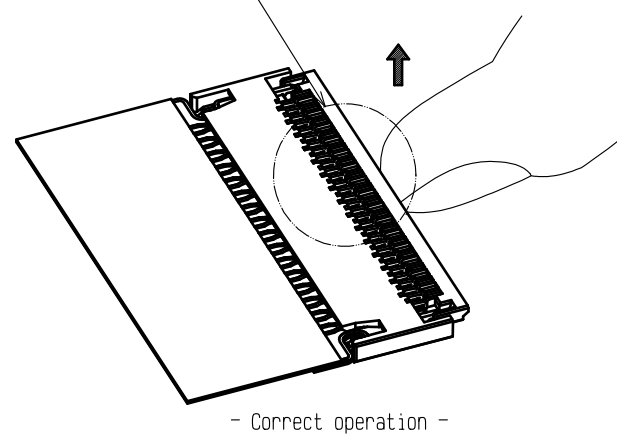

Do not operate the actuator at one end only

NG






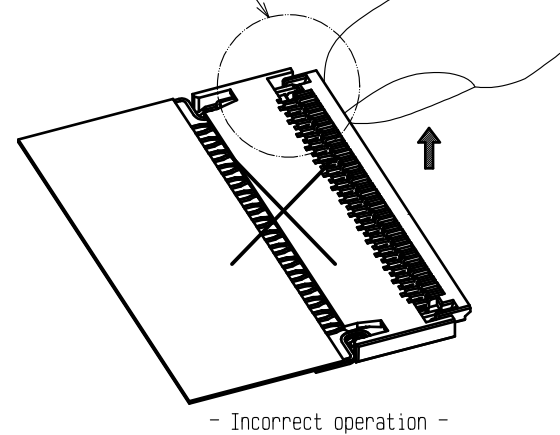


6. How to remove FPC

After rotating the actuator to the fully opened position carefully withdraw the FPC  
pulling out at 30 degree angle to the PCB mounting surface.

[Caution]

- This connector has a temporary FPC holding structure with metal fittings.
- For FPC removal, do not pull out the FPC horizontally.
- Do not attempt to pull the FPC without unlocking the actuator.

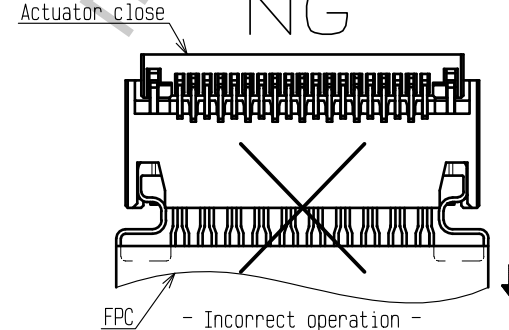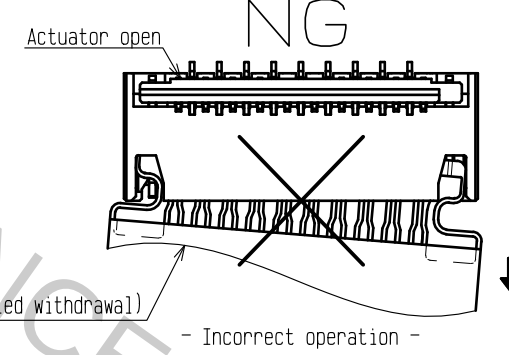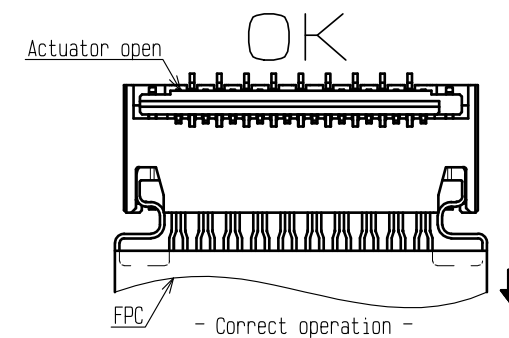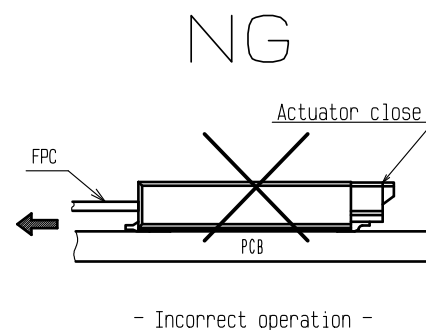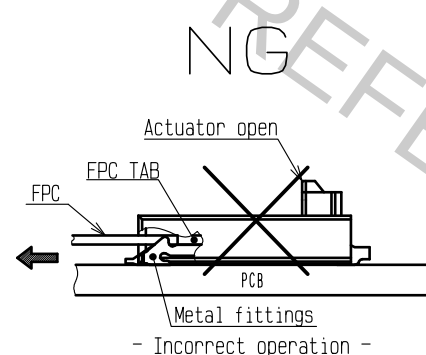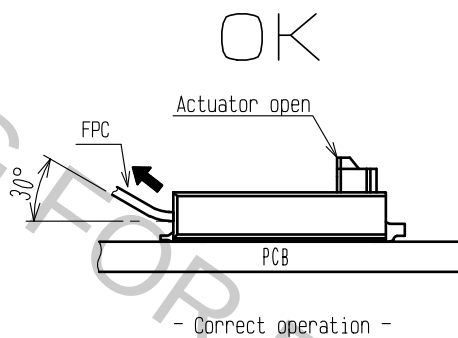

<INSTRUCTION MANUAL (3)>

|     |             |                     |
|-----|-------------|---------------------|
| HRS | DRAWING NO. | EDC-322505-99-00    |
|     | PART NO.    | FH42-**S-0.3SHW(99) |
|     | CODE NO.    | CL580               |
|     |             | 7/8                 |

[Precautions for design]


1. During FPC wiring, ensure that stress is not applied directly to the connector.  
Do not bend the FPC excessively near the connector during use, or it may cause contact failure or FPC breakage.  
Stabilizing the FPC is recommended.
2. Keep a sufficient FPC insertion space in the stage of the layout in order to avoid incorrect FPC insertion.  
Appropriate FPC length and component layout are recommended for assembly ease.  
Too short FPC length makes assembly difficult.
3. Follow the recommended PCB mounting pattern, stencil opening design and the FPC design.
4. Make adjustments with the FPC manufacturer for FPC bending performance and wire breakage.
5. Keep spaces for the actuator movement and its operation for PCB design and component layout.

[FPC routing after connection]

Depending on a FPC rounding, a load is applied to the connector, and a contact failure may occur.  
To prevent a failure, take the following notes into a consideration during mechanism design.

[Caution]

- Avoid applying forces to FPC in vertical or horizontal directions.  
In addition, avoid pulling up and down on the FPC.
- When fixing FPC after FPC cabling, avoid pulling FPC and route the wire FPC with slack.  
In this regard, the stiffener is parallel to the PCB.
- Do not mount other components touching to the FPC underneath the FPC stiffener.

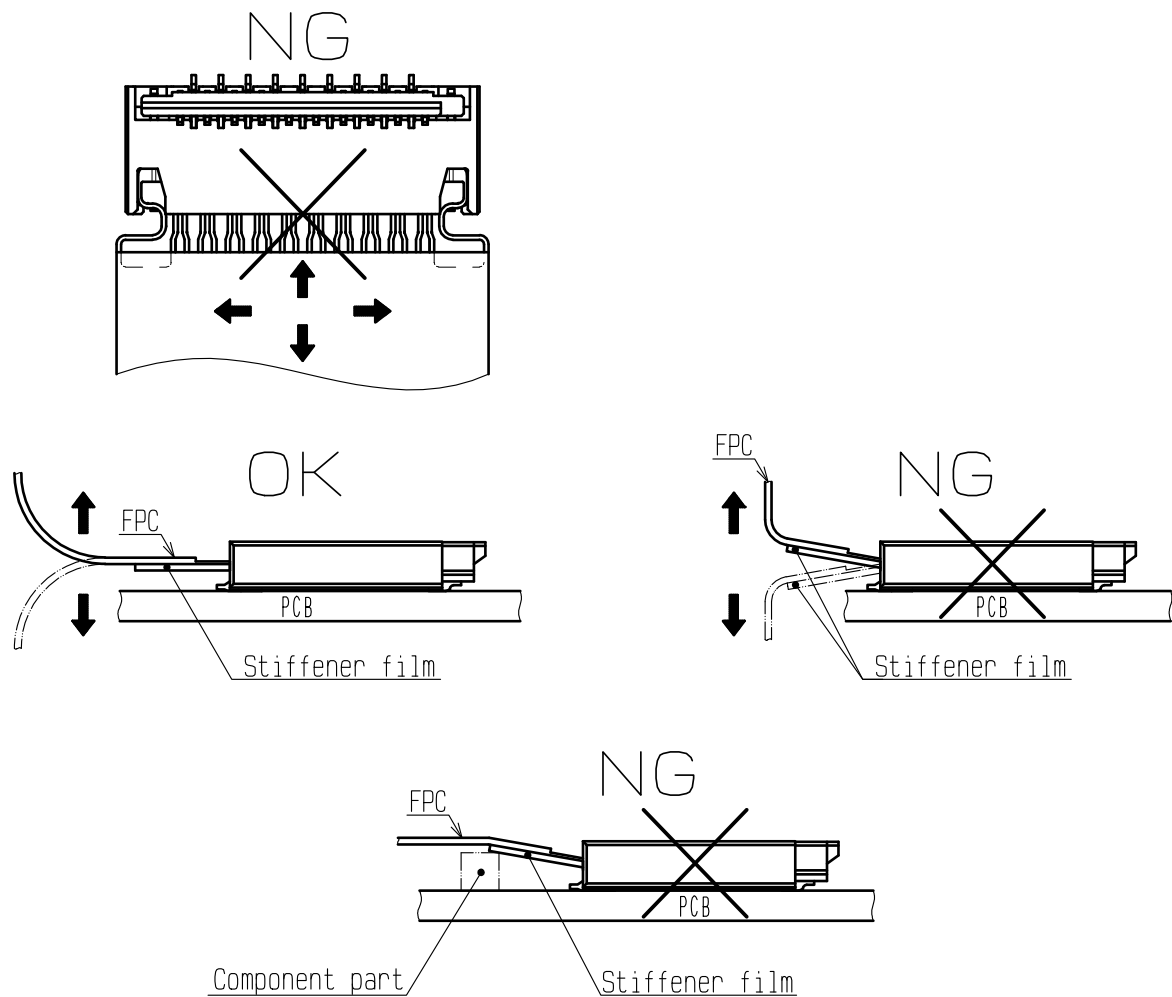


[Instructions for mounting on the PCB]

- ◆ Warp of PCB  
Minimize warp of the PCB as much as possible.  
Lead co-planarity including reinforced metal fittings is 0.08 mm or less.  
Too much warp of the PCB may result in a soldering failure.
- ◆ Flexible board design  
Please make sure to put a stiffener on the backside of the flexible board.  
We recommend a glass epoxy material with the thickness of 0.3mm MIN.
- ◆ Load to Connector  
Do not add 0.5N or greater external force when unreel or pick and place the connector etc.  
or it may get broken.  
In addition, do not insert the FPC or operate the connector before mounting.
- ◆ Reflow temperature profile  
Apply reflow temperature profile within the specified conditions.  
In individual applications, the actual temperature may vary,  
depending on solder paste type, volume/thickness and PCB size/thickness.  
Consult your solder paste and equipment manufacturer for specific recommendations.

[INSTRUCTIONS FOR PCB HANDLING AFTER MOUNTING THE CONNECTOR]

- ◆ Load to PCB  
- Splitting a large PCB into several pieces  
- Screwing the PCB  
Avoid the handling described above so that no force is exerted on the PCB during the assembly process.  
Otherwise, the connector may become defective.
- ◆ Amount of Warp  
The warp of a 100mm wide PCB should be 0.5 mm or less.  
The warp of PCB suffers stress on connector and the connector may become defective.

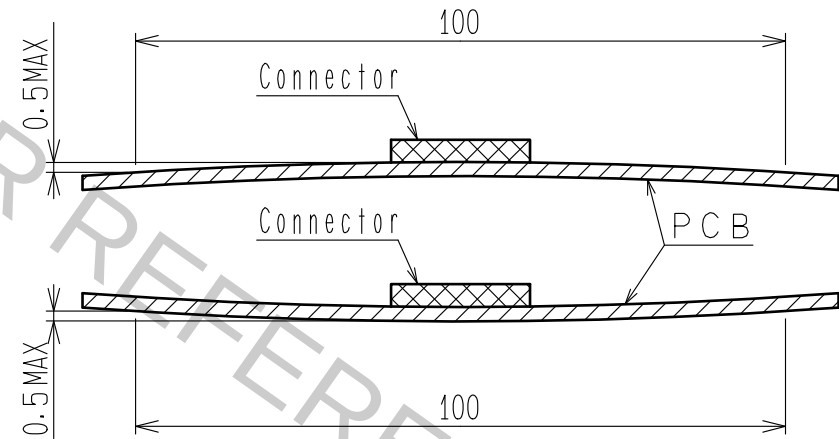

[Other instructions]

- ◆ Instructions on manual soldering  
Follow the instructions shown below when soldering the connector manually during repair work, etc.
- 1. Do not perform manual soldering with the FPC inserted into the connector.
- 2. Do not heat the connector excessively. Be very careful not to let the soldering iron contact any parts other than connector leads. Otherwise, the connector may be deformed or melt.
- 3. Do not supply excessive solder (or flux).  
If excessive solder (or flux) is supplied on the terminals, solder or flux may adhere to the contacts or rotating parts of the actuator, resulting in poor contact or a rotation failure of the actuator.  
Supplying excessive solder to the metal fittings may hinder actuator rotation, resulting in breakage of the connector.

<INSTRUCTION MANUAL (4)>

|     |             |                     |
|-----|-------------|---------------------|
| HRS | DRAWING NO. | EDC-322505-99-00    |
|     | PART NO.    | FH42-**S-0.3SHW(99) |
|     | CODE NO.    | CL580               |
|     |             | 8/8                 |