

AT PRESENT THIS IS THE ONLY ADDITIONAL  
DATA AVAILABLE.

## **APS — OPERATING INSTRUCTIONS**

### **UNPACKING**

Remove the Automatic Printer Sharer from the protective foam, and unfold the flying lead.

### **INSTALLATION**

- 1) Switch printer off.
- 2) Unplug the printer cable from the printer (or buffer input, if fitted).
- 3) Plug the flying lead of the Automatic Printer Sharer into the printer (with the other end plugged into the APS). If a buffer is already in use, the flying lead is unnecessary and the APS should be plugged directly into the buffer.
- 4) Plug the printer cables from each of the P.C.'s into the sockets on the APS face marked "P.C. LEADS".
- 5) Switch on printer.
- 6) Turn the printer "ON-LINE".

### **OPERATION**

The first computer to send data to the printer will have sole use of the APS, thus blocking the other P.C. This will continue until transmission of data has completed, and then for a further 10 seconds. Only then will the sharer be available for the second P.C.

### **POINTS TO NOTE**

- 1) When installing the Automatic Printer Sharer, make sure that the connections of each end are properly seated and that the bail-locks are locked on.
- 2) The Automatic Printer Sharer can source its power requirements from the P.C.'S or the printer, even through the buffer if the latter is fitted.