 


Quick-start guide for digital TV receiver



 
Audio Description
TV narration for people
with sight problems

1a Connecting to a TV with a SCART socket

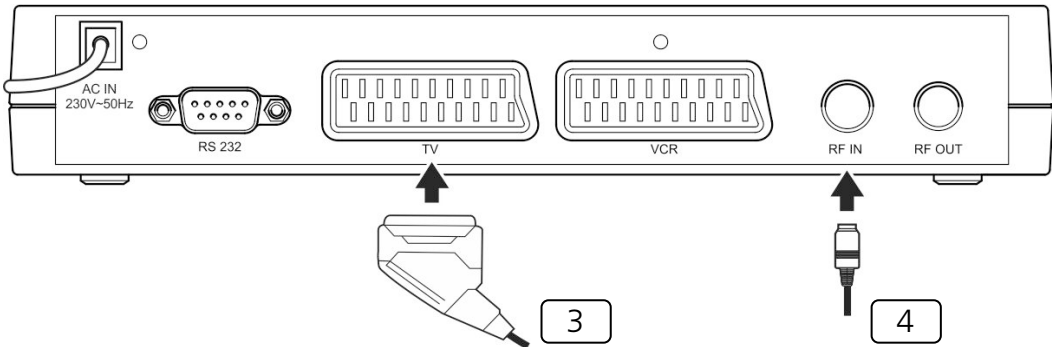


- 1 Make sure your TV and any other equipment you are connecting is switched off.
- 2 Unplug your TV from the wall socket.
- 3 Take the aerial out of your TV and connect it to the 'RF IN' socket on the back panel of the digital receiver.
- 4 Connect the SCART cable that came with the receiver between the TV socket on the back panel of your receiver and the SCART socket on your TV.
- 5 Switch on your receiver at the wall socket. The green light on the front panel will come on.
- 6 Switch on your TV.

In the box

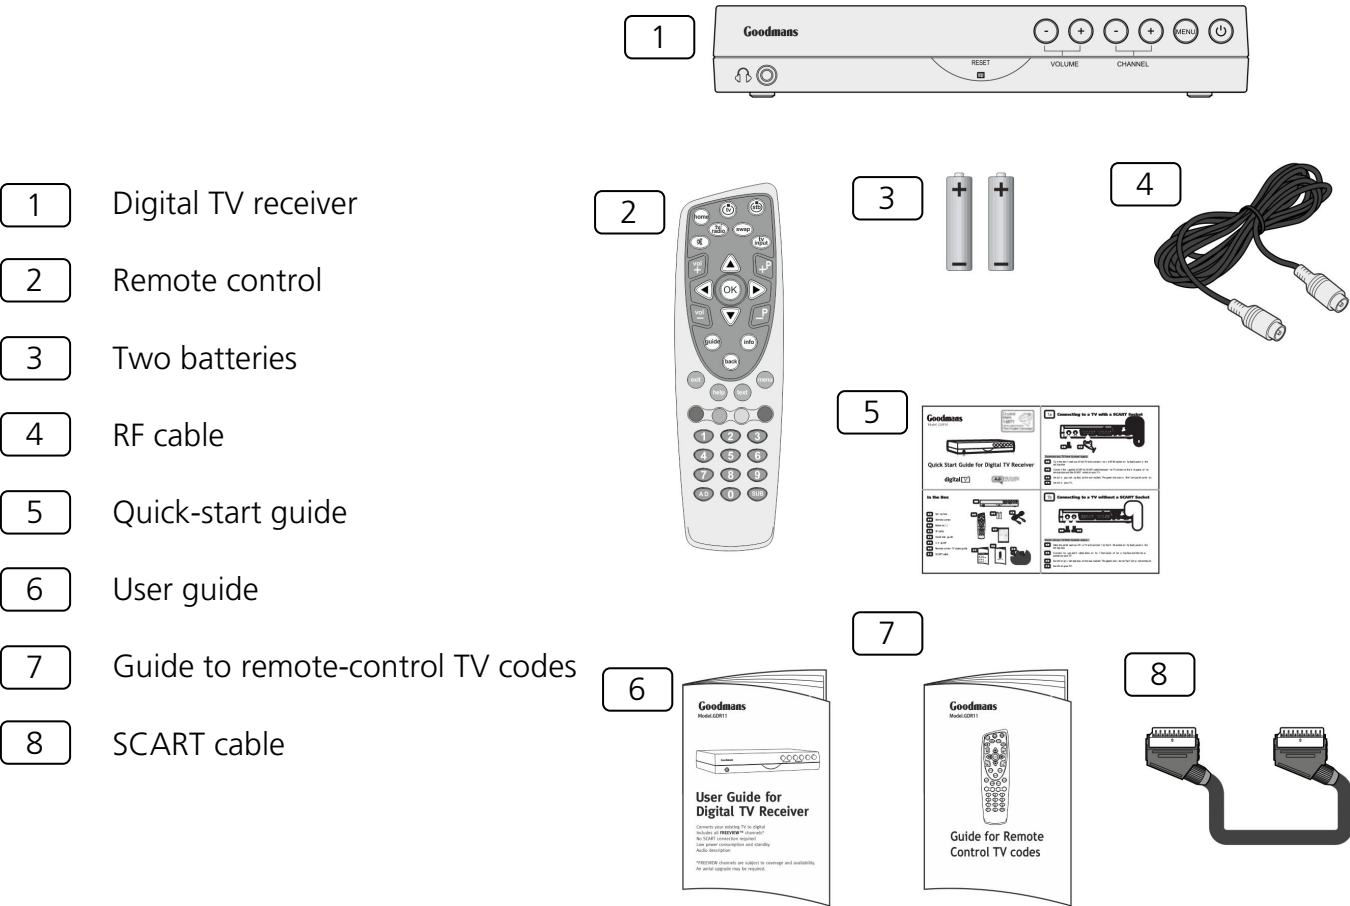


 1b Connecting to a TV without a SCART socket

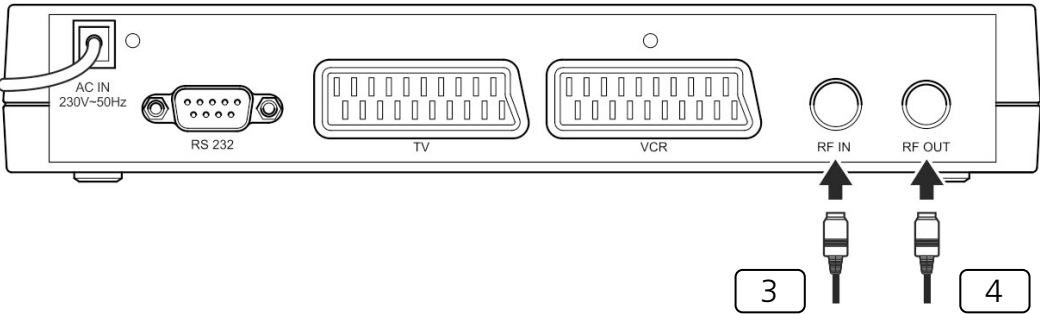

- 1 Make sure your TV and any other equipment you are connecting is switched off.
- 2 Unplug your TV from the wall socket.
- 3 Take the aerial lead out of your TV and connect it to the RF IN socket on the back panel of the receiver.
- 4 Connect the RF cable that came with your receiver between the 'RF OUT' socket on the receiver and the aerial socket on your TV.
- 5 Switch on your digital receiver at the wall socket. The green light on the front panel will come on.
- 6 Switch on your TV.
- 7 You will now need to tune a spare channel on your TV to the digital receiver. The digital receiver automatically uses UHF channel 18. For more information on channel installation, please read the user guide.

 
2 **Putting batteries in the remote control**

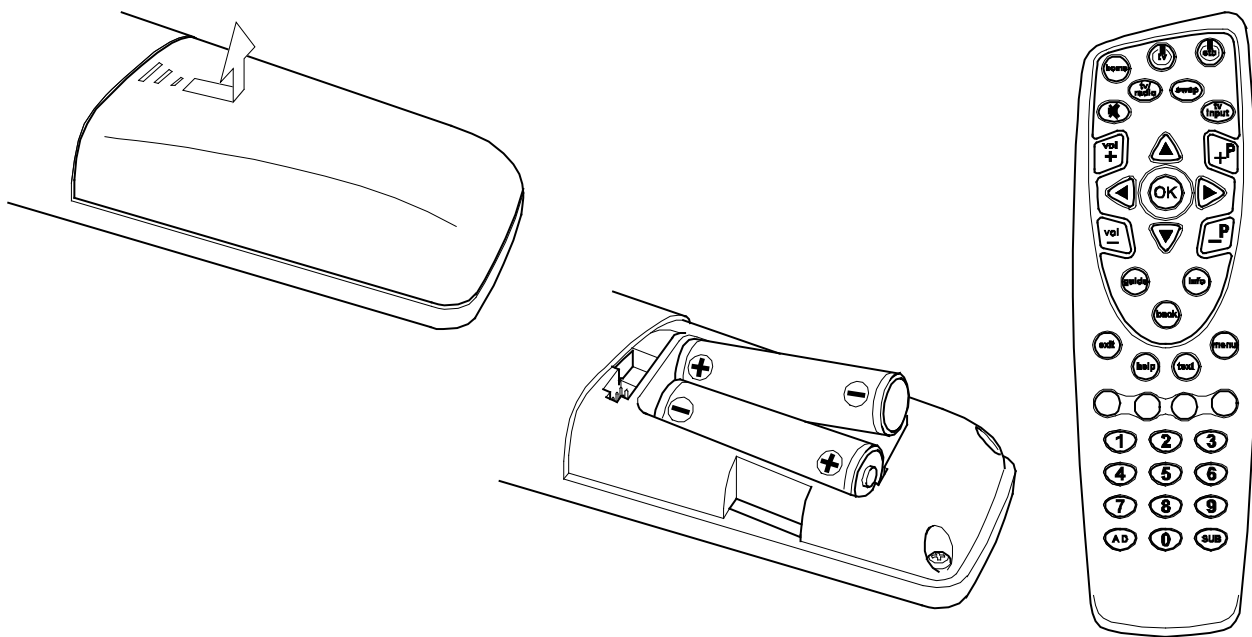

- 1 Open the remote-control battery cover on the back of the remote control.
- 2 Put the batteries (included with your receiver's remote control) as shown on the diagram above.
- 3 Put the battery cover back on.

4 **First-time installation**

 The first time you switch on your digital receiver, you will see a screen like the one shown below.

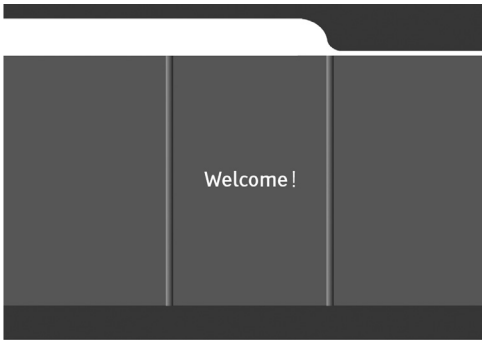

(You may need to press 'AV' on your TV remote control before you see the welcome screen.)

- You need to select the type of TV screen you have by pressing the button on your remote control.
- Press and wait for the digital receiver to start tuning automatically. This may take a few minutes.
- When the scan has finished, the digital receiver will show the message 'installation completed'.

5 **Channels and volume**

To change the volume

- To increase the volume, press the '**Vol+**' button.
- To decrease the volume, press the '**Vol-**' button.

To select a specific channel

- To enter the channel number, press the '**0**' to '**9**' number buttons.

To change the channel

- Press the '**P+**' button to move up a channel.
- Press the '**P-**' button to move down a channel.

3 **Using your remote control**

- | | |
|---|---|
| Goes to the first channel in your list (usually BBC 1) | Enters and exits the electronic programme guide (EPG) |
| Switches your TV on or off | Gives programme information on the TV screen (This button also shows your favourite channels list when you are on the channel list screen.) |
| Switches the receiver on and off (onto standby) | Goes back to the previous screen you were on |
| Switches between TV and radio | Exits the menu system and goes back to the last programme you were watching |
| Switches between the channel you're watching and the channel you were previously watching | Enters and exits the menu screen |
| Mutes the receiver volume (it can also mute your TV if you have set up this feature) | Enters and exits the help screen |
| Selects the channel the receiver is set up on (if you have set up this feature) | Gives digital teletext |
| Increases or reduces the receiver volume. They can also increase or reduce your TV volume (if you have set up this feature) | Changes or goes to different options when on the digital text pages |
| Moves around the on-screen menus | Chooses channel numbers and numbers on menus that relate to different options |
| Goes up and down the channel list | Switches the audio description on and off |
| Selects options on the on-screen menu (This button also shows the channel list if you press it while watching TV.) | Switches subtitles on and off |

6 **Audio description and subtitles**

This receiver has audio description and subtitle services. Many programmes have audio description and subtitles available, for people with hearing or sight problems.

Press the 'Info' button at any time to view the information display. If the or icons are displayed, audio description or subtitles are available for the current programme.

Audio descriptions

- To switch on audio description, press the button. You will hear a high-pitched beep if AD is available.
- To switch off audio description, press the button. You will hear a low-pitched beep.

For more information on audio descriptions, please read the user guide.

Subtitles

- Press the button to turn on subtitles. Your TV will display for a short time.
- Press the button to turn off subtitles. Your TV will display for a short time.

For more information on subtitles, please read the user guide.