CooCox

	Home > CoLink	Ξx				
Home Cookie	CoLinkEx					CoLinkEx Guide
CoIDE CoOS Colink / CoLinkEx CoFlash CoSmart	ARM Cortex M d CooCox CoLink Note: If you w	evices, it suppo Ex is open, you ant to use CoL	rts debugging I can <u>Do It You</u> inkEx with Co.	in CooCox softw <b>irself</b> or <u>Buy fro</u> IDE 1.4.0(or h	pports SW debugging and supports ware and Keil Realview MDK. <u>m Newark.Element14</u> . igher), CoFlash 1.4.0(or higher), firmware and install CoLinkEx Driver	<ul> <li>Hardware DIY</li> <li>Use in CoIDE</li> <li>Software</li> <li>Plugin for MDK</li> <li>How to use</li> <li>How to use</li> <li>CoLinkEx_LPC1114 kit</li> </ul>
CoAssistant CoX Components Forum	<ul><li>Supports</li><li>Supports</li></ul>	at first. Cortex M devid SW debugging JTAG debuggir CoFlash, CoIDI	ıg	R	← CoLinkEx →	CoLinkEx Updates NEW CoLinkEx plugin for MDK V1.4.2 NEW CoLinkEx firmware and driver updated
Contact us Follow CooCox	Supported Dev				1	
	Atmel	NXP	ST	TI		

E 🗉 in	
CooCox Market	
🕒 🕌 🙆	
Tech Support	

3	upported Devi	ices.						
]	JTAG debugging							
	Atmel	NXP	ST					

	Addici	11/2/1	51	11		
	<ul> <li>AT91SAM</li> </ul>	13U4E AT91SA 13U2E AT91SA 13U1E AT91SA	M3U2C			
S	SW debugging					

Atmel	Energy Micro	Holtek	NXP	Nuvoton	ST
AT91SAM	13U4E AT91SA 13U2E AT91SA 13U1E AT91SA	M3U2C			

## Downloads:

Before you use CooCox CoLinkEx, you need to update CoLinkEx firmware and install CoLinkEx Driver first.

### CoLinkEx Firmware | How to update

# Choose ColinkExUsbDriver Vesion

	Version 1.2.0	Version 1.2.1
windows XP (32bit WHQL)	✓	~
windows 7 (32bit WHQL)	✓	~
windows 7 (64bit)		✓
windows vista (32bit)	✓	~
windows vista (64bit)		×
Download	ColinkExUsbDriver Version 1.2.0	ColinkExUsbDriver Version 1.2.1
Note	<ul> <li>If you're using the 32 bit windows system, please use this version.</li> <li>You can modify the "ColinkEx.inf" file to make it support 64 bit system.Do like this : <u>Colinkex driver on Win7 / 64</u></li> </ul>	<ul> <li>This version doesn't have WHQL, please connect CoLinkEx to the computer before you start installing this driver.</li> </ul>

# CoLinkEx support is available in:

- Keil RealView MDK 4.03 or higher (not include 4.13a)
- IAR Embedded Workbench 5.xx or higher
- CooCox CoFlash
- CooCox CoIDE

## **CoLinkEx Software:**

- OLINKEX Plugin for Keil RealView MDK
- <u>CoLinkEx Plugin for IAR Embedded Workbench</u>