

## SCALIX PRECISION BALANCE FGL-600

### **INSTRUCTION MANUAL**

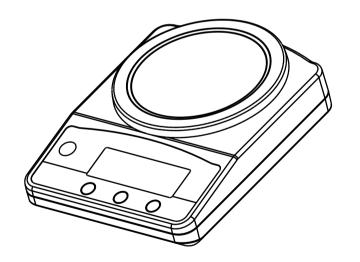

#### **DESCRIPTION**

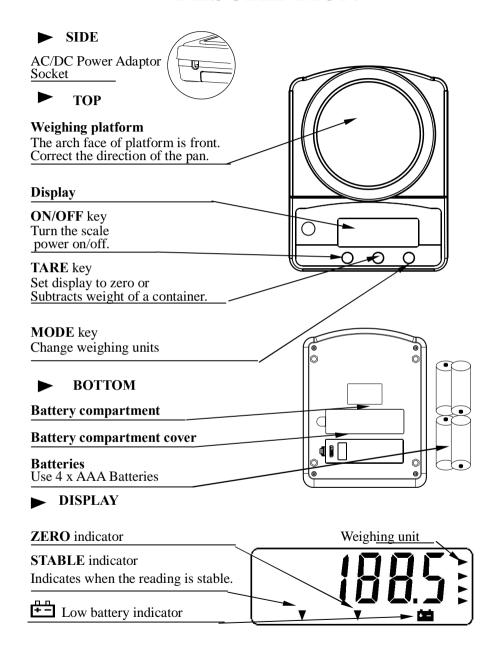

#### **SPECIFICATIONS**

Model number	Capacity	Division
FGL -600	600g	0.01g
Platter	ф 115mm	
Net/gross weight	850/1500g	
	Standard carton: $32.5 \times 22.5 \times 11.5 \text{ (cm}^3\text{)}$	
Package		
Operating Temperature	0-40°C(32-104°F)	
Power source	4 x AAA Size Batteries or	
	AC/DC Power Adapter 9V/300mA	

#### **FEATURES**

Kg, g, lb or oz Conversion

Auto Zero Tracking

Tare Facility

Large 15mm LCD

Auto Backlight LCD

**User Calibration** 

Plastic Protection Cover

Low Battery Indication

IMPORTANT; Remove batteries if using AC/DC Adaptor

#### **CALIBRATION**

#### When and How to Calibrate the Scale

Calibration may be required when it is initially installed, if the scale is moved to a substantial distance.

This is necessary because the weight of a mass in one location is not necessarily the same in another location. Also, with time and use, mechanical deviations may occur.

#### How to calibrate

Press and hold the [MODE] key, then press and hold [ON/OFF] key. The display will then show [CAL] then show five digits.

Press [MODE] and the display will then flash [500g].

Place the calibrating weight on to the pan. Wait for the stable indicator to display, then press **[MODE].** The display will show '-----' and then return to showing five numbers. Calibration is complete.


Press [ON/OFF] to turn the power off, Press [ON/OFF] to turn the power on again, Place the full weight (500g) on the pan to check calibration. If it is not correct, repeat the calibration procedure.

## 6 PREPARATION

#### **Installing Batteries/Connecting the AC/DC Adaptor**

# Battery Compartment Compartment Compartment Cover and insert four batteries(R6P/LR6 /AAA) into the battery compartment, taking extreme care that the polarities plus and minus is observed. 4 x LR6/AAA size Dry batteries.

#### AC/DC 300mA Power Adapter (optional)

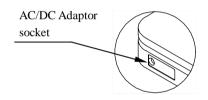

Plug the AC/DC Adapter to the adapter socket on the side.
The AC input requirement could be 110,120,220,230 or 240Volts (50/60Hz) depending on the area where used, so please verify that the adaptor is correct

#### 2. Setting up the scale/balance

#### **△** CAUTION

Avoid installing the scale/balance in direct sunlight that may cause discoloration or malfunctions. Place your scale/balance on a firm weighing table so that the scale/balance is level. (The scale/balance will not perform accurately when it is not level.)

Place the scale/balance on the firm surface that is flat and level for an accurate weighing.

3

#### **Before weighing**

Whenever possible, please allow the balance to warm up for 10 minutes after first

turning the power on, so that the balance will function properly and accurately.

#### **Error messages**

EEEE: Overload

Low battery

#### **Weighing Functions**

Press [ON/OFF] to turn on the scale. When the power is turned on the scale will go through a self-verification process and display all segments (8888) for a few seconds and then "0" will appear on the display. The scale is ready for use.

#### **Unit Weight Selection**

To select the weighing unit, press [UNIT] to select Kg or g or lb or oz. An indicator confirms the selected weight unit.

#### LCD Backlight

Place the objects to be weighted onto the scale's pan. The weight is then displayed

The scale has an **AUTO-BACKLIGHT** which activates when any weight is placed
on the pan. It will automatically turn off if the scale is idle.

#### **Tare Facility**

If a container is to be used, place the container on to the pan. The scale will display the container's weight. Press **[ZERO]** and display will read zero. Place items in to the container and the displayed weight will be the contents only.

#### **Auto Power Off**

After approx. 3mins

#### **Low Battery Indication**

If the power level falls below the required level then will be displayed. The batteries should then be changed. To continue weighing with this symbol displayed will result in non-accurate weighing.

#### IMPORTANT; Remove batteries if using AC/DC Adaptor