
MAXELL MXSP-BT01 BLUETOOTH WIRELESS SPEAKER



USER MANUAL

PLEASE READ THIS USER MANUAL COMPLETELY BEFORE OPERATING THIS UNIT AND RETAIN THIS BOOKLET FOR FUTURE REFERENCE.

PRODUCT FEATURES


Thank you for purchasing this Maxell Bluetooth Speaker! The MXSP-BT01 is a Bluetooth portable speaker with the following features:

- Wireless playback of music from your Bluetooth enabled mobile phone or multimedia device via the Bluetooth connection
- Up to 33 feet (10 meters) line-of-sight operating distance

WHAT'S INSIDE?

- Bluetooth speaker
- USB to Mini-USB charging cable
- User's manual

LOCATION OF CONTROLS

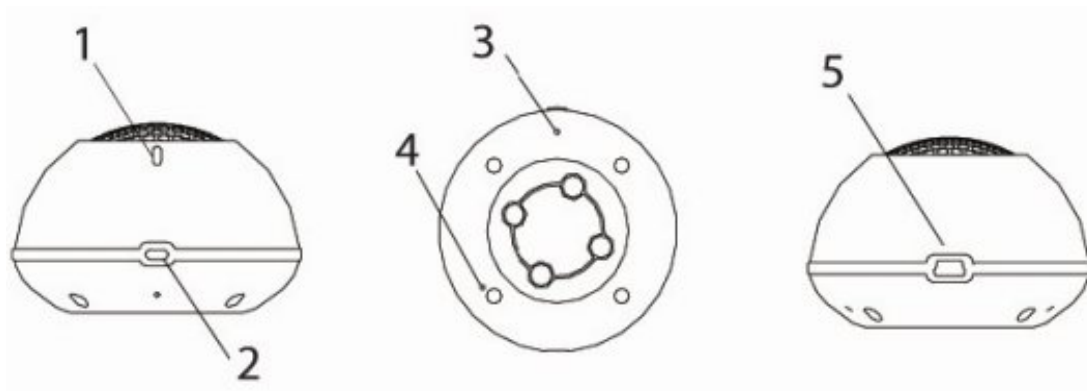

1. POWER/CHARGING/ BLUETOOTH STATUS INDICATOR (RED / BLUE)
2. POWER/CALL ANSWER BUTTON
3. BUILT IN MICROPHONE
4. RESET BUTTON
5. CHARGING JACK (Mini USB jack)

GETTING STARTED

TURNING THE MXSP-BT01 ON/OFF

1. In standby mode, press and hold the **POWER/ANSWER** button for 2-3 seconds until a beep sound is heard to turn the unit ON, the Indicator LED will flash blue 3 times.
2. To turn the unit OFF, press and hold the **POWER/ANSWER** button for 4-5 seconds until a beep sound is heard and the Indicator LED flashes red for about 0.5 second. Don't forget to turn off the Bluetooth feature on your phone or multimedia player.

PAIRING THE MXSP-BT01

3. Press and hold the Multifunctional button for about 8 seconds to pair. The LED will flash red and blue. Your Bluetooth enabled device can scan and connect to "MAXELL MXSP-BT01"
4. Music playing or phone calling is now available with MXSP-BT01.

OR

5. Plug 3.5mm audio cable from your device to the speaker
6. Music playing is available with MXSP-BT01

SPEAKER OPERATIONS

PAIRING (LINKING) A BLUETOOTH ENABLED MOBILE PHONE OR OTHER BLUETOOTH ENABLED DEVICE TO THE MXSP-BT01

1. If the MXSP-BT01 has never been paired with a Bluetooth device before. You need to follow the pairing instructions below to link the MXSP-BT01 with your Bluetooth device.
 - In standby mode, press and hold the **POWER/ANSWER** button for 5-6 seconds until a beep sound is heard, the Indicator LED will alternately flash blue and red. The speaker is ready to pair (link) with your Bluetooth device.
 - Turn on the Bluetooth function of your mobile phone or other Bluetooth enabled device and enable the search or scan function to find the MXSP-BT01.
 - Select "MAXELL MXSP-BT01" from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) the MXSP-BT01 with your mobile phone or Bluetooth device.
2. After turning on the MXSP-BT01, the unit will search for the last paired device. The **INDICATOR** will flash rapidly in blue. If the unit finds the paired Bluetooth device, a beep is heard and the **INDICATOR** will begin flashing at a slower rate.

Remarks:

- Fast flashing is when the LED lights up 3 times every second.
 - Slow flashing is when the LED lights up 1 time every 8 seconds.
3. After successfully pairing (linking), you can begin playing music from your Bluetooth device wirelessly to the speaker.
 4. Press the Volume Up(+) / Down(-) button on your Bluetooth device to adjust to the desired volume level.

Notes:

1. Refer to manual of your mobile phones, tablet, PC, computer or other Bluetooth enabled device for Bluetooth operation, since it may vary from model to model.
2. Your Bluetooth enabled device will not play the music through the speaker, even if connected (linked), if the device does not support A2DP profile.
3. If you are pairing (linking) your computer to the MXSP-BT01 using Bluetooth, you may need to set the speaker as your computer's default sound device.
4. If the MXSP-BT01 is left idle for about 5 minutes without linking to any Bluetooth enabled device, it will automatically turn off to save battery power.

Using the MXSP-BT01 as a Handsfree Bluetooth Speakerphone

1. Link your mobile phone to the MXSP-BT01 via Bluetooth as described above.
2. When receiving an incoming call on your cell phone, press the **POWER/ANSWER** button on the speaker to

switch the incoming call from cell phone to the MXSP-BT01 speaker. A short beep sound will be heard confirming the call was answered. Complete your call using the built-in microphone and speaker on the MXSP-BT01.

3. Adjust the volume control of your cell phone to obtain the desired sound level.
4. To end the call, just tap the **POWER/ANSWER** button again on the MXSP-BT01. A short beep sound will be heard and the call will end. If you were playing music from your cell phone to the MXSP-BT01 speaker before answering the call, the music will automatically resume playing when you hang up.
5. To ignore an incoming call, simply press and hold the **POWER/ANSWER** button on the speaker for about 2 seconds, a beep sound will be heard and the call will be ignored.

Redialing the last number with the speaker

The speaker will automatically redial the last number you dialed by tapping the speaker **POWER/ANSWER** button twice.

Note: This feature is phone dependent.

Re-linking to the mobile phone

If your mobile phone is already paired (linked) with the speaker, but became unlinked even with both Bluetooth devices turned on. You can re-link them by:

1. Turning off the speaker and then turning it on again to re-link your cell phone. The **INDICATOR** will flash three times with two short beeps and then flash rapidly for around 2 seconds if the speaker and your cell phone have been re-linked successfully.
2. You can also re-link the speaker by using Bluetooth operation of your cell phone. Please refer to operation manual of your cell phone for more information.

CHARGING INSTRUCTIONS

This unit operates on a built-in Li-ion battery that can be recharged either using the USB port on your computer or from a USB power adaptor (not included) with a rated output of DC5V, 500mA and up.

Note: The mini USB CHARGING JACK located on this unit is **ONLY** designed for charging the built- in Li-ion battery.

CHARGING THE BATTERY FOR FIRST TIME

- 2.) Charge the built-in Li-ion battery a minimum of 2 hours prior to first use.
Plug the unit into the USB port on your computer or into a USB power adaptor (not included) using the included USB cable.
- 3.) The LED indicator will turn red while charging and turn blue when the unit is fully charged. Unplug the USB cable from the power source once the battery is fully charged.

RECHARGING THE INTERNAL BATTERY

After prolonged use, the internal battery will become weak and the operation may become intermittent. When the internal battery charge is very low, the Indicator LED will flash red and a melody will play alerting you to recharge the internal battery as soon as possible.

Plug the speaker into a USB port on your computer or into a DC5V, 500mA and up USB power adaptor (not included) using the included USB cable. Disconnect the USB cable from the speaker as soon as it is fully charged.

Charging in Power ON mode

- The Indicator LED is RED while charging.
- The Indicator LED will change from RED to BLUE when the battery is fully charged.

- Note:**
1. Charging time will vary if you are listening to music while charging the internal battery. We recommend you switch off the speaker power during the charging process.
 2. To prolong the life of a rechargeable battery, it is recommended to completely discharge it before fully charging it again.
 3. Rechargeable batteries need to be cycled for maximum performance and longer battery life. If

you don't use the player that often, be sure to recharge the battery at least once a month in order to keep the internal battery working properly.

Charging in Unit Power OFF mode

- The Indicator LED is RED while charging.
- The Indicator LED will change from RED to BLUE when the battery is fully charged.



Battery Note and Care

Do not burn or bury batteries.

- Do not puncture or crush.
- Do not disassemble.
- Li-ion batteries must be recycled. Do not dispose of in the trash.
- Use only chargers rated for Li-ion cells. Be sure the charger's voltage and current settings are correct for the battery pack being charged.
- Charge batteries on a fireproof surface and away from flammable items or liquids.
- Batteries should not be unattended while charging. Only adults should charge the batteries.
- Follow the manufacturer's instructions for charging the product and do not charge longer than recommended. Unplug the charger when the battery is charged or not in use.

NOTE: The speaker is not magnetically shielded and may cause color distortion on the screen of some TVs or video monitors. To avoid this, you may need to move the unit further away from the TV or monitor if an unnatural color shifts or image distortion occurs.

RESETTING

If the speaker does not respond or has erratic or intermittent operation, it may have been subjected to an electrostatic discharge (ESD) or a power surge that triggered the internal circuitry to shut down automatically. If this occurs, press the reset button on the bottom of the speaker to reset it.

CARE AND MAINTENANCE

1. Avoid operating your unit under direct sunlight or in hot, humid or dusty places.
2. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the USB port of power source when cleaning.
- The finish on the unit may be cleaned with a dust cloth and cared for as other furniture, Use caution when cleaning and wiping the plastic parts.
- If the cabinet becomes dusty wipe it with a soft dry dust cloth. Do not use any wax or polish sprays on the cabinet.
- If the front panel becomes dirty or smudged with fingerprints it may be cleaned with a soft cloth slightly dampened with a mild soap and water solution. Never use abrasive cloths or polishes as these will damage the finish of your unit.

CAUTION: Never allow any water or other liquids to get inside the unit while cleaning.

TROUBLESHOOTING GUIDE

Symptom	Possible Problem	Solution
No Charging	The USB power adaptor (not included) is not plugged into a wall outlet or the USB cable (included) is not plugged into the mini USB jack on the bottom of the MXSP-BT01.	Plug the USB power adaptor (not included) into a wall outlet and plug the USB cable (included) into the mini USB jack on the the MXSP-BT01.
	Wall outlet is not functioning.	Plug another device into the same outlet to confirm the outlet is working.
	Computer USB port is not functioning.	Make sure your computer power is turned on and try another USB port.
No Sound	The MXSP-BT01 battery is dead.	Recharge the MXSP-BT01 battery.
	The MXSP-BT01 is not linked with the mobile phone.	Go through "Speaker Operations" process to link the speaker.
	The MXSP-BT01 placement is out of range.	Relocate the MXSP-BT01 within Bluetooth operating range (30 feet).
	Volume set too low.	Increase the volume of your device.
Sound is distorted.	Volume level is set too high.	Decrease the volume of your device.
	Sound source is distorted.	If the source sound file is of poor quality, distortion and noise are easily noticed with high-power speakers. Try a different audio source such as a music CD.
Unit gets warm after extended play at high volume.	This is normal.	Turn the unit off for a period of time or lower the volume.

SPECIFICATIONS

Power Requirement

Main unit

Built-in DC 3.7V 420mAh rechargeable Li-ion Battery

At Maxell, environmental and social responsibility is a core value of our business. We are dedicated to continuous implementation of responsible initiatives with an aim to conserve and maintain the environment through responsible recycling.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

Printed in China

Maxell Europe 2 Year Warranty

Maxell warrants this product to be free from all defects for the first 2 years of the lifetime of this product. Warranty is not valid for normal wear or damage due to accident, abnormal use, misuse, or neglect. Any defective item will be replaced at no charge if returned with proof of purchase to an authorized Maxell dealer or Maxell Europe Ltd., Whitebrook Park, Lower Cookham Rd, Maidenhead SL6 8YA, United Kingdom. Manufacturer, distributor and seller shall not be liable for consequential damages. This warranty gives you specific legal rights, and you may have other rights which vary from country to country.