
Features

- Automatic communication speed recognition
- : Enables to recognize communication speed automatically when connecting with master
- Network Voltage monitoring
- : If PV is lower than SV, enables to receive error flag for network power monitoring as Explicit message.
- Additional expansion units
- Standard terminal block type: Connectable up to 3 expansion units
- Sensor connector type: Connectable up to 7 expansion units
- Expandable I/O points up to max. 64 points for Standard terminal type, sensor connector type
- Reading the number of expansion units
- : Reads the number of connected expansion units
- Reading model name: Reads the connected model name of connected units (sensor connector type)
- Reading the unit specifications: Reads the specifications of connected units

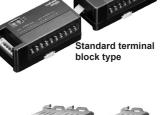



Sensor connector type

Please read "Caution for your safety" in operation manual before using.



Ordering information

λR	D	_	D	٦Г	ПΓ	08	٦ſ	Α	E	٦_	4	IS I	erminal lock ^{*2}						
```	Ļ		<u> </u>	┙┖	⊹⊢∟	<del></del>	╛┖	<u> </u>	╵╚╤		С	<u> </u>	lock*2	No-mark	Standard terminal bloo	ck type			
														4S	Sensor connector type(4pin)  Basic unit  Expansion unit				
									Į:	Struc	ture	Э		No-mark					
									_					E*4					
								Ι.				×1		A	AC voltage	R	Relay		
								1/	O sp	ecific	atic	on		N	NPN open collector	S	SSR		
														Р	PNP open collector				
						L	/O	poin	ıt					08	8 points type				
														16	16 points type				
					1/0 1	tvne	<u>.</u>							I	Input type				
						,,,,,								0	Output type				
														Χ	I/O mixed type				
			L	Digit	al/Ana	alog								D	Digital type				
														A*5	Analog type				
	Ν	etwor	k											D	Basic unit(DeviceNet	type)			
Itom								X**3	Expansion unit(use in DeviceNet/Modbus)										
Item					AR Autonics Remote I/O														

- X1: Sensor connector type (ARD-____-4S) model is only for NPN, PNP I/O specifications.
- $\times$ 2: Sensor connector(CNE-P04- $\square$ ) is sold separately. It is compatible with e-CON connector.
- **3: It is only for an expansion unit of sensor connector type.
  **4: It is only for an expansion unit of standard terminal block type.
- ※5: For ARD-A Series as analog type, refer to S-13 page.

#### ■ Model

Model			Specification					
Terminal type	Basic unit	Expansion unit	Specification					
	ARD-DI08A	ARD-DI08AE	75-250VAC input 8-point(13mA/point)					
	ARD-DI16N	ARD-DI16NE	10-28VDC NPN input 16-point(10mA/point)					
	ARD-DI16P	ARD-DI16PE	10-28VDC PNP input 16-point(10mA/point)					
Standard	ARD-DO08R	ARD-DO08RE	Relay output 8-point(2A/point), Life cycle of contact : 100,000 times					
terminal block	ARD-DO08S	ARD-DO08SE	SSR output 8-point(1A/point)					
type	ARD-DO16N ARD-DO16NE		NPN output 16-point(0.5A/point)					
	ARD-DO16P	ARD-DO16PE	PNP output 16-point(0.5A/point)					
	ARD-DX16N	ARD-DX16NE	10-28VDC NPN input 8-point(10mA/point), NPN output 8-point(0.5A/point)					
	ARD-DX16P	ARD-DX16PE	10-28VDC PNP input 8-point(10mA/point), PNP output 8-point(0.5A/point)					
	ARD-DI08N-4S	ARX-DI08N-4S	10-28VDC NPN input 8-point(10mA/point)					
Sensor	ARD-DI08P-4S	ARX-DI08P-4S	10-28VDC PNP input 8-point(10mA/point)					
connector type	ARD-DO08N-4S	ARX-DO08N-4S	NPN output 8-point(0.3A/point)					
lypc	ARD-DO08P-4S	ARX-DO08P-4S	PNP output 8-point(0.3A/point)					

S-6 Autonics

# Specifications

Туре		Standard ter	rminal block	type										
Madal	Basic unit	ARD- DI08A	ARD- DI16N	ARD- DI16P	ARD- DO08R	ARD- DO08S	ARD- DO16N	ARD- DO16P	ARD- DX16N	ARD- DX16P				
Model	Expansion unit	ARD- DI08AE	ARD- DI16NE	ARD- DI16PE	ARD- DO08RE	ARD- DO08SE	ARD- DO16NE	ARD- DO16PE	ARD- DX16NE	ARD- DX16PE				
Power sup	pply	Rated voltag	ge: 24VDC, \	/oltage range	e: 12-28VDC									
Power cor	sumption	Max. 3W												
Insulation	type	Photocoupler isolated												
I/O points		AC input 8-point	NPN input 16-point PNP input 16-point		Relay output 8-point	SSR output 8-point	NPN output 16-point	PNP output 16-point	NPN input 8-point + output 8-point	PNP input 8-point + output 8-point				
	Voltage	75-250VAC	10-28VDC		Normally	30-250VAC	10-28VDC(	oltage drop	: max. 0.5VD	C)				
Control I/O	Current	13mA/point	10mA/point		open(N.O.) 250VAC 2A 1a	1A/point	0.5A/point (leakage current: max. 0.5 mA)		Input: 10mA, Output: 0.5A/point (leakage current: max. 0.5					
Common		8-point, com	imon		1-point, COM 8-point, common									
Insulation	resistance	Min. 200MΩ	(at 500VDC	megger)										
Noise resi	stance	±240 V the square wave noise (pulse width: 1μs) by the noise simulator												
Dielectric :	strength	1000 VAC 50/60 Hz for 1 min.												
Vibration		1.5 mm amplitude at frequency of 10 to 55Hz (for 1 min.) in each of X, Y, Z directions for 2 hours												
Shock		500 m/s²(approx. 50G) in X, Y, Z directions for 3 times												
Environ- It	Ambient emperature	-10 to 50°C, storage : -25 to 75 °C												
ment	Ambient humidity	,												
Protection		IP20(IEC sta	andard)				1							
						ircuit (NPN ty type : operat	ype : operate ted at min. 0.	7A),		ly power in				
Indicator		Network stat	tus (NS) LED	(green, red)	, Unit status (	MS) LED (gre	een, red), I/O	status LED	(input: green,	output: red)				
Material		Front case,	Body Case:	PC, Rubber	cap: NBR									
Mounting		DIN rail or s	crew lock typ	ре										
Approval		DeviceNet C DeviceNet DeviceNet C DeviceNet												
Unit weigh	t	Approx. 150g	Approx. 150g   Approx. 140g           Approx. 160g   Approx. 170g   Approx. 140g											
<b>Environr</b>	nent resistance	is rated at no	o freezing or	condensatio	n.									

XEnvironment resistance is rated at no freezing or condensation.

× EIIVIIOII	ment resistance	is rated at no freezing or co	illuciisaliuli.								
Туре		Sensor connector type									
Model	Basic unit	ARD-DI08N-4S	ARD-DI08P-4S	ARD-DO08N-4S	ARD-DO08P-4S						
viouei	Expansion unit	ARX-DI08N-4S	ARX-DI08P-4S	ARX-DO08N-4S	ARX-DO08P-4S						
Power su	ipply	Rated voltage: 24VDC, Voltage range: 12-28VDC)									
Power co	nsumption	Max. 3W									
Insulation	n type	Photocoupler isolated									
/O points		NPN input 8-point	PNP input 8-point	NPN output 8-point	PNP output 8-point						
Control	Voltage	10-28VDC		10-28VDC(voltage drop: ma	ax. 0.5VDC)						
/O	Current	10mA/point(Sensor current	:: 150 mA/point)	0.3A/point(leakage current:	max.0.5mA)						
Common		8-point, common									
Insulation	resistance	Min. 200MΩ(at 500VDC me	egger)								
Noise res	sistance	±240V the square wave noise (pulse width: 1μs) by the noise simulator									
Dielectric	strength	1,000VAC 50/60Hz for 1min. (between external terminals and case)									
Vibration		1.5mm amplitude at frequency of 10 to 55 Hz (for 1 min.) in each of X, Y, Z directions for 2 hours									
Shock		500m/s²(approx. 50 G) in X, Y, Z directions for 3 times									
Environ-	Ambient temperature	-10 to 50°C, storage : -25 to 75°C									
ment	Ambient humidity	35 to 85%RH, storage : 35 to 85%RH									
Protection	n	IP20(IEC standard)									
Protection	n circuit	Surge, Short-circuit, Overho	eating (over 165 °C) and ES	O protection, Reverse polarity	protection circuit						
riolectioi	ii Circuit	Overcurrent protection circu	it(operated at min. 0.17A)	Over current protection circ	uit(operated at min. 0.7A)						
Indicator		Network status (NS) LED (green, red), Unit status (MS) LED (green, red), I/O status LED (Input: green, Output: red)									
Material		Front case, Body Case: PC									
Mounting		DIN rail or screw lock type									
Approval		( E DefliceNet									
Unit	Basic unit	Approx. 64 g	Approx. 64 g	Approx. 65 g	Approx. 67 g						
weight	Expansion unit		Approx. 57 g	Approx. 58 g	Approx. 59 g						
reigitt   LAPAI ISIOI TAIRL			<u> </u>	<u> </u>	1						

S-7 **Autonics** 

(A) Photo electric sensor

(I) SSR/ Power controller

(M) Tacho/ Speed/ Pulse meter

(P) Switching mode power supply

(R) Graphic/ Logic panel

#### ■ DeviceNet communication

Item	Specifications
Communication	I/O Slave messaging(Group 2 Only slave) -Poll command: Yes ·Bit_strobe command: Yes ·Cyclic command: Yes ·COS command: Yes
Communication distance	Max. 500m(125kbps), Max. 250m(250kbps), Max. 100m(500kbps)
NODE ADDRESS setting	Max. 64 nodes(set by the front rotary switch)
Communication speed	125, 250, 500kbps(automatically set when connecting with Master)
Insulation	I/O and inner circuit: Photocoupler isolated, DeviceNet and inner circuit: non-insulation, DeviceNet power: non-isolated
DeviceNet power	·Rated voltage: 24VDC ·Voltage range: 12-28VDC ·Power consumption: Max. 3W
Approval	ODVA Conformance tested


### Part description

#### O Basic unit

• Standard terminal block type



Sensor connector type

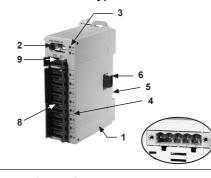

#### 1. DeviceNet connector

No.	Color	For	Organization
5	Red	24VDC(+)	-\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \
4	White	CAN_H	¬,,,_r □CAN_H  •)
3	None	Shield	SHIELD (•)
2	Blue	CAN_L	CAN_L •
1	Black	24DC(-)	

#### 2. Rotary switch for node address


- : Rotary switch for setting node address.
- ×10 represents tens digit and ×1 represents ones digit.
- 3. Status LED: It displays the status of unit(MS) and network(NS).
- 4. I/O status LED: It displays each I/O status.
- 5. Rail lock: It is used for mounting DIN rail or with screw.
- 6. Connector output part: It connects an expansion unit.
- 7. I/O terminal block: It is used for connecting external device I/O.
- 8. Sensor connector: It is used for connecting external device I/O.
- **9. External power connector**: It is used for supplying external power.

#### © Expansion unit

Standard terminal block type



Sensor connector type

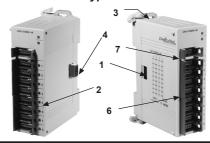


- Connector input part: It connects expansion unit and is joined into expansion connector output.
- 2. I/O status LED: It displays each I/O status.
- 3. Rail lock: It is used for mounting DIN rail or with screw.
- 4. Connector output part: It connects an expansion unit.
- 5. I/O terminal block: It is used for connecting external device I/O.
- 6. Sensor connector: It is used for connecting external device I/O.
- 7. External power connector: It is used for supplying external power

S-8 Autonics

# **■** I/O circuit diagram


#### O Standard terminal block type

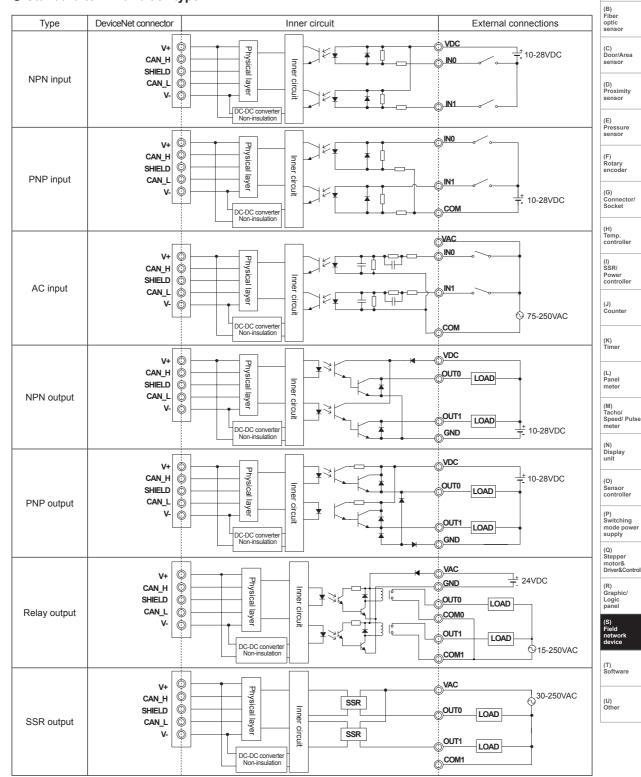

Autonics S-9

# **■ I/O circuit diagram**


### O Sensor connector type

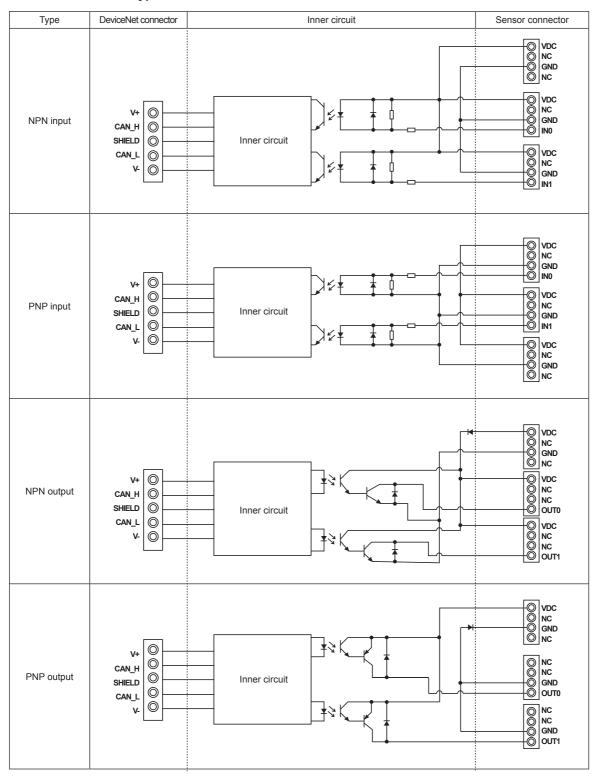


S-10 Autonics


# Connections Standard terminal block type ARD-DI08A(E)



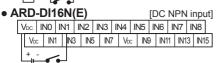


• A	R	D-	D	0	0	8R	(	E)								[R	el	ay	οι	ıtpı	ut]
	١	/bc	N	ŀС	0	UT0	0	UT1	0	UT2	0	UT3	0	UT4	0	JT5	0	UT6	0	Л7	L
	T	GN	D	N:0		001	0	CON	11	001	12	CON	13	001	14	CON	15	CON	16	CON	17
		+ -				(	Ş		os	ad											_

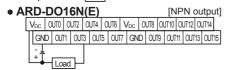

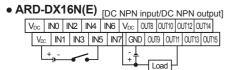


# O Sensor connector type

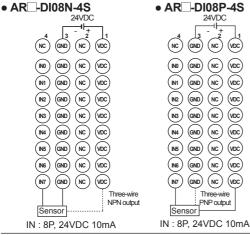




• AF	RD-I	DÖ	8	S(E	:)								[	S	SR	С	utp	ou	t]
	VAC	VAC	OU	то с	UT1	0	UT2	0	UT3	0	UT4	0	UT5	0	UT6	0	UT7		
	CC	M CC	M	COM	cc	M	CO	М	COI	M	COI	М	CO	M	CO	М	CO	М	
	<u>L</u>	╛┖	L	oad	П														


• AF	• ARD-DO16P(E)									[PNP output]						
	V _{DC}	OUTO	OUT2	OUT4	OUT6	VDC	OUT8	OUT1	0	UT12	OUT14					
	GN	D OU	T1 OU	T3 OU	T5 OU	17 GN	ID OL	Л9 О	Л11	OUT	13 OUT15	5				
	+ -	I.	oad -									_				

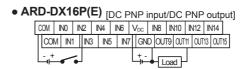

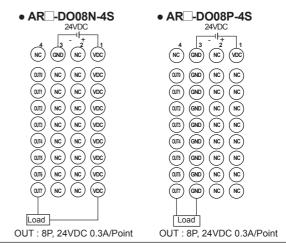


# Dimensions



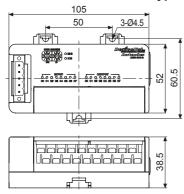



Panel cut-out

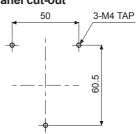

- ※Tightening torque: 1.8 to 2.5N⋅m. XSame dimensions are applied to both basic and expansion unit.
- XConnecting connectors are included for expansion units

(B) Fiber optic sensor

(C) Door/Area

(D) Proximity

(E) Pressure

(I) SSR/

(K) Timer

(M) Tacho/ Speed/ Pulse meter

(N) Display unit

(P) Switching mode power supply

motor& Driver&Co


(R) Graphic/ Logic panel

(unit:mm)


#### Dimensions

### **⊚** Sensor connector type

# Mounting on DIN rail

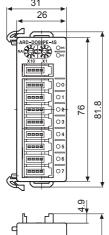

#### Mounting with screws

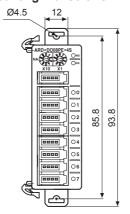


#### Connector









(unit:mm)

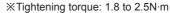

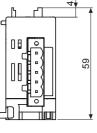

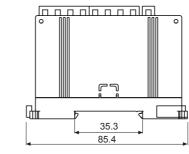

XSame dimensions are applied to both basic and expansion unit.

(¿Ó⊹ ON ¿Ó Flash ● OFF)

#### ■ Status LED

			(-) OII, -9 I lasii, •. OI I )				
Item	LED sta	itus	Description				
Item	Red	Green	Description				
	-\\(\delta\)-	•	Unrecoverable error				
Module status(MS)	* Recoverable error & communication error		Recoverable error & communication error of expansion unit				
LED	•		Normal operation				
	•	•	Power is not supplied				
	•	Ď	Normal standby				
Not and atom (NO)	•	<i>\</i> .	Network On-Line				
Network status(NS)	☆	•	Dupl, MAC ID / Bus-Off				
	<b>*</b>	•	Time Out				
	•	•	Network Off-Line				

# Installation and setup

#### Node address setup

Two rotary switches are used for setting node address.
 X10 switch represents the 10's multiplier and X10 switch represents the 1's multiplier.
 Node address is settable from 0 to 63.

Node address is changed when re-supplying the power to the unit.
 After changing node address, must re-supply the power.

#### Mounting on panel

- ① Pull Rail Locks(standard terminal block type: 3EA, sensor connector type: 2EA) on the rear part of a unit, there are fixing screw hole.
- ② Place the unit on a panel to be mounted.
- 3 Make holes on fixing screw positions.
- 4 Fasten the screw to fix the unit tightly. Tightening torque should be below 0.5N·m.











S-12 Autonics

### Installation and setup

### Mounting on DIN rail

- Pull Rail Locks(standard terminal block type: 3EA, sensor connector type: 2EA) on the rear part of unit.
- 2 Place the unit on DIN rail to be mounted.
- 3 Press Rail Locks to fix the unit tightly.

#### Connection of Basic unit and Expansion units (standard terminal block type)

- 1 Turn OFF the power of a Basic unit.
- 2 Place an expansion unit to be installed next to the basic unit.
- 3 Connect the cable of expansion unit to the connector of a basic unit.
- 4 Install a connected expansion units as the right figures.
- Supply the power to a Basic unit.

(Re-supply the power of a basic unit and it recognizes expansion units.)

### Connection of Basic unit and Expansion units (sensor connector type)

- ① Turn OFF the power of the Basic unit.
- ② Remove a cover of connector for extension with nippers, etc.
- ③ Connect connector input part of an expansion unit and connector output part of a basic unit with a connector which is enclosed with an expansion unit box.
- ④ Install a connected expansion units as the right figure.
- (5) Supply the power to the Basic unit.

(Re-supply the power of a basic unit and it recognizes expansion units.)

#### Communication distance

Baud Rate	Max. network length	Max. branch line length	Max. extended branch line length
125kbps	500m	6m	156m
250kbps	250m	6m	78m
500kbps	100m	6m	39m

# ■ Terminating resistance

120Ω
 1% of metallic film
 1/2W

**Do not install terminating resistance on the unit, or it may cause network terminating problem (Impedance can be too high or low) and trouble.

*Connect terminating resistance on the both ends of the trunk line.

# Caution for using

- Turn OFF the power before connecting or disconnecting expansion units.
- Node addresses of connected units on network should not be duplicated. If you change a node address during
  operation, unit status (MS) red LED fl ashes and it communicates with a previous node address.
   Re-supply power and the changed node address is applied.
- Communication speed which is set on master is set automatically. If you change the communication speed during
  operation, network status (NS) red LED turns ON and it does not communicate.
   Re-supply power and it operates normally.
- Make sure to use DeviceNet standards communication cables, and taps.
   It may cause communication error if non-standards products are used.
- Make sure to examine disconnection or short-circuit before connecting cables.
- Avoid installing the units where severe dust exists or where corrosion may occur.
- Installation environment
- · It shall be used indoor.
- · Altitude Max. 2,000m
- Pollution Degree 2
- · Installation Category II

(A) Photo electric sensor

(B) Fiber optic sensor

(C) Door/Area

> (D) Proximity sensor

(E) Pressure sensor

> (F) Rotary encoder

Connector/ Socket

(H) Temp. controller

> (I) SSR/ Power controller

(J) Counter

(K) Timer

(M) Tacho/ Speed/ Pulse

(N) Display unit

> O) ensor ontroller

(P) Switching mode power supply

(Q) Stepper motor&

(R) Graphic/ Logic panel

(S) Field network

T) Software

(U) Other

Autonics S-13