

COUGAR[™] LS9 **Quick Reference Card**



Printer Tech Support - 866-871-4571 Rev. 1 – 12/19/06





LS9 Printer and Accessories

Part No.	Description		
LS9	Includes LS9 printer, 1 cassette of		
	T100X000VPC-BK, and 6 AA batteries		
LS9-ACS*	120 VAC power adapter for North America		
LS9-ACA*	120 - 240 VAC power adapter for Australia		
LS9-ACC*	120 - 240 VAC power adapter for China		
LS9-ACE*	120 - 240 VAC power adapter for Europe		
LS9-ACU*	120 - 240 VAC power adapter for the United		
	Kingdom		
LS9-IB	Protective impact bumper		
LS9-WS	Wrist strap		
LS9-CLN	Cleaning kit		

*Cannot be used to charge batteries

P1[™] Label Cassettes

- · Print continuous military and commercial grade heat shrink tubing.
- · Print a variety of continuous tapes for wire/cable marking, component labeling and safety/facility identification.
- · Fast loading cassettes include labels and ribbon.
- · Automatic cassette recognition adjusts printer settings upon insertion. · Integrated memory device saves last legend
- used for later recall and records number of labels remaining

14) Delete



1

5



Typical Label Example Part Matorial Ňo Application

P1[™] Label Cassettes for Cougar LS9

Wateria	140.	Application
Heat Shrink	H000X044H1C	Wire/Cable
Polyolefin^		marking
Vinyl Cloth	T100X000CBC-BK	Wire/Cable
Таре		marking
Polyolefin	T031X000FJC-BK	Network
Таре		systems
		component
		labeling and
		terminal block
		labeling
Colored	T100X000VXC-BK	Safety/Facility
Vinyl Tape*		identification

^ Available in white and yellow. * Available in a variety of colors.

2

Cutter Button and Print Head Latch



Print Sample
BC BC ABC ABC ABC
BC BC ABC ABC
ABC
ABC ABC
ABC
ABC
ABC
ABC
AB

Getting Started

- · Remove battery door on back of printer.
- · Install 6 AA batteries according to the molded indicators in the battery compartment.

Do not install batteries incorrectly. Doing so may cause damage to the printer electronics. When replacing batteries, replace all 6 of them at the same time.

- · Reinstall the battery door.
- · Remove cassette door on back of printer.
- Install the label cassette. Press firmly to lock cassette in place. The printer will power on automatically.
- Reinstall cassette door.
- · Move print head latch to locked position.

You are now ready to begin printing!



Point Size	Print Sample
72	A

Text Font Style

BOLD

BOLD + UNDERLINED

Δ

Serialization Tool

- Press F4 (Quick key for wire marking)
 Set length as 1.50 (see length selection table in
- section 10 for additional size recommendations)
- 3. Press ENTER
- 4. Type "I/O:"
- Press the INSERT key and select i²³ Serial
 Enter a start value of 01, stop value of 02, and
- increment value of 1
- 7. Press ENTER
- 8. Press PRINT

 $\label{eq:example using T100X000CBC-BK, continuous cloth tape for wire/cable marking:$

I/O:01	I/O:02
I/O:01	I/O:02

Lengths wi	For Wire	e and Ca inuous 1	ble Ma Jape	arking
Wire/ Cable Size	Wire/Cable Diameter		Sugo Ma	gested Irker nath
	in.	mm	in.	mm
Cat. 5E/4	.25	6.4	1.50	38.2
Cat. 5E/25	.51	13.0	2.00	50.8
Cat. 5E/50	.66	16.8	2.50	63.6
Cat. 5E/100	.96	24.4	3.75	95.2
Cat. 6	.2127	5.3-6.9	1.50	38.2
18 AWG	.11	2.8	0.75	19.0
16 AWG	.12	3.0	0.75	19.0
14 AWG	.16	4.1	1.00	25.4
12 AWG	.18	4.6	1.25	31.8
10 AWG	.20	5.1	1.25	31.8
8 AWG	.28	7.1	1.75	44.6
6 AWG	.32	8.1	1.75	44.6
4 AWG	.37	9.4	1.75	44.6
3 AWG	.40	10.2	2.00	50.8
2 AWG	.43	10.9	2.00	50.8
1 AWG	.51	13.0	2.50	63.6
1/0	.55	14.0	2.50	63.6
2/0	.59	15.0	2.50	63.6
3/0	.65	16.5	2.75	70.0
4/0	.70	17.8	3.00	76.2

Wire (Cable Marking Longth Selection

Symbol Tool

- 1. Press the INSERT key and select Symbol
- 2. Select symbol number 16 from the library
- 3. Press ENTER
- 4. Press SPACE
- 5. Type "CAUTION"
- 6. Press PRINT

Example using T100X000VXC-BK, black on yellow continuous vinyl tape:

41 Symbols, Including:



Free Cougar LS9 Downloads Available Online at www.panduit.com

- Detailed Operator's Manuals in English, French, German, Italian, Spanish, and Portuguese
- Replacement Quick Reference Cards in English, French, German, Italian, Spanish, and Portuguese
- Product bulletin with part ordering information

Additional Information

- The COUGAR LS9 is part of a complete line of identification solutions from Panduit, which also includes the **PANTHER LS8** Hand-Held Thermal Transfer Printer with Revolutionary label cut-to-length functionality.
- The **PANTHER LS8** prints die-cut and continuous P1 Label Cassettes.
- The PANTHER LS8 features a USB interface for importing data, system upgrades, and printing labels from a wireless laptop or desktop computer.
- See the printer comparison chart in section 16 or visit www.panduit.com for more information.

Patch Panel/Face Plate Labeling

- 1. Type "A"
- 2. Press the INSERT key and select 1²³ Serial
- 3. Enter a start value of 01, stop value of 04, and increment value of 1
- 4. Press ENTER
- 5. Press Shift + LENGTH
- 6. Set length as 0.65
- 7. Press LINE and select @ PAGES Yes
- 8. Press ENTER
- 9. Press PRINT

Example using T0380X000VPC-BK, black on white continuous vinyl tape:

A01 A02 A03 A04

Bar Code Tool

	1. Press the INSERT key at 2. Scroll right and type tex 3. Press ENTER	nd select IIII Bar Code t in the window	1
	4. Press ENTER		
	5. Press PRINT		
		PANDUIT	
	Example using		
1	black on white continuous v	inyl tape	12

		NEW!
Hand-Held Thermal Transfer	Ę	Z
Printing Solutions	PANTHER TM LS8	COUGARTM LSS
Self-Laminating Labels	*	
Die-Cut Component Labels		
Die-Cut Heat Shrink Tubing		
Continuous Heat Shrink Tubing		
Continuous Tapes	**	
Partial Cut Feature	*	
PC Interface		

PART NO. LS9-QS-A, Rev. 1 Toll free technical support: 1-866-871-4571 Toll free customer service: 1-800-777-3300 Also visit www.panduit.com

Other Functions

- POWER Turn printer on or off
- SETUP Access the Set Up menu
- DELETE Erase characters and tools
- CLEAR Clear the entire screen
- FEED Feed labels
- PRINT Print labels
- COPIES Print multiple copies or a selection of pages
- SIZE Select the text font size
- LENGTH Set the length of continuous label media
- STYLE Select the text font style
- ALIGN Change the label justification
- LINE Add vertical and horizontal lines to a label
- FRAME Add a frame around a label
- PAGE Move to another page
- FILE Access the file manager
- INSERT Insert a new tool
- EDIT Edit an existing tool
- LABEL Change the label mode
- CAPS Turn caps lock on or off
- HOME Move to home position on screen
- END Move to end position on screen
- SHIFT Access secondary functions on keypad
- SPACE Add a space to a label
- ACCENT Insert an international character
 ENTER Move to the next line or accept menu changes

ROTATE – Rotate the label 90, 180, or 270 degrees

Languages – Set the printer language
Units – Select inches or mm

Set Up Menu

- Bar Code Set the default bar code settings
- Contrast Lighten or darken the display
- Heat Adjust the heat of the print head
- Version Display the current operating system version number
- Factory Defaults Return printer settings to factory default values
- Cut/Pause Pause a multi-label print job to cut between labels
- Auto-off Turn the 5 minute automatic shut-off function on or off

Special Functions (F Keys)

- F1 Display F key menu
- F2 Store and recall user profiles
- F3 Display label cassette information
- F4 Quick key for wire marking (use with continuous vinyl cloth tape)
- F5 DIN Mode for European Terminal Blocks

13

9

15

