



## MFR PUMP REPLACEMENT (AC-PM1) SWITCH OFF POWER AND UNPLUG UNIT FROM POWER OUTLET BEFORE SERVICING

- a) Remove the power switch activator item 1 by pulling straight out (use a pliers be careful not to damage plastic part).
- b) Turn unit over and remove the 4 screws item 2 and lift top cover item 3 off.
- Unplug the vacuum line item 4 from pump item 5 and disconnect its electrical connector from the PCBA.
- d) Remove the 3 nuts from item 6 by holding the pump down.
- e) To replace pump repeat steps a) through e) in reverse.

