

Remote Commander RM-VZ220

©2010 Sony Corporation Printed in China http://www.sony.net/

Operating Instructions Manual de instrucciones (parte posterior)



English

For the Customers in the U.S.A.

WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

- Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help. You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Setting Up the RM-VZ220

The RM-VZ220 is preset at the factory to operate Sony brand video devices set to any of the Device Select buttons (see the table below). To use with non-Sony devices, or Sony devices that are not preset at the factory, set the manufacturer's code for each device.

Table with 3 columns: Devices, Button, Factory setting*. Lists settings for TV, CBL (SAT), VCR, and DVD.

* The five-digit code is the preset manufacturer's code.

Note

Only a TV can be assigned to the TV Device Select button. You can assign any device to the other Device Select buttons.

Specifications

Table with 2 columns: Specification, Value. Includes Operating distance, Power requirements, Battery life, Dimensions, and Mass.

Troubleshooting

- Carefully perform the setup procedure of "Startup Guide." If the RM-VZ220 does not work, try repeating the setup procedure using another manufacturer's code (if listed for your device).
• Aim the RM-VZ220 directly at the device.
• Remove any obstacles in the path between the RM-VZ220 and the device.

For the customers in the U.S.A.

Customer Support Information

After you have read through this manual, if you still cannot get the RM-VZ220 to work properly, call the Sony Customer Support Helpline at 1-800-822-2217.

Startup Guide

This guide shows you how to set up and use the RM-VZ220 to operate your devices. If your Sony device has already been preset, see "Operate the device."

Set the manufacturer's code

Example: To set up a Philips TV

- 1 Find the manufacturer's code in "Manufacturer's Code List."

Manufacturer's Code List table with columns for Brand and Code No. Includes entries for Philips, Pioneer, and others.

If your device is not listed, try the Search function (see "Searching for the correct code").

 
- 2 Press and hold SET for more than 3 seconds.

The SET indicator lights up.

While keeping SET held down, press the desired Device Select button, then release both buttons.

- 3 Enter the manufacturer's code (01454).

The SET indicator flashes three times and turns off.



Operate the device

- 1 Aim the RM-VZ220 directly at the device.

- 2 Press the Device Select button for the device you want to operate.

- 3 Press POWER to turn on the device.

- 4 Press buttons on the RM-VZ220 to check that they function.

See "Remote Button Descriptions" for the functions of buttons for each device.

If the RM-VZ220 does not seem to be working...

- Check that you have set the correct manufacturer's code.
• Try repeating the setup procedure using another manufacturer's code (if listed for your device).
• If you still cannot operate the RM-VZ220 after trying all the listed codes, try the Search function (see "Searching for the correct code").

Searching for the correct code

You can set the manufacturer's code using the Search function.

- 1 Power on the device with its power switch.
2 Aim the RM-VZ220 at the device you want to set.
3 Press and hold SET for more than 3 seconds. The SET indicator lights up. While keeping SET held down, press the desired Device Select button, then release both buttons.

Checking the manufacturer's code you have set

- 1 Press and hold SET for more than 3 seconds. The SET indicator lights up. While keeping SET held down, press the desired Device Select button, then release both buttons.
2 Enter 9-3-3 using the number buttons. The SET indicator flashes three times.
3 Press SET.
4 When the SET indicator starts flashing, count the number of flashes. Short flash(es) indicate which digit (first, second, etc.), followed by long flash(es) to indicate the digit number (i.e., 2 long flashes represent the number 2). "0" is indicated by rapid flashing. Determine the 5-digit code number this way. To recheck, press SET.
5 Press SET to finish.

Clearing the automatic power-on control (Sony devices only)

The Device Select buttons are preset to automatically turn on a device when pressed. To cancel the function:


- 1 Press and hold SET for more than 3 seconds. The SET indicator lights up. While keeping SET held down, press SET, then release both buttons.
2 Enter 9-7-7 using the number buttons. The SET indicator flashes three times.
3 Press the desired Device Select button. The SET indicator flashes three times and turns off.
To set the function again, perform the same procedure above.

Restoring the factory settings

You can clear all the settings and reset the RM-VZ220 to its factory settings.

- 1 Press and hold SET for more than 3 seconds. The SET indicator lights up. While keeping SET held down, press SET, then release both buttons.
2 Enter 9-0-0 using the number buttons. The SET indicator flashes three times. To cancel, press any button except SET.
3 Press SET. The SET indicator flashes three times and turns off.

Remote Button Descriptions

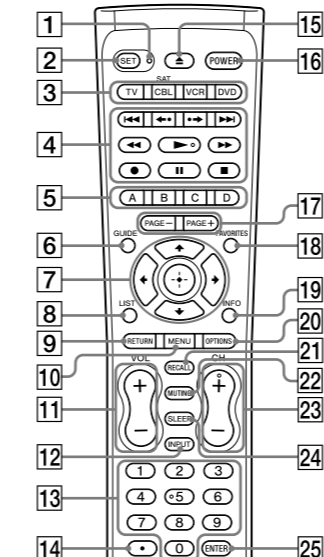

General

- 1] 2] SET: Press to set up the RM-VZ220. The indicator lights or flashes while setting.
3] GUIDE Select buttons: Press to select the device to operate.
4] DEVICE: Displays the program guide (EPG).
5] VOL +/-: Turns the volume up/down.
6] POWER: Turns the selected device on and off.
7] MUTING: Mutes the volume. Press again to turn muting off.
8] SLEEP: Enables the Sleep function (when available).

The number 5, CH+, and +/- buttons each have a tactile dot for ease of use. The GUIDE and RETURN buttons do not work for a VCR.

Note on the VOL +/- and MUTING buttons

When a TV or other video device is selected, the TV's volume is controlled. When a DVD Home Theater is selected, its volume can be controlled.

TV

- 4] 1: VIDEO 1 input
2: VIDEO 2 input
3: HDMI input
4: RGB input
5: (PIP INPUT) Changes the input mode of the "window" picture.
6: (PIP) Turns the "window" picture on and off.
7: (PIP MOVE) Moves the location of the "window" picture.
8: (PIP STILL) Freezes the "window" picture.
9: (PIP SWAP) Switches between "main" and "window" picture.
5] A: Red button
B: Green button
C: Yellow button
D: Blue button

TV

- 10 MENU: Calls up the menu display.
12 INPUT: Changes the input mode.
13 14 25 1-9, 0, ENTER, (dot): Changes the channel. For example, to change to channel 5, press 0 and 5 (or, press 5 and ENTER).
17 PAGE +/-: (PIP CH +/-) Changes the channel up/down in the "window" picture.
18 FAVORITES: Enables the Favorite function.
19 INFO: Displays program information.
20 OPTIONS: Displays the options menu.
21 RECALL: Selects the channel previously selected.
22 CH +/-: Switches the channel up/down.

Cable set top box/IPTV

- 4] 1: Proceeds to the previous location.
2: Briefly replays the scene (Flash -).
3: Briefly fast forwards the scene (Flash +).
4: Proceeds to the next location.
5: Fast reverses.
6: Plays.
7: Fast forwards.
8: Records.
9: Pauses.
10: Stops.
A, B, C buttons
D: (LIVE TV) Displays Master setup menu.
8] LIST: Displays the title of recorded program.

Satellite receiver

- 4] 1: Proceeds to the previous location.
2: Briefly replays the scene (Flash -).
3: Briefly fast forwards the scene (Flash +).
4: Proceeds to the next location.
5: Fast reverses.
6: Plays.
7: Fast forwards.
8: Records.
A: Red button
B: Green button
C: Yellow button
D: Blue button
8] LIST: Displays the title of recorded program/PVR menu.

VCR

- 4] 1: Rewinds.
2: Plays.
3: Fast forwards.
4: Records.
5: Pauses.
6: Stops.
12 INPUT: Changes the input mode.
13 1-9, 0: Number buttons.
14: Ejects a tape.

DVD player/recorder

- 4] 1: Skips to the previous chapter/track.
2: Briefly replays the scene (Flash -).
3: Briefly fast forwards the scene (Flash +).
4: Skips to the next chapter/track.
5: Fast reverses.
6: Plays.
7: Fast forwards.
8: Records.
9: Pauses.
10: Stops.
5] A: (SET UP) Calls up the system/setup menu.
B: (SUBTITLE) Switches the subtitle.
C: (AUDIO) Changes the sound.
D: (CLEAR) Clears the setting.
8] LIST: Displays the Title List.
10 MENU: Displays the DVD menu.

Blu-ray Disc/HD-DVD player

- 4] 1: Skips to the previous chapter/track.
2: Briefly replays the scene (Flash -).
3: Briefly fast forwards the scene (Flash +).
4: Skips to the next chapter/track.
5: Fast reverses.
6: Plays.
7: Fast forwards.
8: Records (for BD recorder).
9: Pauses.
10: Stops.
5] A: (SET UP) Calls up the system/setup menu.
B: (SUBTITLE) Switches the subtitle.
C: (AUDIO) Changes the sound.
D: (CLEAR) Clears the setting.

DVR (digital video recorder)/PVR (personal video recorder)

- 4] 1: Proceeds to the previous location.
2: Briefly replays the scene (Flash -).
3: Briefly fast forwards the scene (Flash +).
4: Proceeds to the next location.
5: Fast reverses.
6: Plays.
7: Fast forwards.
8: Records.
9: Pauses.
10: Stops.
5] A: (REPLAY*) Enables the Replay function for DVR/Replay TV.
B: (LIVE TV*) Displays Master Guide.
8] LIST: Displays the title of recorded program.

DVD Home Theater

- 4] 1: Skips to the previous chapter/track.
2: Briefly replays the scene (Flash -).
3: Briefly fast forwards the scene (Flash +).
4: Skips to the next chapter/track.
5: Fast reverses.
6: Plays.
7: Fast forwards.
8: Records.
9: Pauses.
10: Stops.
5] A: (SET UP) Calls up the system/setup menu.
B: (SUBTITLE) Switches the subtitle.
C: (AUDIO) Changes the sound.
D: (CLEAR) Clears the setting.

Notes on using the RM-VZ220

- The RM-VZ220 will not perform functions that the device is not designed for. For example, if your TV does not have the muting function, MUTING on the RM-VZ220 will not function with your TV.
• The function of the buttons varies depending on settings/operating modes. The table of "Remote Button Descriptions" shows how the RM-VZ220 generally operates for each device in the preset mode.
• If your cable set top box control volume, be sure to set its volume to a moderate level. If the volume on the cable set top box is turned down completely, you will not be able to adjust your TV's volume with the RM-VZ220.

Manufacturer's Code List / Lista de códigos del fabricante

English

The following tables show brand names (Brand) and their corresponding code numbers (Code No.).

- 1 Press and hold SET for more than 3 seconds. The SET indicator lights up. While keeping SET held down, press the desired Device Select button, then release both buttons.
2 Enter the manufacturer's code. The SET indicator flashes three times and turns off.

Español

La siguiente tabla muestra los nombres de las marcas (Brand) y el número de código correspondiente (Code No.).

- 1 Presione y mantenga presionado el botón SET durante más de 3 segundos. Se encenderá la luz indicadora SET. Mientras tiene presionado el botón SET, presione el botón de selección de dispositivo deseado y luego suelte ambos botones.
2 Ingrese el código del fabricante. El indicador SET parpadeará tres veces y se apagará.

TV / TV

Table with 2 columns: Brand, Code No. Lists codes for various TV brands like Acer, Action, Admiral, etc.

DVD recorder / Grabadora de DVD

Table with 2 columns: Brand, Code No. Lists codes for DVD recorder brands like Accurian, Apex Digital, Funai, etc.

Blu-ray Disc/HD-DVD player/ Reproductor de Blu-ray Disc/HD-DVD

Table with 2 columns: Brand, Code No. Lists codes for Blu-ray/HD-DVD player brands like Denon, Insignia, Integra, etc.

Table with 2 columns: Brand, Code No. Lists codes for brands like Wards, Waycom, Westinghouse, etc.

DVD player / Reproductor de DVD

Table with 2 columns: Brand, Code No. Lists codes for DVD player brands like Accurian, Aligo, Apex Digital, etc.

Table with 2 columns: Brand, Code No. Lists codes for brands like Pioneer, Philips, Proscan, etc.

TV / TV

Table with 2 columns: Brand, Code No. Lists codes for various TV brands like Acer, Action, Admiral, etc.

DVD recorder / Grabadora de DVD

Table with 2 columns: Brand, Code No. Lists codes for DVD recorder brands like Accurian, Apex Digital, Funai, etc.

Blu-ray Disc/HD-DVD player/ Reproductor de Blu-ray Disc/HD-DVD

Table with 2 columns: Brand, Code No. Lists codes for Blu-ray/HD-DVD player brands like Denon, Insignia, Integra, etc.

