

Full HD Digital Satellite Receiver
Digital Innovation Life

User's Manual

S6600HD PVR

ICECRYPT

Contents

1	Introduction	7
1.1	Features	7
1.2	Accessories	8
1.3	The Remote Control	9
1.4	Getting Started	11
1.5	The Apps Screen	12
2	Installation	14
2.1	Safety Precautions	15
2.2	Hard Drive Installation	16
2.3	Satellite Dish Connection	18
2.4	TV Connections	18
	HDMI connection	19
	Component Video Connection	19
	SCART Connection	20
	Composite Video Connection	20
2.5	AV Receiver Connection	21
2.6	Network Connection	21
3	Scanning for Channels	22
3.1	Satellite Dish Settings	22
	LNB Settings	22
	Unicable Settings	23
3.2	Using a Motorized Dish	24
	Using DiSEqC 1.2	24
	Using USALS	25
3.3	Scanning for Satellite TV Channels	26
	Scanning for Every Channel	27
	Scanning a Specific Transponder	27

Scanning for One Channel	28
4 Watching TV	29
4.1 Channel List	30
Channel List Preferences	30
4.2 TV Programme Guide	31
Programme Guide Preferences	32
4.3 Controlling Audio	33
4.4 Displaying Subtitles	33
4.5 Watching Two Channels Simultaneously	34
4.6 Viewing Teletext	34
4.7 Watching Pay Channels	34
4.8 Watching Subchannels	35
4.9 Setting Up Timers	36
Wake-Up Timer	36
Sleep Timer	36
4.10 Managing Channels	36
4.11 HbbTV	38
5 Recording TV	39
5.1 Recording TV Programmes	39
Scheduling TV Recordings Using the Programme Guide	39
Manually Scheduling TV Recordings	40
5.2 Time-Shifting	40
5.3 Playing Recordings	41
5.4 Recording Preferences	41
6 Playing Media Files	43
6.1 Managing Storage Devices	43
6.2 Managing Files	44
6.3 Playing Recordings and Videos	45
6.4 Viewing Photos	46
Slideshow Preferences	46
6.5 Playing Music	46
6.6 Playing Media files from Other Devices	47

Accessing Other Devices	47
Allowing Other Devices to Access the Receiver	48
7 Apps	49
7.1 Web Browser	49
Viewing a Webpage	49
Navigating Webpages	50
Bookmarks	50
Entering Text	51
7.2 YouTube	51
Playing Videos	51
7.3 Free TV+	52
7.4 Internet TV+	52
7.5 Internet Radio+	53
7.6 RSS News	53
7.7 User Data	54
7.8 TV Portal+	54
7.9 Torrent Player	55
7.10 Weather Forecast	55
7.11 PlugIn	56
PlugIn Server Settings	56
8 Preference Settings	57
8.1 Language Settings	57
8.2 Network Settings	57
Proxy Server Settings	58
DDNS Settings	58
8.3 Clock Settings	58
8.4 Audio and Video Settings	59
8.5 System Settings	60
Using Different Fonts	60
8.6 Parental Control	60
8.7 Maintaining the Digital TV Receiver	61
Sharing Channel Data	61
8.8 Updating the Digital TV Receiver	62

Online Update	62
Software Server Settings	63
A Universal Remote Control	64
A.1 TV	65
A.2 DVD Player	71
B Legal Notices	74
B.1 Copyright	74
B.2 Warranty	74
B.3 Trademarks	74
B.4 Correct Disposal of This Product	75

1 Introduction

1.1 Features

Beyond simply receiving satellite signals, this digital TV receiver has many convenient and advanced features:

- This receiver has four slots for CA modules and pay-TV cards. See *Watching Pay Channels* on page 34.
- Users can use the built-in hard drive or removable storage devices to record TV programmes. It is possible to schedule this receiver to record not only a single TV programme but also every episode of a series using the programme guide. See *Recording TV* on page 39.


Note

The receiver may have no hard drive installed, depending on the product option. For details on how to install a hard drive, see *Hard Drive Installation* on page 16.

- Users can pause and resume a live programme. See *Time-Shifting* on page 40.
- Under ideal conditions, users can watch 2 different channels at the same time while recording 3 other channels. It is also possible to watch a live channel while playing a recorded programme. See *Watching Two Channels Simultaneously* on page 34.
- This receiver can play many kinds of media files, including photos, music, and videos. See *Playing Media Files* on page 43.
- This receiver can play media files from other devices, such as computers and network-attached storages. See *Playing Media files from Other Devices* on page 47.
- This receiver provides a variety of apps, including YouTube. See *The Apps Screen* on page 12.

1.2 Accessories

The following accessories are included with the digital TV receiver.

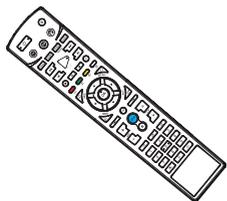

Remote control




Batteries



Power cord




Loop-through cable

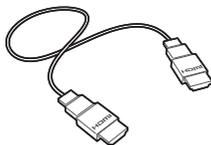

HDMI cable



SATA cable

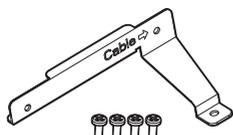


Hard drive bracket
(optional)



User guide

1.3 The Remote Control

Use the remote control to control the digital TV receiver. Before using, make sure that batteries are installed correctly.

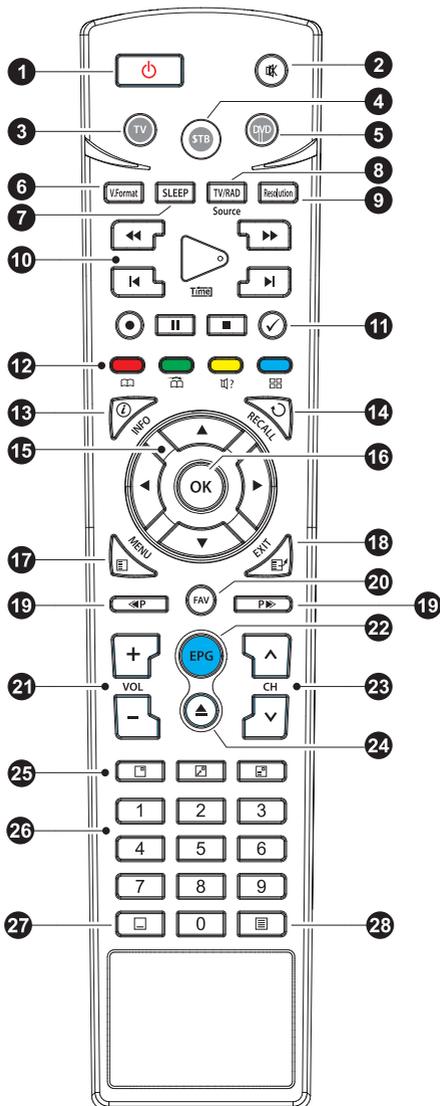

- 1 : Turn the digital TV receiver on or off.
- 2 : Mute the sound.
- 3 **TV**: Switch the remote control to TV control mode. See Universal Remote Control on page 64.
- 4 **STB**: Switch the remote control to receiver control mode.
- 5 **DVD**: Switch the remote control to DVD player control mode.
- 6 **V. Format**: Change the aspect ratio. See Audio and Video Settings on page 59.
- 7 **SLEEP**: Set the sleep timer, in 10-minute increments.
- 8 **TV/RAD**: Switch between TV channels and radio stations.
- 9 **Resolution**: Change the video resolution.
- 10 Use these buttons to control recording and playback. See Recording TV on page 39 and Playing Media Files on page 43.
- 11 : This button performs different functions, depending on what the receiver is currently doing.
- 12 These colour buttons perform different functions, depending on what the receiver is currently doing.
- 13 **INFO**: Display information about the current programme.
- 14 **RECALL**: Display the list of recently-viewed channels.
- 15 Use these navigation buttons to navigate the menus and interactive screens.
- 16 **OK**: Select an item. In addition, use this button to display the channel list. See Channel List on page 30.
- 17 **MENU**: Display apps. See The Apps Screen on page 12. In addition, use this button to return to the higher menu level.
- 18 **EXIT**: Return to the previous screen or close the current list or dialogue box.
- 19 Use these buttons to scroll lists.
- 20 **FAV**: Display the list of favourite channels.
- 21 Use these volume buttons to adjust the volume.
- 22 **EPG**: Display the programme guide. See TV Programme Guide on page 31.
- 23 Use these channel buttons to change channels.
- 24 : Display the list of files stored in a removable storage device. See Playing

Media Files on page 43.

- 25 Use these buttons to watch two different channels at the same time. See Watching Two Channels Simultaneously on page 34.
- 26 Use the numeric buttons to enter numbers.
- 27 : Display subtitles. See Displaying Subtitles on page 33.
- 28 : Display teletext pages. See Viewing Teletext on page 34.

1.4 Getting Started

Install the digital TV receiver properly, referring to Installation on page 14.

Plug the power adapter into a power outlet, and insert the connector into the power socket on the rear of the receiver. Then press the power button  on the remote control to turn on the receiver.

When turning on the receiver for the first time, the initial setup process automatically starts. Follow the on-screen instructions to finish the process. At each step, either make a choice or skip the step.

1. Choose a language for the user interface.
2. Configure the network settings. See Network Connection on page 21 and Network Settings on page 57.
3. Install add-ons to internet-based apps, such as Free TV+ and Internet Radio+, when an internet connection is available. Additionally, determine whether to restore the receiver using the stored settings and channels, if there is any backup data.
4. Set the clock. See Clock Settings on page 58.
5. Scan for TV channels. See Scanning for Channels on page 22.

1.5 The Apps Screen



Press the MENU button to open the apps screen. The apps screen displays various app icons in multiple folders, as follows:

- **CAS:** See Watching Pay Channels on page 34.
- **Data Transfer:** See Sharing Channel Data on page 61.
- **Media Server:** See Allowing Other Devices to Access the Receiver on page 48.
- **Remote Play+:** See Playing Media files from Other Devices on page 47.
- **Schedule:** See Manually Scheduling TV Recordings on page 40.
- **Software:** See Online Update on page 62.
- **Storage Manager:** See Managing Storage Devices on page 43.
- **System:** See Updating the Digital TV Receiver on page 62.
- **USB Storage:** See Updating the Digital TV Receiver on page 62.

For other apps, see Apps on page 49.

Note

While some apps, such as Calendar, are easy to use, other internet-based apps may be unavailable or restricted, depending on the country, so this guide does not cover every app provided by this receiver.

To access the customary setting menus, select **Settings** or, alternatively, press the blue button to quickly access it.


2 Installation

Install the digital TV receiver, limited by the specifications shown in the table below.

Maximum power consumption	50 W when in operation 0.5 W when in standby mode
Size	300 mm × 60 mm × 230 mm
Weight	1.6 kg (without hard drive)
Operating temperature	0–45°C, 32–113°F
Storage temperature	–10–70°C, 14–158°F

On the rear, this digital TV receiver has several connectors:

- Satellite dish connectors
- AV connectors for a TV and an AV receiver
- USB ports for removable storage devices
- An Ethernet port for internet connection

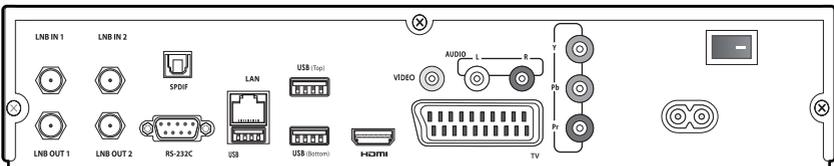

The RS-232C port may be used only by an engineer for installation or service.

2.1 Safety Precautions

To avoid hazards and to keep the performance of the digital TV receiver at its best, obey the following instructions:

- Do not block ventilation openings on the receiver.
- When installing the receiver in a cabinet, make sure to leave a space of at least 10 centimetres around the receiver for cooling.
- Do not place the receiver in direct sunlight and close to heat-emitting devices that can interfere with cooling.
- Do not expose the receiver to water and moisture to prevent fire and electric shock.
- Use only accessories provided or specified by the manufacturer.
- Use dry cloth to clean the receiver.



Never open the receiver casing under any circumstances, or the warranty will be void.

Repair tasks must be done only by qualified persons with expertise.


2.2 Hard Drive Installation

If the receiver has no hard drive installed, install a hard drive on the receiver for its best performance by taking the following steps:


1. Turn off the receiver and disconnect it from the power source.
2. Unfasten the screws at the rear and both sides of the receiver to remove the cover.

Note


Opening the receiver casing for any other purposes than installing a hard drive voids the warranty. This condition may vary depending on the local distributor's warranty policy. Contact the local distributor for details before opening the casing to keep the warranty valid.

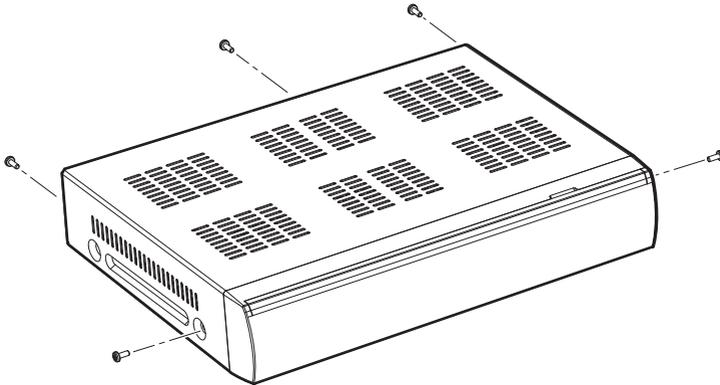


3. Attach a hard drive to the provided bracket using the accompanying screws.

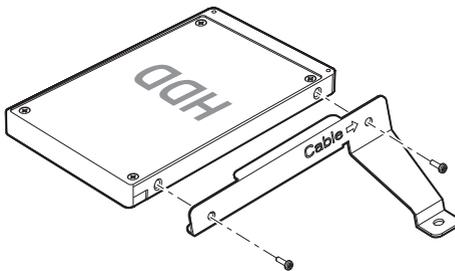

4. Place the hard drive on the receiver base, aligning the holes for the screws, and fasten the screws.

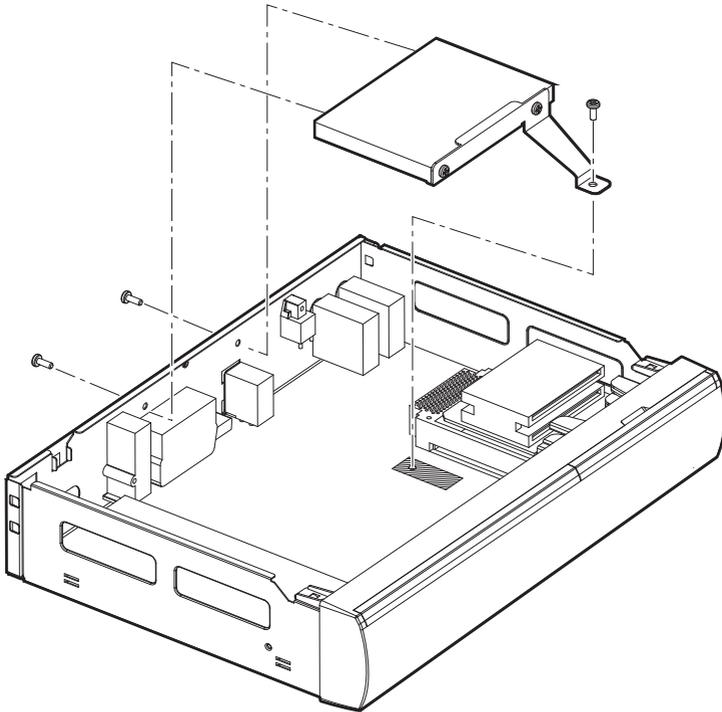


5. Connect the data cable and power cable between the hard drive and the motherboard.

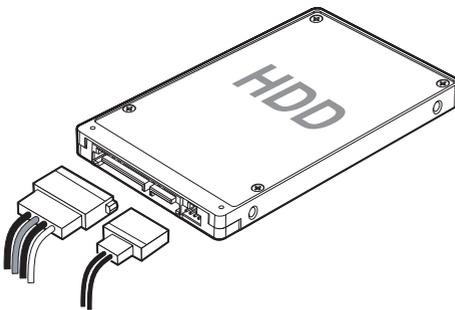

6. Put the cover in place and fasten the screws.

2.3 Satellite Dish Connection

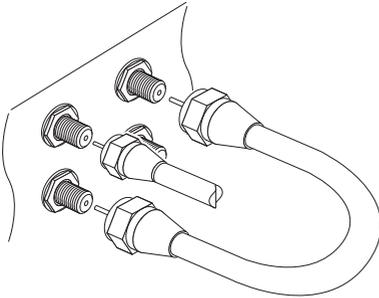

Connect the cable from the satellite dish to LNB IN 1. In most situations, connect LNB OUT 1 to LNB IN 2 using the loop-through cable. Only when two satellite dishes are available without any multi-dish switch, users should connect the cable from the other dish to LNB IN 2


2.4 TV Connections

This digital TV receiver has a wide range of connectors available for use by a TV. The list below shows video connectors in the order of picture quality.

- HDMI
- Component video
- SCART
- Composite video

Use the HDMI connector to connect the receiver to a TV for the best available picture quality. If the TV has no available HDMI connector, try the next best connection type.

HDMI connection

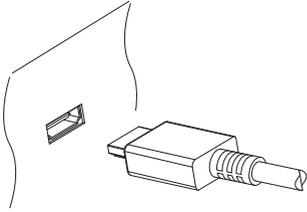


Connect the receiver's HDMI output connectors to the TV's HDMI input connector using an HDMI cable.

Note


Some HDMI cables and TVs may not be compatible with the receiver due to differing HDMI specifications.

Component Video Connection

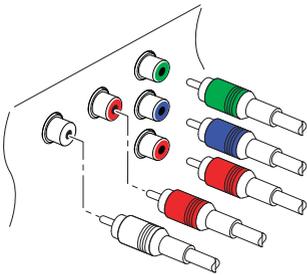

The receiver's component video connectors are labelled Y, Pb, and Pr, and their companion audio connectors are labelled L and R. Each of them is coloured differently. A typical component cable has five connectors. Connect the receiver's component video and audio output connectors to the TV's component video and audio input connectors using a component cable, so that the connectors of the same colour connect to each other.

SCART Connection

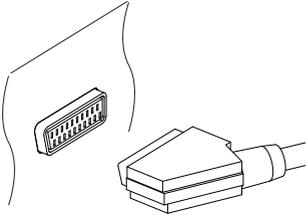


Connect the receiver's SCART output connector to the TV's SCART input connector using a SCART cable. An extra audio connection is not needed because SCART also carries audio.

Note

SCART connectors cannot carry HD video.

Composite Video Connection

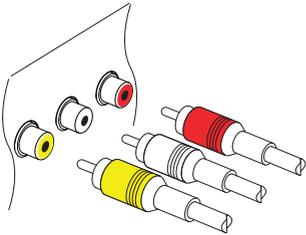


The composite video connector shares the audio connectors with the component video connectors. A typical composite cable has three connectors. The yellow connector is for the video connection. Connect the receiver's composite video and audio output connectors to the TV's composite video and audio input connectors using a composite cable, so that the connectors of the same colour connect to each other.

Note


Composite video connectors cannot carry HD video.

2.5 AV Receiver Connection

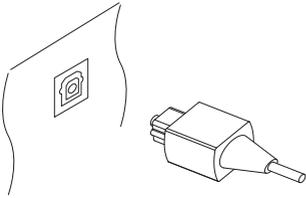

Use an AV receiver for better audio quality. Connect the receiver's SPDIF connector to the AV receiver's digital audio input connector using an optical audio cable.

2.6 Network Connection

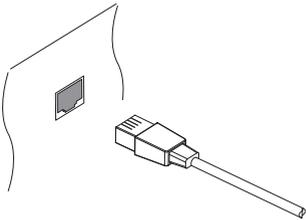

Connect the receiver's LAN port to the router using a network cable. For details on how to configure the network settings, see [Network Settings](#) on page 57.

3 Scanning for Channels

A broadcast satellite's channels are called transponders. A transponder gathers signals over a range of uplink frequencies and retransmits them on a different set of downlink frequencies to receivers on Earth. Multiple TV channels are broadcast through a transponder. A transponder has three main components: frequency, symbol rate, and polarization.

3.1 Satellite Dish Settings

LNB Settings

A group of satellite dish settings must be properly configured for each desired satellite before performing a channel scan.

Open the apps screen and select **Settings > Dish Setting**. There are two signal bars on the lower part of the screen. The signal level bar indicates how strong the signal is, and the signal quality bar indicates how easy it is to pick up. To view an enlarged signal bar display, press the blue button.

Configure the following settings properly using the signal bars.

- **Satellite:** Choose a target satellite from the list of satellites.
- **Tuner Connection:** Specify whether the receiver's satellite dish connectors are connected to two different dishes separately or to the one same dish via the loop-through cable. This option is available only when both connectors are connected by any means.
- **Tuner:** Determine which of the dish connectors to use. This option is not available when **Tuner Connection** is set to **Loop Through**.
- **Frequency:** Choose a target transponder from the list of transponders.
- **LNB Power:** An LNB must be supplied with power to operate. Turn this on to supply the LNB with power if it doesn't have its own power supply.

- **LNB Type:** Specify what type of LNB is used.
- **LNB Frequency:** Specify what frequency the LNB generates. A dual-band LNB, also called universal LNB, generates two alternative frequencies to receive a wider band of satellite frequencies.
- **LNB 22 kHz:** Either turn this on or off to pick up a higher or lower frequency band.
- **DiSEqC Switch:** If one or more typical DiSEqC switches are used, this option must be set properly. Specify which of the DiSEqC ports is connected to the intended dish.

On this screen, users can change satellite and transponder data.

Rename a satellite: Choose **Satellite** and select a satellite. Press the red button and then enter a new name using the on-screen keyboard.

Edit a satellite's longitude: Choose **Satellite** and select a satellite. Press the green button and then modify the longitude.

Clear all transponders of a satellite: Choose **Satellite** and select a satellite. Press the yellow button and then confirm to clear them.

Add a transponder: Place the focus on **Frequency** and press the green button. Specify the frequency, symbol rate, and polarization.

Edit a transponder: Choose **Frequency** and select a transponder. Press the yellow button and then modify the transponder's details.

Delete a transponder: Choose **Frequency** and select a transponder. Press the red button and then confirm to delete it.

Unicable Settings


If the user's house is equipped with a single cable router, configure unicable settings properly.

Open the apps screen and select **Settings > Dish Setting**. Set **LNB Type** to **Unicable** and then choose **Unicable Setting**. Choose **Config Mode** and determine whether to scan for all available channels or a specific channel. Specify the details, such as port and predetermined intermediate frequency.

3.2 Using a Motorized Dish

While a fixed dish usually only picks up one satellite, a motorized dish can pick up multiple satellites.

There are two control methods for motorized dishes: DiSEqC 1.2 and USALS. With DiSEqC 1.2, the user must manually operate the dish to locate satellites one by one. The digital TV receiver stores each satellite position for later use. With USALS, the receiver can pinpoint all visible satellites through calculations using the dish coordinates and the built-in database of satellite positions.

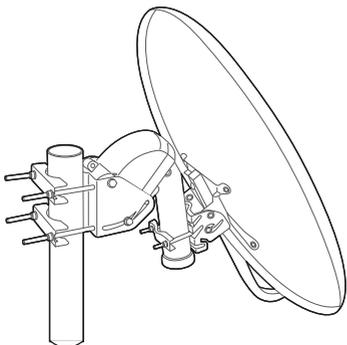

Using DiSEqC 1.2

Open the apps screen and select **Settings > Positioner Setting**. Set **Positioner** to **DiSEqC 1.2** and then repeat these steps for every desired satellite.

1. Choose **Go to Reference** from **Positioner Command** for the dish to return to the reference point at the highest point in its arc. The dish's movement accuracy may decrease over long-term use. To correct movement errors, choose **(Re-) Calculate** from **Positioner Command**.
2. Choose **Satellite** and choose a target satellite.
3. Choose **Frequency** and select any available transponder.
4. Choose **Go to Stored Position** from **Positioner Command** to rotate the dish, so that it faces the target satellite.

5. Place the focus on **Move** and press the left or right navigation button to finely drive the dish east or west for the best signal. The dish rotates continuously as long as either of these buttons is held down.
6. Choose **Store Satellite Position** from **Positioner Command** to save the dish's current position for the target satellite.

It may be useful to set limits to the movement scope of the dish for easier manipulation. Repeat these steps two times to set a limit position for the east and the west.

1. Choose **Go to Reference** from **Positioner Command** for the dish to return to the reference point.
2. Place the focus on **Move** and press the left or right navigation button to drive the dish.
3. Choose **Set East (soft) Limit** or **Set West (soft) Limit** from **Positioner Command** to save the dish's current position to use it as a limit position.

Choosing **Disable (soft) Limits** from **Positioner Command** clears these limit positions.

Using USALS

Open the apps screen and select **Settings > Positioner Setting**. Set **Positioner** to **USALS** and then specify these items correctly:

- **Dish Longitude:** Enter the longitude where the dish is located.
- **Dish Latitude:** Enter the latitude where the dish is located.

Give the dish a test run to see if it works properly. Repeat these steps for every desired satellite.

1. Choose **Go to Reference** from **Positioner Command** for the dish to return to the reference point.
2. Choose **Satellite** and choose a target satellite.
3. Choose **Frequency** and select any available transponder.
4. Choose **Go to** to rotate the dish so that it faces the target satellite.

3.3 Scanning for Satellite TV Channels

Open the apps screen and select **Settings > Service Search**.

Three methods are available to scan for satellite TV channels.

- Scanning all available transponders for every channel
- Scanning for multiple channels that a specific transponder carries.
- Scanning for a specific one of multiple channels that a specific transponder carries.

Some option items are used in common in more than one scanning method, as follows:

- **Satellite:** Choose a target satellite from the list of satellites.
- **Search Type:** Determine which types of channels to scan for.
 - **All Service:** Scan for all available radio and TV channels.
 - **FTA Only:** Scan only for free radio and TV channels.
 - **TV Only:** Scan only for free and pay TV channels.
- **Network Search:** A transponder usually has information about other transponders provided by the same satellite TV service provider. It is better to turn on this option so that the receiver uses broadcast network information for faster and more precise scanning.

When any dish settings need to be reconfigured, select **Dish Setting** or **Positioner Setting** to jump to the relevant menu. To return to this menu, select **Service Search**.

Particular LNBS have an indicator light to show if the signal strength is good enough for the receiver to perform a channel scan. This may be useful when installing a new satellite dish. To activate this function, press the green button and then confirm to use it.

Scanning for Every Channel

Three methods are available for scanning for every channel.

- Set **Search Mode** to **Auto**. With this method, the receiver uses its numerous database of transponders when scanning for channels. Choose **Time Calibration** and determine how long the receiver should wait to get time information from each transponder.
- Set **Search Mode** to **Blind**. Transponders occasionally change, so the receiver may happen to miss some channels when scanning for channels using the transponder database. With this method, the receiver scans all potential transponders using every possible combination of transponder elements not to miss any channel in a scan. However, it takes much longer time.
- Set **Search Mode** to **Fast Scan**. Particular satellite TV service providers manage dedicated transponders to provide up-to-date transponder information. With this method, the receiver uses that sort of transponder for faster and more precise scanning. Choose **Select Operator** and select a satellite TV service provider.

Make sure that the common options are properly configured before selecting **Start Search** to start a channel scan.

Scanning a Specific Transponder

Generally, one transponder carries multiple TV channels. To scan a specific transponder for the channels it carries, set **Search Mode** to **Manual**. Users need to get several details about a target transponder.

- **Frequency**: Choose a target transponder from the list of transponders.
- **Symbol rate**: Specify the transponder's symbol rate.
- **Polarity**: Specify the transponder's polarization.

Make sure that the common options are properly configured before selecting **Start Search** to start a channel scan.

Scanning for One Channel

To scan for only one specific channel, set **Search Mode** to **Advanced**. Each satellite TV channel has unique packet IDs used to distinguish between channels. In addition to the information about a target transponder, users need to know what packet IDs a target channel uses.

- **Video PID:** Specify the channel's video packet ID.
- **Audio PID:** Specify the channel's audio packet ID.
- **PCR PID:** Specify the channel's PCR (programme clock reference) packet ID. This is usually identical to video PID. If the video PID setting doesn't work, try 8191.

Make sure that the common options are properly configured before selecting **Start Search** to start a channel scan.

4 Watching TV

Use the channel buttons or the numeric buttons to change channels. When changing channels, a dialogue box appears showing information about the current programme on the current channel, such as programme title and running time. Pressing the **INFO** button also displays the programme information dialogue box.

The following symbols may appear on the dialogue box to indicate what the current channel and programme features.

- : This is a pay channel. See *Watching Pay Channels* on page 34.
- : Teletext pages are available. See *Viewing Teletext* on page 34.
- : Subtitles are available. See *Displaying Subtitles* on page 33.
- : Dolby audio is available. See *Audio and Video Settings* on page 59.
- **HD**: This is an HD channel. See *Audio and Video Settings* on page 59.
- : Subchannels are available. See *Watching Subchannels* on page 35.
- : The receiver is currently connected to the network.

Use the up and down navigation buttons to view information about the previous and following programmes, and use the left and right navigation buttons to view information about programmes on other channels. To view more information about the current programme, press the **INFO** button again. When a channel number other than the current channel is displayed, pressing the **OK** button switches to the channel.

Pressing the **FAV** button displays the list of channel groups, including favourites groups. After a group is chosen, users can change only between the channels that belong to the group.

4.1 Channel List

Use the channel list to change channels more easily. Press the OK button to open the channel list.

Switch to a specific channel: Place the focus on a channel entry using the navigation or numeric buttons, and then press the OK button.

Skip through a channel list: Use the up and down navigation buttons or, alternatively, the ◀P and P▶ buttons.

Display specific channels: Press the red button to sort or filter the channel list. A list of channel categories is displayed in the middle of the screen. Repeatedly pressing the red button displays different channel categories. Choose a channel category and then a subcategory.

Add a channel to favourites groups: Place the focus on a channel entry and press the green button. A list appears showing multiple favourites groups. Select one or more groups, and then press the EXIT button to finish.

View a favourites group's channels: Press the FAV button and choose a favourites group.

Search for channels: Press the yellow button and enter search criteria using the on-screen keyboard.


Channel List Preferences

Press the blue button and set these options properly.

- **Service preview:** With this enabled, selecting a channel entry displays the channel's picture in the inset window on the upper right of the screen. Select it once more to switch to the channel. With this option disabled, selecting a channel entry immediately switches to the channel.
- **Keep viewing service when exit:** With this disabled, pressing the EXIT button switches to the channel that was focused on. With this option enabled, pressing the EXIT button closes the channel list without changing channels.

- **View only filtered list:** With this enabled, choosing a channel category filters out channels that are not in the chosen category.
- **Logical channel number:** Some channels have their own channel numbers, and others don't. With this option enabled, the receiver uses the proper numbers. Channels that don't have proper numbers are numbered from 1000. With this option disabled, channels are numbered in the order in which they are found.
- **HD service grouping:** With this option enabled, HD channels are grouped at the top of the channel list.
- **Copy Service:** Channels are associated with the dish connector that was used when scanning for them. If the first dish connector is linked with the second one, it's usually best to associate all channels with both dish connectors. Use this function to duplicate the channels associated with the first dish connector so that the second one is also associated with them, or vice versa.

4.2 TV Programme Guide

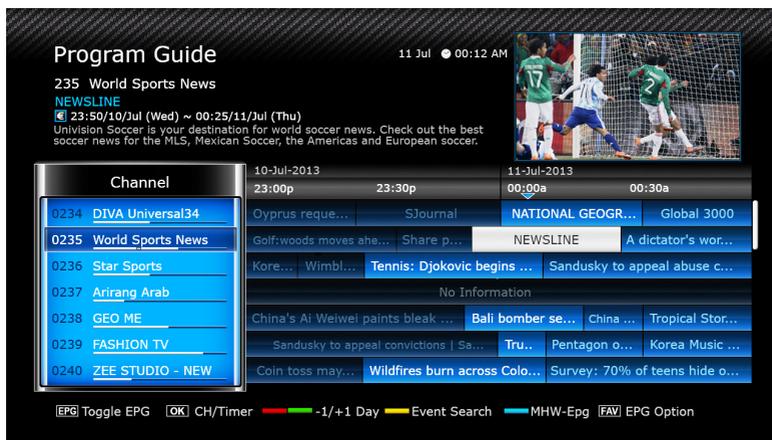

The TV programme guide (EPG) provides schedule information for current and upcoming TV programmes. Before using the programme guide, make sure that the clock is set correctly under **Settings > Time Setting**.

Press the EPG button to open the programme guide. Use the navigation buttons to browse the channel timeline.

Skip backward or forward by a day: Press the red button or the green button.

Change the timeline view: Pressing the EPG button alternates the timeline view between channel-based view and time-based view.

Change the time unit: Press the FAV button and set EPG Time scale shorter or longer.

View a programme's information: Press the INFO button on a programme entry.

Schedule a programme to watch: Select a programme entry and choose Play.

Schedule a programme to record: Select a programme entry and choose either Once Record or Series Record. For details, see Scheduling TV Recordings Using the Programme Guide on page 39.

Cancel a scheduled event: Select a programme entry that is scheduled to watch or record.

Search for programmes: Press the yellow button. Choose Search event name and enter search criteria. It is also possible to search by programme genre. Choose Content Code and choose a genre.

Programme Guide Preferences

While most TV stations provide programme information for only a couple of days in each transponder, some TV stations, such as Canal+ and Sky, use a dedicated transponder to provide programme information for 7 or more days. Press the blue button and determine which type of programme guide to use.

It takes a rather longer time for the receiver to get programme information from the MediaHighway programme guide due to the large amount of information. Users can set the receiver to access the MediaHighway programme guide when the receiver turns on, to save time. Press the FAV button and set Start MHW-Epg Automatically to On.

Note

The MediaHighway programme guide may be not available, depending on the country.

A long-term programme guide needs more memory space, which may reduce the receiver's performance. Use the built-in hard drive or a flash drive to save memory space. Press the FAV button, choose **Save EPG Data to Device**, and then determine which USB port's flash drive to use for saving of programme guide information.

4.3 Controlling Audio

When watching a channel, press the yellow button to control audio using these options:

- **Audio Track:** A TV programme may provide audio in two or more languages. Choose a different audio language if available.
- **Sound Mode:** Generally, an audio track has two sound channels. Determine which sound channel to use.
- **Sound Level:** The volume may vary depending on channel. Use this to make the volume even at every channel. With this set to **High**, for example, the volume is automatically adjusted to the level that is higher 30% than the current channel's.

4.4 Displaying Subtitles

When the subtitle symbol  is highlighted on the programme information dialogue box, it indicates that subtitles are available in one or more languages for the current programme. Press the  button and choose a subtitle language to display subtitles.

4.5 Watching Two Channels Simultaneously

Users can simultaneously watch two different channels with one channel shown in an inset window. It is also possible to watch a channel while playing a recording.

Press the  button, and a window appears at a corner of the screen, displaying another channel. Pressing the  button again displays the two pictures side by side at the same size. To close the window, press the  button again.

Change channels for the foreground picture: Press the  button and select a channel from the channel list that appears.

Swap the background picture with the foreground picture: Press the  button.

Change the location of the foreground picture: Press the P or P button.

4.6 Viewing Teletext


The teletext symbol  highlighted on the programme information dialogue box indicates that teletext pages are available with the current channel. Press the  button to display the teletext page.

Each teletext page has a page number. Enter a page number to view a different teletext page.

4.7 Watching Pay Channels

Pay channels are encrypted to prevent non-subscribers from watching them. Make sure to buy the correct pay-TV card, and CA module if necessary, to watch pay channels that are available.

This receiver has four slots on the right side of the front. Open the flap by pulling the right edge. The upper two slots accommodate Conax pay-TV cards, and the lower slots accommodate CA modules.

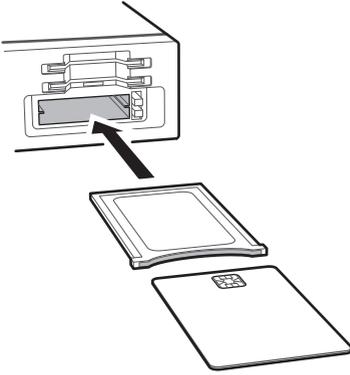

To watch Conax-scrambled pay channels, insert a Conax pay-TV card into the card slot. To watch non-Conax channels, insert a pay-TV card into a CA module, and then insert the CA module into the CAM slot.

To view the information about the pay-TV card, open the apps screen and select **Manager > CAS**. Select the slot in which the pay-TV card or CA module is installed.

4.8 Watching Subchannels

Particular channels, such as sports channels or film channels, may have subchannels (multi-feed). For example, a film channel may use subchannels to air a single film with regular minutes-long intervals at the same time.

The subchannel symbol  highlighted on the programme information dialogue box indicates that the current channel has multiple subchannels. Press the blue button, and a list appears showing available independent programmes. Select a programme to watch it.

4.9 Setting Up Timers

Wake-Up Timer

This receiver can be set to turn on at a specific time and tune in to a specific channel. Open the apps screen and select **Settings > Time Setting**. Determine how frequently to run the wake-up timer by setting **Wake Up Mode** to anything other than **Off**. According to this setting, specify the date, days of the week, time, and channel.

Sleep Timer

This receiver can be set to turn off at a specific time. Open the apps screen and select **Settings > Time Setting**. Determine how frequently to run the sleep timer by setting **Sleep Mode** to anything other than **Off**. According to this setting, specify the date, days of the week, and time.

4.10 Managing Channels

Press the OK button to open the channel list, and press ▲.

Sort channels: Repeatedly pressing the red button sorts channels by a different category.

Search for channels: Press the yellow button and enter search criteria using the on-screen keyboard.

Lock or unlock channels: Press the blue button and select **Lock/Unlock Services**. Select one or more channels. Whenever a channel is selected, it appears in the list of locked channels on the middle of the screen. Selecting a channel from the list of locked channels unlocks it.

Rearrange channels: Press the blue button and select **Move Services**. Select one or more channels. Place the focus on a channel entry to move the selected channels above it, and then press the green button. If the **Logical channel num-**

ber option is active, however, channels are impossible to move. For information of this option, see Channel List Preferences on page 30.

Delete channels from the channel list: Press the blue button and select **Delete Services**. Select one or more channels. Press the green button and then confirm to delete them.

Hide channels from the channel list: Press the blue button and select **Skip Services**. Select one or more channels. Whenever a channel is selected, it appears in the list of hidden channels on the middle of the screen. Selecting a channel from the list of hidden channels makes it visible.

Add a new channel: Press the blue button, select **Edit Services**, and then press the green button. Specify the channel details, including frequency and channel name. Select **Yes** when finished.

Modify a channel's attributes: Press the blue button and select **Edit Services**. Select a channel and modify its attributes, such as channel name, for example.

Add channels to a favourites group: Press the blue button, select **Set Favorites**, and then press the green button to display the list of favourites groups. Choose a favourites group, then select one or more channels. Whenever a channel is selected, it appears in the favourites group on the middle of the screen. To select a different favourites group, press the green button and select a favourites group.

Remove channels from a favourites group: Press the blue button, select **Set Favorites**, and then press the green button to display the list of favourites groups. Choose a favourites group, then select one or more channels from the favourites group.

Add a favourites group: Press the blue button, select **Set Favorites**, and then press the green button to display the list of favourites groups. Press the yellow button and enter a group name using the on-screen keyboard.

Rename a favourites group: Press the blue button, select **Set Favorites**, and then press the green button to display the list of favourites groups. Place the focus on a favourites group and press the green button. Enter a new name using the on-screen keyboard.

Rearrange favourites groups: Press the blue button, select **Set Favorites**, and

then press the green button to display the list of favourites groups. Place the focus on a favourites group, press the **FAV** button, and then move it to a new location.

Delete a favourites group: Press the blue button, select **Set Favorites**, and then press the green button to display the list of favourites groups. Place the focus on a favourites group, press the blue button, and then confirm to delete it.

4.11 HbbTV

HbbTV combines TV services delivered via broadcast with services delivered via broadband. HbbTV services include video on demand, interactive advertising, voting, games, social networking, programme-related services, and more.

When watching a channel, a rounding circle may appear in the upper-right corner of the screen to indicate that HbbTV services are available. Press the red button to access the channel's HbbTV services via the Internet.

Note

The receiver must be connected to the Internet to use HbbTV services.
HbbTV services may not be available, depending on the TV station.

5 Recording TV

This digital receiver can record TV programmes onto the built-in hard drive as well as a removable hard drive or flash drive. However, flash drives are not recommended for recording.

The receiver is set to use the built-in hard drive for recording by default. To use a removable hard drive, see Recording Preferences on page 41.

5.1 Recording TV Programmes

Under ideal conditions, users can watch 2 different channels at the same time while recording 3 other channels. When using time-shifting, at most 2 different channels can be recorded simultaneously. For details on time-shifting, see Time-Shifting on page 40.

Press the record button ● to instantly begin recording the current programme.

Scheduling TV Recordings Using the Programme Guide

Use the programme guide to schedule TV recordings. Open the programme guide, and press the OK button on a programme entry scheduled to air later. Either choose **Once Record** to record the programme only once, or choose **Series Record** to record its every episode.

At the scheduled time, the receiver turns on if it is off, and begins recording the programme. Even if the receiver is set to turn off before the time that the recording is supposed to finish, the receiver does not turn off until recording is done.

Manually Scheduling TV Recordings

Manual scheduling of programmes is sometimes needed because the programme guide is not always consistent with the actual broadcasting time. There may be changes in broadcast schedules or delays due to other programming.

Open the apps screen and select **Schedule**.

Add a recording event: Press the green button. Specify the program details, including channel and start time. To display the programme at the scheduled time without recording, set **Type** to **Play**. With **Alarm Confirm Message** enabled, a message appears to notify that the event will start in 5 minutes. Select **Yes** when finished.

View recording events by date: Press the yellow button to open the calendar. Select a date to view its recording events.

Edit a recording event: Place the focus on an event entry, press the **OK** button.

Delete a recording event: Place the focus on an event entry, press the red button, and then confirm to delete it. To clear all events at once, press the blue button.

5.2 Time-Shifting

Time-shifting temporarily records the current programme. Using this feature, users can pause and resume a live programme and even scan through it backward or forward. For example, simply pause or skip backward in the current live programme to replay missed crucial scenes when answering a phone call, when having gone to the bathroom, or when wondering what a character in a drama just mumbled.

Before using this feature, make sure that **TimeShift Start** is set to **Auto** or **Manual** under **Settings > Recording Option**. For details, see **Recording Preferences** on page 41.

Pause the live programme: Press the pause button **⏸**. Press it again to resume.

Skip backward or forward: Press the play button ► to display the progress bar. Press the left or right navigation button. Repeatedly pressing the yellow button changes the skip interval from 10 seconds to 10 minutes.

Jump to the beginning of the time-shift recording: Press the previous button ◀.

Return to the live programme: Press the stop button ■.

5.3 Playing Recordings

Press the playlist button ▲ to access the recordings stored on removable storage devices. For details, see *Playing Recordings and Videos* on page 45.

Note

TV recordings cannot be played by any receiver other than the receiver that made them.

5.4 Recording Preferences


Open the apps screen and select **Settings > Recording Option**.

- **Extra Recording Time Before Start:** It may be good to begin recording a few minutes earlier than the scheduled start time to avoid missing the beginning of a programme. Specify how much earlier the receiver should begin recording.
- **Extra Recording Time After Finish:** It may be good to finish recording a few minutes later than the scheduled end time to avoid missing the end of a programme. Specify how much later the receiver should finish recording.
- **TimeShift Start:** With this set to **Auto**, the receiver begins time-shift recording whenever changing channels. With this set to **Manual**, pressing the pause button ■■ begins time-shift recording. With this set to **Off**, time-shifting is disabled.

- **TimeShift Duration:** Specify the maximum duration for time-shift recording. For example, if this is set to 30 minutes, only the last 30 minutes of the programme are temporarily preserved for playback.
- **Record Device:** Determine which storage device to use for recording by default.

6 Playing Media Files

This digital TV receiver can play not only TV recordings but also many kinds of media files, including photos, music, and videos. Connect a removable hard drive or flash drive to one of the receiver's USB ports.

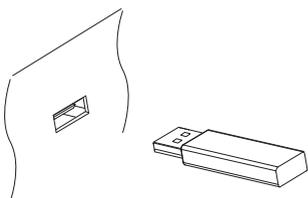

6.1 Managing Storage Devices

To manage removable storage devices connected to the receiver, open the apps screen and select **Manager > Storage Manager**.

View a storage device's state: Choose **Current Device** and select a storage device.

Format a storage device: Storage devices must be formatted in FAT32 or NTFS for use with this receiver. Choose **Current Device** and select a storage device. Choose **Format**, choose **File System**, and then choose a file system. Select **Format** and then confirm to start formatting.

Test the speed of a storage device: Choose **Current Device**, select a storage device, and then press the green button.

Open the file list of a storage device for playback: Choose **Current Device**, select a storage device, and then select **Play List**.

Remove a removable storage device from the receiver: Choose **Current Device** and select a removable storage device. Press the red button and then confirm to remove it.

Check a storage device: Choose **Current Device**, select a storage device, and then choose **Storage Check**. If any faults are found, they are automatically repaired.

Access a shared folder on a computer: Choose **Current Device** and select **Network Drive**. Choose **Network Setting**, choose **Folder**, and then specify the path to the folder. A good example of shared folder paths is "192.168.1.25/media".

View the state of the user-available memory: Choose **Current Device** and select **User**.

6.2 Managing Files

Press the playlist button ▲ to access the removable storage devices connected to the receiver.

Display only files of a specific type: The chosen file type is displayed on the top left of the screen. Press the left or right navigation buttons to see files of a different type. To display all files, regardless of file type, choose **Play List**. **Imported Files** stands for videos except TV recordings.

View files on another storage devices: Press the playlist button ▲ and choose a different storage device.

Sort files: Press the yellow button and choose a category.

Create a folder: Press the blue button and select **New Folder**.

Rename a file or folder: Place the focus on a file or folder, press the blue button, and then select **Rename**. Enter a new name using the on-screen keyboard.

Move files or folders into another folder: Select one or more files or folders using the red button, and press the blue button. Select **Move to Folder** and choose a subfolder or the upper folder.

Copy files or folders onto another storage device: Select one or more files or folders using the red button, and press the blue button. Select **Copy to Device** and choose a different storage device.

Delete files or folders: Select one or more files or folders using the red button, and press the blue button. Select Delete and confirm to delete them.

6.3 Playing Recordings and Videos

Select one or more recordings or videos using the red button, and then press the OK button to play them.

Note

Some videos may not play properly, depending on how they are encoded.

Pressing the play button ► displays the progress bar. Use the progress bar to navigate through the video. To hide the progress bar, press the play button ► again.

Pause and resume playback: Press the pause button ||, and press it again to resume.

Skip backward or forward: Press the left or right navigation button. To continuously skip, press and hold these buttons. Repeatedly pressing the yellow button changes the skip interval from 10 seconds to 10 minutes.

Skip to a specific point: Press the play button ► to display the progress bar, and then enter a number.

Play fast forward or backward: Press the forward button ►► or the back button ◀◀. Repeatedly pressing these buttons changes the playback speed.

Skip to the previous or next recording or video: Press the previous button ◀ or the next button ▶.

Add a bookmark to a recording: When playing a recording, users can add bookmarks to the recording for easier navigation. Press the red button to place a vertical marking bar at the current point on the progress bar. Bookmarks are preserved with the recording for later use.

Note

Only TV recordings can be bookmarked.

Jump to a bookmark: Press the green button.

Remove a bookmark: Jump to a bookmark using the green button, and then press the red button to remove the bookmark.

Change subtitle display: When a video is playing, press the **MENU** button and change subtitle display options, such as letter size and colour. For details on how to add font files, see Using Different Fonts on page 60.

Note

SMI and SRT subtitle formats are only supported by the receiver.

6.4 Viewing Photos

View the previous or next photo: Press the left or right navigation button.

Start slideshow: Press the red button. To pause and resume the slideshow, use the pause button **||**.

Slideshow Preferences

On the photo list screen, press the green button.

- **Slide Time:** Adjust the slideshow speed.
- **Repetition:** Determine whether or not to repeat slideshows.
- **Title:** Determine whether or not to display file names.
- **Downscale:** Determine whether or not to display a reduced size.

Set **Save and Exit** to **Yes** to finish.

6.5 Playing Music

Select one or more songs using the red button, and then press the **OK** button to play them.

Skip to the previous or next song: Press the previous button ◀ or the next button ▶.

Shuffle or repeat playback: Press the red button. Repeatedly pressing the red button changes the play mode.

- [R]: Songs are randomly played.
- [A]: Songs are played only once.
- [A]: All songs are repeated.
- [1]: The current song is only repeated.

Add songs to the current playlist: Press the green button. Select more songs using the red or green button, and then press the yellow button.

Remove a song from the current playlist: Place the focus on a song entry and press the yellow button.

6.6 Playing Media files from Other Devices

This receiver can play media files from computers or other DLNA-enabled devices, such as TVs and tablets, connected to the receiver via a network. For example, when a computer and the receiver is connected to the same network, the receiver accesses the computer to play the computer's media files, or vice versa.

Accessing Other Devices

Open the apps screen and select **Media > Remote Play+**. The file list screen appears with the list of detected devices. Select a device and then select a file to play it.

For details on how to play videos, see *Playing Recordings and Videos* on page 45, for music, see *Playing Music* on page 46, and for viewing photos, see *Viewing Photos* on page 46.

Allowing Other Devices to Access the Receiver

Open the apps screen, select **Manager > Media Server**, and then select **Start**.

When **Start Type** is set to **Auto**, other devices can access the receiver at any time when the receiver is on.

7 Apps

Press the MENU button to open the apps screen. Most apps require an internet connection for proper operation.

7.1 Web Browser

Use the Web Browser app to surf the Internet.

Note

The Web Browser cannot play flash video, which is heavily used on the web.

Pressing the MENU button displays a toolbar, including a web address field and several icons, at the bottom of the screen.

Viewing a Webpage

Web Browser takes up the lower part of the screen so that users can watch live TV on the upper part.

Adjust the vertical view size: Press the red button or, alternatively, press the MENU button and select the vertical view icon . Repeatedly pressing the red button changes the view size from full screen to half and then to quarter.

Adjust the horizontal view size: Press the green button or, alternatively, press the MENU button and select the horizontal view icon .

Zooming in a webpage: Press the yellow button.

Zooming out a webpage: Press the blue button.

Navigating Webpages

A pointer is available to help users navigate webpages. Use the navigation buttons to move the pointer. To see another webpage, move the pointer over a link and press the OK button.

Enter a web address: Press the MENU button, select the web address field, and then enter a web address using the on-screen keyboard.

Refresh a webpage: Press the MENU button and select the refresh icon .

Halt a webpage from downloading: Press the MENU button and select the stop icon .

Move between the series of webpages that have already been viewed: Press the MENU button and select the back icon  or the forward icon .

View the web browsing history: Press the RECALL button to display the list of recently-visited webpage. Select a webpage to open it.

Bookmarks

Bookmark the current webpage: Press the FAV button and press the red button. A bookmark shortcut to the webpage is created in the Web Browser app folder.

Open a bookmarked webpage: Press the FAV button to display the list of bookmarked webpages. Alternatively, press the MENU button and select the bookmark icon . Select a bookmark to open it.

Delete a bookmark: Press the FAV button and place the focus on a bookmark. Press the yellow button and confirm to delete it.

Edit a bookmark: Press the FAV button and place the focus on a bookmark. Press the blue button and edit the web address using the on-screen keyboard.

Set the current webpage as home page: Press the FAV button and press the green button.

Open the home page: Press the MENU button and select the home page icon .

Entering Text

Switch to a different language keyboard: Press the MENU button and select the keyboard icon . A list appears, showing available keyboard layouts. Choose a keyboard layout, and then choose a keyboard language. Restart the Web Browser to put the chosen keyboard into use.

Switch between the numeric keypad and the normal keyboard: Press the MENU and press the green button.

Enter text into a field: When the pointer is over a text field, pressing the OK button displays available typing actions. Choose **Input Text** and enter text using the on-screen keyboard.

7.2 YouTube

Use the YouTube app to watch videos from the YouTube website.

View videos in a specific category: Press the green button and choose a category.

Search for videos: Press the yellow button and enter search criteria using the on-screen keyboard.

Download a video: Place the focus on a video entry and press the record button .

View the list of downloaded videos: Press the red button.

Playing Videos

Select a video from the list of videos to play it.

Note

Some videos may not play properly, depending on how they are encoded.

View in full screen: Press the OK button. To exit full screen, press it again.

Pause and resume playback: Press the pause button **⏸**, and press the play button **▶** to resume.

Skip backward or forward: Press the back button **◀** or the forward button **▶**

7.3 Free TV+

Free TV+ allows users to view videos from a variety of video-sharing web services, such as Dailymotion. Users can either view videos online or download them for later enjoyment.

7.4 Internet TV+

Use Internet TV+ to watch internet TVs.

Tune in to a TV station: Select a TV station.

View in full screen: Press the blue button. To exit full screen, press it again.

Add a TV station: Press the red button. Specify the TV station's details, including name and web address, and then select **Add** to finish.

Note

The web address must include "http://" and indicate the media itself, not the webpage that contains it.

Edit a TV station: Place the focus on a TV station entry and press the green button. Change the details, and select **OK** to finish.

Delete a TV station: Place the focus on a TV station entry, press the yellow button, and then select **Yes**.

Clear all TV stations: Place the focus on a TV station entry, press the yellow button, and then select **All**.

7.5 Internet Radio+

Use Internet Radio+ to listen to internet radios.

Tune in to a radio station: Select a radio station.

Add a radio station: Press the red button. Specify the TV radio's details, including name and web address. Select **Add** when finished.

Note

The web address must include "http://" and indicate the media itself, not the webpage that contains it.

Edit a radio station: Place the focus on a radio station entry and press the green button. Change the details, and select **OK** to finish.

Delete a radio station: Place the focus on a radio station entry, press the yellow button, and then confirm to delete it.

Clear all radio stations in a category: Press the blue button.

Add a category: Press the **INFO** button, enter a category name, and then select **Add** to finish.

Delete a user-added category: Place the focus on a user-added category, press the **RECALL** button, and then confirm to delete the category and all the radio stations in it.

7.6 RSS News

Use the RSS News app to view frequently updated information from websites, such as blog entries and news headlines.

Add a new RSS subscription: Press the red button. Specify the RSS source's details and web address, and then select **Add** to finish.

View feeds from an RSS subscription: Select an RSS subscription. To view more of a longer RSS feed, press the right navigation button and use the up and down

navigation buttons to scroll through it. To select another RSS subscription, press the MENU button.

Edit an RSS subscription: Place the focus on an RSS subscription entry and press the green button. Change the details, and select OK to finish.

Delete an RSS subscription: Place the focus on an RSS subscription entry and press the yellow button.

Clear all RSS subscriptions: Press the blue button.

7.7 User Data

Some internet-based apps, including Internet TV+, requires users to enter web addresses. Typing a long web address using the remote control would annoy users. As a solution to this problem, the User Data app provides add-ons available for those apps.

Choose a target app: Choose an app from among applicable ones that are displayed when this app starts. To choose a different app after choosing one, use the left or right navigation buttons.

Download and install web addresses: Select one or more add-on entries using the OK button, and press the red button to start downloading.

7.8 TV Portal+

TV Portal+ is a web portal, run by this receiver's manufacturer, that brings together web content dedicated for consumer electronics from diverse websites.

There are multiple web categories, including news and multimedia.

Use the navigation buttons to navigate the web categories and the OK button to select an item. Press the RECALL or EXIT button to return to the previous screen.

Note

Web categories and items in each category may change.

7.9 Torrent Player

Many people use μ Torrent, a peer-to-peer file sharing program, to share media files. Torrent Player can communicate with μ Torrent on a computer to play media files downloaded by μ Torrent.

Before using Torrent Player, make sure that μ Torrent is installed on a computer on the same network as the receiver.

Start Torrent Player, and a list appears showing computers on which μ Torrent is running and computers that have been connected to Torrent Player. Select a computer to connect it to Torrent Player. If this is the first connection, enter the number displayed on the receiver's screen into μ Torrent's dialogue box.

Selecting a media category displays a list of files of the same type that are currently managed by μ Torrent. Select a media category, and then select a file to play it.

The **Torrent** category displays the torrents list. Selecting a torrent shows all the files contained in it. Select a file to play it.

Note

It is not possible to play files that are not completely downloaded.

7.10 Weather Forecast

Use the Weather Forecast app to get weather forecasts for thousands of places around the world.

Add a city: Press the red button and enter search criteria using the on-screen keyboard. Select a city from search results.

Clear the search history: Press the green button.

View another city's weather: Use the left and right navigation buttons or, alternatively, press the yellow button and select one from the list of user-chosen cities that appears.

Set a city as start point: Place the focus on a city entry and press the blue button.

7.11 PlugIn

Users can download and install various apps provided by this receiver's manufacturer.

Download new apps: Open the apps screen and select **Download > PlugIn**. A list appears showing new available apps. Select one or more apps using the **OK** button, and press the red button to start downloading.

Play an app: Open the apps screen and select **PlugIn**. Place the focus on an app and press the green button.

Delete an app: Open the apps screen and select **PlugIn**. Place the focus on an app and press the yellow button.

PlugIn Server Settings

The PlugIn server's web address may need to be reconfigured properly. For information about the PlugIn server, contact the local distributor.

Open the app screen and select **Download > Setting**. Place the focus on **PlugIn Server**, press the red button, and then enter a new web address.

8 Preference Settings

8.1 Language Settings

Open the apps screen and select **Settings > Language Setting**.

- **Menu Language:** Determine what language to use for the interface.
- **Audio Language:** A TV programme may provide audio in two or more languages. Determine what audio language to use by default.
- **Audio Language 2:** Determine what audio language to use as an alternative when the default language is not available.
- **Subtitle Language:** A TV programme may provide subtitles in one or more languages. Determine what subtitle language to use by default.
- **Subtitle Language 2:** Determine what subtitle language to use as an alternative when the default language is not available.
- **Teletext Language:** A TV channel may provide teletext pages in one or more languages. Determine what teletext language to use by default.

8.2 Network Settings

A wired network connection is required to perform internet tasks.

- Using media apps, such as Weather Forecast and Free TV+
- Accessing a computer to play media files stored on it
- Acquiring software updates

Open the apps screen and select **Settings > Network Setting**.

It may be more convenient to set the router for dynamic IP addresses so that the receiver can automatically connect to the network. Turn on DHCP if DHCP

is enabled on the router. If DHCP is not available, specify the network details, including IP address and gateway.

Proxy Server Settings

If a proxy server is used for internet connections, the settings for the proxy server must be configured properly. Open the apps screen, select **Settings > Network Setting**, and then choose **Proxy Server**. Specify the proxy server's details, including port number and user account.

DDNS Settings

A DDNS account allows the receiver to create a web address that points to the user's local network, so anyone can access the receiver from anywhere in the world.

If a DDNS account is available, configure the DDNS settings properly. Open the apps screen, select **Settings > Network Setting**, and then press the red button. Specify the DDNS account's details, including web address and user account.

8.3 Clock Settings

Open the apps screen and select **Settings > Time Setting**.

- **Time Setting:** With this set to **Auto**, the receiver uses date and time information delivered via broadcast.
- **Local Offset:** Specify the time zone where the receiver is located.
- **Daylight Saving:** To apply daylight saving time, specify the country where the receiver is located.
- **Clock Mode:** Determine which to use between 12-hour and 24-hour clock formats.

For **Wake Up Mode** and **Sleep Mode**, see **Setting Up Timers** on page 36.

8.4 Audio and Video Settings

Open the apps screen and select **Settings > A/V Output Setting**.

- **TV Type:** Determine which TV standard to use.
- **TV Aspect Ratio:** Determine which aspect ratio to use by default.
- **Display Resolution:** Determine which resolution to use by default. Technically, 1080p is better than 1080i, but the difference is only slight to most people.
- **Display Format:** Determine how to display 4:3 pictures on the 16:9 screen, or vice versa.
 - **Pillar Box:** 4:3 pictures fit the height of the 16:9 screen with black bars on the sides.
 - **Full:** 4:3 pictures blow up to fit the width of the 16:9 screen with the top and bottom edges cut off.
 - **Letter Box:** 16:9 pictures fit the width of the 4:3 screen with black bars on the top and bottom.
 - **Pan Scan:** 16:9 pictures blow up to fit the height of the 4:3 screen with the sides cut off.
- **Video Output Mode:** Determine which colour space to use for the SCART output. RGB is much higher quality than CVBS.
- **HDMI Dolby Digital:** Determine whether or not to pass through Dolby audio via HDMI when available.
- **Dolby Digital Default:** Determine whether or not to use Dolby audio when available.
- **Sound Mode:** Generally, an audio track has two sound channels. Determine which sound channel to use by default.
- **Audio Sync Delay:** If the sound and picture don't match up, adjust this until they match.

8.5 System Settings

Open the apps screen and select **Settings > System Settings**.

- **Auto Power Off:** With this enabled, if no action is registered by the receiver for the specified period, the receiver automatically turns off.
- **Info Box Display Time:** Specify how long to display the programme information dialogue box when changing channels.

Using Different Fonts

Users can install truetype font files in the receiver to use them with subtitles and displays.

On the computer, open Windows Explorer to access the receiver. Enter the receiver's IP address into the Address Bar. Once it's connected, move to the "root/var/font" directory. If the "font" directory is not found, create it under the "var" directory. Copy font files into the "font" directory.

Open the apps screen and select **Settings > System Settings**. Choose **User Font File** and choose a font to use it for text display. Additional options for the chosen font appear, as follows:

- **User Font Language:** Choose a language to use the font for it.
- **User Font Size Correction:** Adjust the font size.

To clear all user-installed fonts, press the red button.

8.6 Parental Control

TV programmes are rated according to their level of violence, nudity, and restricted language. It is possible to set the receiver to block programmes rated a certain class or higher to prevent children from watching them. It is also possible to lock specific apps so that children or others can't access them. Users must enter the passcode to watch a blocked programme or access a locked app.

Open the apps screen, select **Settings > Parental Control**, and then enter the passcode.

- **Censorship:** Specify a programme rating.
- **Change PIN code:** Change the passcode. The default is “0000”.
- **System:** With this set to **Lock**, the passcode is required when turning on the receiver.
- **Settings:** With this set to **Lock**, the passcode is required when accessing the **Settings** app.
- **PlugIn:** With this set to **Lock**, the passcode is required when accessing the **PlugIn** app.
- **Play List:** With this set to **Lock**, the passcode is required when pressing the playlist button  to access a removable storage device.

8.7 Maintaining the Digital TV Receiver

The internal flash memory is used for maintaining the preference settings and channel data.

Open the apps screen and select **Settings > System Recovery**. Use these to reset or back up and restore the digital TV receiver.

- **System restore to factory default:** Reset all settings to factory defaults and clear all channels.
- **System restore to stored position:** Restore the receiver using the stored settings and channels.
- **Store system data:** Back up all settings and channels.
- **Delete stored position:** Clear all stored settings and channels.

Sharing Channel Data

It is possible to share the receiver’s settings and channel data with other receivers of the same kind, using a flash drive. Connect a flash drive to one of the receiver’s USB ports.

Open the apps screen and select **Manager > Data Transfer**.

- **Transfer All System data to USB storage:** Export all settings and channel data to the flash drive.
- **Transfer Service data to USB storage:** Export all channel data to the flash drive.
- **Data download from USB storage:** Import settings and channel data from the flash drive.

8.8 Updating the Digital TV Receiver

Software updates for this digital TV receiver become available from time to time. Software updates may improve the receiver's performance or deal with any outstanding issues.

Open the apps screen and select **Manager > System** to check the current version of the receiver. For the website to download the latest update file from, contact the local distributor.

Make sure that the available version is newer than the currently installed version before downloading it. Decompress the update file and copy it into the root directory of a flash drive. Connect the flash drive to one of the receiver's USB ports. A dialogue box appears showing available update files. If the receiver fails to recognize the flash drive, open the apps screen and select **Download > USB Storage**. Select an update file and press the red button. Never turn off the receiver until the update process is complete.

Online Update

Online software updates may be available, depending on the country.

Open the apps screen and select **Download > Software**. A list appears showing available updates. Select one or more items, and press the red button to download and install them.

Software Server Settings

The software server's web address may need to be reconfigured properly. For information about the software server, contact the local distributor.

Open the app screen and select **Download > Setting**. Place the focus on **Software Server**, press the red button, and then enter a new web address. If necessary, change the user account as well, using the green and yellow buttons.

Appendix A

Universal Remote Control

The remote control can expand its capabilities, allowing users to control a TV and DVD player connected to the receiver.

A user can transform the remote control into a universal remote control by entering a 3-digit remote control code for the TV. Turn on the TV, and follow these steps:

1. Find the TV's brand name from the list of remote control codes.
2. Press the **TV** button and the **OK** button simultaneously for 2 seconds. The TV button blinks twice.
3. Enter one of the available codes. If the code is correct, the TV button blinks twice. Otherwise, it gives one long blink. Try the others, within 10 seconds at each attempt, until the TV turns off.
4. Press the **OK** button to finish. The TV button blinks twice.

If all of the codes appear not to work, follow these steps:

1. Press the **TV** button and the **OK** button simultaneously for 2 seconds. The TV button blinks twice.
2. Press the up or down navigation button repeatedly within 10 seconds at each attempt until the TV turns off.
3. Press the **OK** button to finish. The TV button blinks twice.

It is possible to identify what code is currently set for the TV. Press the **TV** button and the **OK** button simultaneously for 2 seconds, and then press the **INFO** button within 3 seconds. The **TV** button blinks as much as the number of each digit of the code. To indicate "0", it blinks 10 times.

Apply the same methods described above for the DVD player.

A.1 TV

A

ADMIRAL	050, 134
AKAI	093, 049, 123
ALBA	068
ALBIRAL	116
ALCATEL	022
AMSTRAD	158, 021
AMARK	243
ANAM	155, 156, 157
ARCENCIEL	028, 039, 043, 145, 081
ARISTONA	099, 049, 050, 019, 142, 149, 078
ARTHUR MARTIN	053, 139, 117, 120, 122, 123, 125, 128
ASA	050, 055, 057, 113, 134
ATLANTIC	099, 111
AUDIOVOX	263
AUDIOSONIC	054
AUSIND	053
AUTOVOX	099, 144, 055, 019, 057, 069

B

BAIRD	083
-------	-----

BASICLINE	006
BAUR	011
BEKO	023, 049
BLAUPUNKT	094, 100, 102, 111, 114
BRANDT	028, 039, 040, 043, 145, 081
BRION VEGA	050
BRUNS	048, 050
BSR	059, 110, 132
BUSH	033, 068, 124, 074

C

CANDLE	257, 270, 276, 343
CENTURY	098, 101, 050, 079, 136
CGE	016, 101, 124, 079, 132, 136
CIHAN	065
CITIZEN	251, 252, 257, 259, 363, 268, 270, 276, 292, 300, 318, 329, 331, 334, 348, 350
CLARIVOX	048, 116
CONDOR	099, 111
CONTEC	087
CONTINENTAL EDITION	028, 039, 040, 043, 145, 081
CROSLEY	101, 050, 109
CEROWN	147

CURTIS MATHES 250, 253, 257, 259, 268,
271, 276, 282, 292, 300, 318,
329, 333, 334, 348, 358

CTC 046

D

DAEWOO 089

DELL 360

DECCA 099, 060, 063, 115, 118

DEGRAAF 036

DIXI 049, 090

DRYNATRON 049

DUAL 099, 141

DUAL-TEC 096, 099, 132

DUMONT 046, 050, 057, 073

E

ELBE 016, 116

ELBIT 065

ELCIT 046, 097, 103, 050, 109, 127,
132

ELMAN 046, 132

ELTA 090

EMERSON 158, 098, 050

ERRES 049, 142

EUROPHON 098, 046, 097, 099, 051, 115,
132

ELECTROHOME 244, 245, 255, 256, 257,
259, 276, 344

F

FERGUSON 146, 040, 041, 150, 057, 061,
116, 149

FIDELITY 099, 149

FINLUX 034, 046, 053, 055, 057, 109,
113, 073, 074, 079

FISHER 015, 048, 050, 052, 109, 136

FORGESTONE 149

FORMENTI 099, 053, 109, 111, 125

FORTRESS 137

FRABA 075

FRONTECH 054

FUJITSU 025

FUNAI 054, 059

G

GATEWAY 245, 250, 256, 257, 259, 271,
276, 284, 285, 286, 290, 313,
322, 323, 324, 335, 339, 340,
353, 358

GBC 109, 132

GEC 099, 060, 109, 115, 134, 088

GELOSO 103, 109, 132, 134, 090

GOLDSTAR 092, 003, 017, 099, 049, 075,
076, 077, 090, 152

GOOMANS 033, 049, 060, 077

GORENJE 066, 136

GRAETZ 001, 058, 109, 122, 123, 128,
129, 130, 134

GRANADA 033, 099, 049, 058, 060, 142,
115, 125, 134

GRUNDIG 094, 100, 057, 058, 108, 112,
114, 082, 204, 206, 212, 217,
222, 239

H

HANSEATIC 033, 047, 099, 049, 109, 139,
111

HALLMARK 257, 259, 276
HANTAREX 097
HEMMERMANN 127
HIFIVOX 028, 039, 043, 145, 081
HINARI 158, 033, 045, 143, 090
HITACHI 014, 033, 034, 036, 099, 145,
056, 109, 139, 110, 067, 117,
132, 134, 084, 091, 081, 088
HYPER 093, 099

I

IMPERIAL 016, 101, 124, 079, 132, 133
INGELEN 001, 058, 109, 122, 128, 129,
130, 134
INKEL 000
INNO HIT 093, 098, 097, 099, 143, 077,
090
INTERFUNK 047, 049, 050, 145, 058, 109,
142, 123, 128, 129, 091
IRRADIO 093, 143, 053, 077, 090
ITT 001, 140, 058, 105, 109, 122,
123, 128, 148, 129, 130, 134,
135, 083, 089

J

JVC 033, 154, 209, 213, 229, 231,
235
JCPENNEY 245, 248, 250, 252, 257, 258,
259, 267, 270, 271, 276, 279,
284, 285, 287, 290, 292, 299,
300, 305, 312, 313, 318, 340,
346, 348

K

KTV 099
KAISUI 006
KARCHER 006
KENWOOD 244, 257, 259, 276
KENDO 098
KENNEDY 144, 019, 109
KORTING 050, 059, 111
KRIESLER 099, 049, 050, 019, 142, 149,
078
LENOIR 099

L

LG 202, 205, 207, 213, 218, 219,
220, 222
LOEWE OPEA 008, 097, 047, 049, 050, 115,
072
LOGIK 118, 149
LUMA 049, 120, 134
LUXOR 058, 139, 117, 120, 123, 129,
135, 083
LXI 250, 253, 259, 266, 267, 268,
271, 276, 282, 292, 313, 358

M

MAGNADYNE 046, 097, 103, 050, 109, 115,
127, 132
MAGNAFON 046, 097, 099, 051, 053, 115
MAGNAVOX 243, 244, 252, 253, 257, 259,
269, 270, 272, 274, 275, 276,
291, 302, 303, 304
MAJESTIC 254, 329, 358
MARANTZ 049
MATSUI 158, 099, 106, 060, 118, 068,
134, 090
McMICHAEL 088

MEMOREX 090
METZ 094, 050, 114, 133, 200, 239
MGA 244, 245, 257, 258, 259, 276,
277, 278, 283, 312, 367
MINERVA 094, 100, 057, 058, 114
MISTRAL ELECTRONICS 149
MITSUBISHI 033, 035, 047, 049, 050, 062,
118, 119, 148, 080, 138
MIVAR 097, 099, 115, 077
MULTITECH 046, 099, 115, 136
MURPHY 134
MAONIS 096, 144, 019, 110, 134
MATIONAL 042, 104, 109

N

NEC 033, 085
NECKERMANN 099, 050, 139, 120, 136
NEI 049
NIKKAI 060
NAD 259, 266, 267, 292, 314, 332,
349
NOBLEX 015
NOBLIKO 098, 046, 099, 053, 057
NOGAMATIC 028, 039, 043, 145, 081
NOKIA 001, 140, 058, 105, 109, 122,
123, 128, 148, 129, 130, 134,
135, 083, 089
NORDMENDE 028, 032, 039, 043, 145, 131,
091, 081

O

OCEANIC 109, 064, 123
ONCEAS 099

OPTONICA 137
ORION 158, 059, 118, 068, 127, 090
OSAKI 060
OSIO 077
OSUME 087
OTTO VERSAND 033, 047, 049, 109, 139

P

P.T ACTTRON 065
PAEL 099, 053
PANASONIC 030, 042, 095, 104, 107, 109,
121, 126, 208, 214, 217, 223,
230, 231
PATHE CINEMA 099, 111, 116, 132
PERDIO 060
PHILCO 016, 030, 101, 050, 109, 124,
079, 132, 136
PHILIPS 009, 010, 013, 018, 024, 099,
049, 050, 019, 142, 148, 149,
078, 088, 200, 202, 211, 212,
213, 219, 225, 226, 227, 233,
237, 238, 231
PHOENIX 099, 053, 109, 111, 125
PHONOLA 099, 049, 050, 019, 142, 149,
078
PIONEER 020, 049, 145, 091
PROTON 247, 257, 259, 276, 289, 319,
355, 356
PRANDONI-PRINCE 098, 097, 053, 115, 134
PREMIER 124
PRINCESS 098, 097, 053, 134
PROTECH 049, 054
PYE 099, 049, 050, 019, 142, 148,
149, 078

Q

QUASAR 046, 097, 051, 053, 077
 QUELLE 047, 099, 100, 049, 053, 055,
 057, 058, 111, 112, 113, 114,
 118, 123, 073, 074, 128

R

RADIOLA 099, 049, 050, 019, 142, 149,
 078
 RADIOMARELLI 046, 097, 103, 050, 109,
 062, 127, 132
 RANK 074
 RADIO SHACK 268, 276, 282, 318, 351, 358
 RBM 074
 RCA 244, 250, 257, 258, 259, 260,
 271, 276, 294, 295, 296, 297,
 298, 301, 306, 313, 315, 316,
 320, 323, 325, 327, 330, 337,
 338, 340, 342, 352, 354, 358,
 359
 REDIFFUSION 062, 123, 134, 110
 REX 096, 144, 019, 141, 069, 134
 ROBOTRON 048, 050
 RFT 048, 050
 SABA 028, 031, 032, 037, 039, 040,
 043, 097, 050, 145, 115, 120,
 086, 091, 081

S

SAISHO 158, 099, 118, 119, 068, 090
 SALORA 053, 139, 117, 120, 122, 123,
 125, 128, 135, 083
 SAMBERS 046, 097, 051, 053, 115, 077
 SAMPO 121

SAMSUNG 015, 026, 099, 054, 077, 136,
 090, 151, 153, 201, 202, 203,
 205, 210, 213, 215, 220, 222,
 226, 228, 231, 232, 238, 234
 SANYO 001, 002, 005, 033, 044, 048,
 060, 113, 118, 071, 054, 136
 SBR 049, 142, 148, 149, 088
 SCHAUB LORENZ 001, 058, 109, 122, 123,
 128, 129, 130, 134
 SCHNEIDER 096, 099, 049, 050, 052, 019,
 141, 109, 142, 125, 149, 078,
 132
 SCOTT 247, 257, 259, 261, 262, 263,
 264, 276, 280, 347
 SEG 046
 SEI 158, 059
 SELECO 016, 096, 144, 019, 141, 110,
 069, 134
 SEARS 243, 244, 248, 249, 250, 253,
 257, 259, 266, 267, 268, 271,
 273, 276, 280, 281, 282, 283,
 292, 293, 312, 313, 321, 326,
 345, 348, 350, 358
 SHARP 033, 087, 137, 209, 223, 224
 SIAREM 046, 097, 050, 109, 115
 SICATEL 116
 SIEMENS 005, 094, 036, 100, 111, 114,
 087
 SIERA 099, 049, 050, 019, 142, 149,
 078
 SILVER 054
 SINGER 016, 046, 050, 109
 SINUDYNE 158, 046, 050, 059, 109, 127
 SONOKO 049, 090
 SONY 146, 007, 027, 033, 038, 118,
 203, 205, 209, 210
 SOUNDESIGN 252, 257, 259, 263, 270, 276

STERN 096, 144, 019, 110, 069, 134
SYNTAXOLEVIA 276

T

TANDBERG 133
TANDY 099, 060, 137
TASHIKO 002, 033
TATUNG 099, 060, 063, 065, 115, 118
TEC 096, 099, 132
TELEAVIA 028, 039, 040, 043, 145, 091, 081
TELEFUNKEN 028, 041, 145, 150, 086, 091
TEKNIKA 243, 247, 248, 249, 251, 252, 253, 254, 257, 258, 259, 263, 270, 276, 280, 292, 300, 312, 317, 318, 329, 336, 343, 346, 348, 358
TELETECH 090
TELEVIDEON 099, 053, 109, 111, 125
TENSAI 049
THOMSON 012, 028, 032, 039, 040, 043, 145, 091, 081
THOM-FERGUSON 014, 040, 041, 054, 150, 057, 061, 116, 149, 086
TOCOM 029
TOSHIBA 004, 016, 033, 070, 074, 206, 209, 224, 232
TRANS CONTINENTS 098, 097, 053, 134
TRIUMPH 158

U

UHER 052, 111, 125
ULTRA VOX 098, 046, 099, 050, 109, 120
UNIVERSUM 092, 034, 054, 077
UNIVOX 116
UNIVERSAL 284, 290, 353

V

VEGAVOX 079
VOXSON 050, 134
VIZIO 240, 241, 242

W

WATSON 111
WATT RADIO 046, 099, 051, 109, 116, 127
WEGA 033
WESTINGHOUSE 099, 111

Y

YAMAHA 244, 257, 258, 259, 276, 317, 346
YOKO 099

Z

ZANUSSI 096, 144, 019, 110, 069, 134
ZOPPAS 096, 144, 019, 110, 134
ZENITH 246, 254, 257, 265, 276, 307, 308, 309, 310, 319, 328, 329, 331, 341, 357

A.2 DVD Player

A

AIWA	002
AKAI	007, 044
ALBA	036
ANAM	074
ANSONIC	152
AMSE	051
APEX	003, 011, 025, 037, 039, 044, 047, 048, 054, 040
AUDIOSONIC	044
A-TREMD	061

B

BROKSONIC	000
BULE SKY	158, 036
BUSH	067, 044, 000, 152

C

CAT	036
CLASSIC	051
CELESTIAL	158
CENTREX	158
CINEULTRA	036
CONIA	158
COMBRIDGE AUDIO	088
CROWN	044
CYBERCOM	152
CYBERRHOME	061

D

DAEWOO	005, 045, 052
DAEWOO INTERNATIONAL	036
DEC	036
DENON	041, 050
DENVER	036
DENZEL	083
DIGITREX	011, 158
DIK	152
DK DIGITAL	152
DUAL	083, 152

E

ELTA	004, 010, 044
ENZER	083
EMERSON	013, 019, 032, 067

F

FISHER	015
FUNAI	019, 032

G

GE	044, 062
GOLDSTAR	013, 067
GOLEMANS	044
GO-VIDEO	012, 016, 021
GRADIENTE	008

H

HARMAN/KARDON	023
---------------	-----

HITACHI 001, 035, 004, 070, 067, 083

HITEKER 011, 158

HOHER 152

I

INTEGRA 057

J

JEKEN 036

JVC 014, 028, 067

K

KENWOOD 036, 041

KENDO 036

KISS 083

KLH 044

KONKA 042, 049, 056, 063

KOSS 008

L

LASONIC 006

LECSON 088

LENCO 036, 152

LENOXX 044

LIFETEC 152

LG 013, 072, 067, 059, 039

LUXMAN 004, 070

M

MAGNAVOX 026, 027

MARANTZ 013, 026, 027

MDS 036

MEDION 152

MEMOREX 018

MICROSOFT 020

MICROSTAR 152

MINTEK 044

MITAUBISHI 055

MONYKA 083

MUSTEK 051

N

NAD 013, 065

NAKAMICHI 058

NEXIA 036

NORDMENDE 152

MBO 044

NEUFUNK 083

O

ONKYO 056

OMNI 044, 036

OPTIMUS 001

ORITRON 008

P

PALSONIC 158, 067

PANASONIC 041, 068

PACIFIC 018, 152

PHILIPS 026, 027, 064, 045

PHONOTREND 036

PIONEER 001

PROLINE 008, 158, 085

PROSCAN 062

PROSONIC 036

R

RADIOSHACK 038, 066, 067

RAITE 083

REC 067

REOC 053

REVOY 036

RCA 038, 044, 062, 066, 067

ROADSTAR 067, 044, 036

ROTEL 067

S

SAMSUNG 012, 021, 070, 071

SAMPO 022

SANSUI 000

SANYO 015

SCOTT 158

SEG 029, 083

SILVASCHNEIDER 152

SHARP 020, 067

SHANGHAI 158

SHERWOOD 009, 073

SHINCO 044

SINGER 044

SM ELECTRONIC 044

SONY 033, 034, 004, 070

SOUNDWORKS 088

SYLVANIA 019, 032

SYLMPHONIC 019, 032

SVA 158

T

TEAC 001, 067

TECHNICS 041, 068

TEASAI 044

TEVION 018, 031, 046, 053, 060

THETA DIGITAL 001

TOSHIBA 000, 017, 024, 026

TOKAI 083

U

UMAX 044

UNITED 035

UNIVERSUM 067

V

VOXSON 152

W

WELKIN 152

WESDER 036

WHARFEDALE 059, 085, 088

WINDY SAM 040, 070

X

XMS 067

Y

YAMAHA 041, 043

YAMAKAWA 030, 083

Z

ZENITH 068, 013, 069, 067

Appendix B

Legal Notices

B.1 Copyright

The intellectual property found herein belongs to the manufacturer of this product. No part of this document may be distributed or reproduced in any form, or by any means, without prior written permission from the manufacturer.

B.2 Warranty

The manufacturer warrants that, with normal use and maintenance, the product will be free of faults and defects in design and material during the warranty period.

B.3 Trademarks



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

B.4 Correct Disposal of This Product



This marking shown on the product or its literature indicates that it should not be disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product or their local government office for details of where and how they can dispose this product for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

This product is under continuous development. Due to changes or improvements, some descriptions and illustrations in this guide may differ slightly from the actual product.

2014-02



Full HD Digital Satellite Receiver

S6600HD PVR