

<b>Brand</b>	<b>Model/Bag Type</b>
ELECTROLUX	CLIO
ELECTROLUX	E10
ELECTROLUX	E42n MICROLITE
ELECTROLUX	LITE
ELECTROLUX	Z1610 MICROLITE
ELECTROLUX	Z1620 MICROLITE
ELECTROLUX	Z1630 MICROLITE
ELECTROLUX	Z1641 BOLERO
ELECTROLUX	Z1661 TANGO
ELECTROLUX	Z1800 LITE
ELECTROLUX	Z1805 LITE
ELECTROLUX	Z1810 LITE
ELECTROLUX	Z1820 LITE
ELECTROLUX	Z1830 LITE
ELECTROLUX	Z1835 LITE
ELECTROLUX	Z1840 LITE
ELECTROLUX	Z1845 LITE
ELECTROLUX	Z1850 LITE
ELECTROLUX	Z1854 TANGO
ELECTROLUX	Z1855 LITE
ELECTROLUX	Z1856 CHIC
ELECTROLUX	Z1858 SAMBA
ELECTROLUX	Z1859 CHIC
ELECTROLUX	Z1860 LITE
ELECTROLUX	Z1861 LITE
ELECTROLUX	Z1863 CHIC
ELECTROLUX	Z1865 LITE
ELECTROLUX	Z1867 CLASSIC
ELECTROLUX	Z1868 LITE
ELECTROLUX	Z1869 LITE
ELECTROLUX	Z1870 LITE