

Keysight Technologies

BenchVue Software v2.5 (BV0000A)

Data capture simplified. Click. Capture. Done.

Data Sheet



## Simplified Measurement Viewing, Control and Capture

Keysight BenchVue software for the PC reinvents your bench testing by making it simple to connect and record results with your instruments with no programming. You will derive answers faster than ever by easily viewing, logging and exporting measurement data and screen images with a few clicks from a single environment. Use BenchVue to:

- Visualize multiple measurements simultaneously
- Easily log data, screen images and system state
- Recall past state of your bench to replicate results

Save time with:

- Fast measurement data export in desired formats
- Quickly access manuals, drivers, FAQs and videos

From anywhere:

- Monitor and control your bench from mobile devices

With BenchVue, it's as simple as: click, capture, done.

## Measurement viewing



See your measurements across instruments in one place to quickly correlate measurement activities and obtain actionable insight.



Depending on your measurement task, BenchVue provides extensive data, trace and measurement logging capabilities all from within one piece of software.

## Plug and play instrument control

Connecting and controlling an instrument to BenchVue is as simple as plugging it in and launching the BenchVue instrument application. No programming or separate instrument drivers required.



## Integrated applications

BenchVue consists of different applications tailored to streamline your measurement tasks and are included in every no cost download of BenchVue (BV0000A).



## Available BenchVue apps

App name	No cost version	Optional Pro upgrade
Digital Multimeter	Included in BV0000A	BV0001A
Function Generator	Included in BV0000A	BV0002A
Power Supply	Included in BV0000A	BV0003A
Oscilloscope	Included in BV0000A	BV0004A
Spectrum Analyzer	Included in BV0000A	BV0005A
Data Acquisition Unit	Included in BV0000A	BV0006A
Power Sensor	Included in BV0000A	N/A

## BenchVue capabilities

BenchVue provides a wide array of capabilities depending on the instrument application within BenchVue being used. These capabilities will automatically vary based on the functionality of the instrument types and models connected to your PC running BenchVue software.

## BenchVue Digital Multimeter App

Control your digital multimeter to visualize measurements, perform data logging and annotate captured data.



### Supported functionality

Instrument settings	<ul style="list-style-type: none"> <li>- Measurement function and range selection</li> <li>- Integration time (NPLC/resolution)</li> <li>- Input impedance</li> <li>- Auto zero</li> <li>- Null state</li> </ul>
Data visualization	<ul style="list-style-type: none"> <li>- Chart with annotation, zoom in/out, auto scroll and markers</li> <li>- Histogram (Pro version only)</li> <li>- Table</li> </ul>
Measurement data log	<ul style="list-style-type: none"> <li>- Measurement data logging (1 hour duration)                             <ul style="list-style-type: none"> <li>- Unrestricted logging with Pro version</li> </ul> </li> <li>- Logger control</li> <li>- Limit testing with alerts (Pro version only)</li> </ul>
Export screen image	<ul style="list-style-type: none"> <li>- Clipboard</li> <li>- File (PNG/JPEG/BMP)</li> </ul>
Export data	<ul style="list-style-type: none"> <li>- MATLAB</li> <li>- Microsoft Excel</li> <li>- Microsoft Word</li> <li>- CSV</li> </ul>
Save and recall instrument state	
Benchvue mobile support	


### Supported models (7)

34401A 34405A 34410A 34411A 34450A 34460A 34461A

### Pro version capabilities

- Upgrading to the Pro version (Model # BV0001A) provides histograms, digitizer capability and unrestricted data logging with limit checking and alerts.

## BenchVue Oscilloscope App

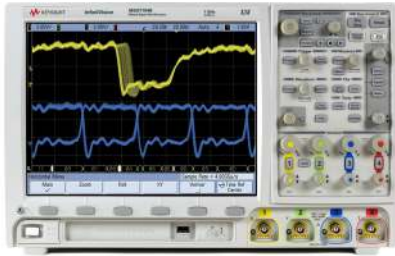

Control your oscilloscope to quickly capture and annotate screen images, record trace data and data log measurements.

### Supported functionality

Instrument settings	<ul style="list-style-type: none"> <li>- Auto scale</li> <li>- Measurements toggle</li> <li>- Run control</li> <li>- Vertical scale and offset</li> <li>- Channel toggle</li> <li>- Trigger controls</li> <li>- Default setup</li> </ul>
Screen image	<ul style="list-style-type: none"> <li>- Get current screen with image options</li> <li>- Auto refresh control</li> <li>- Annotation (drawing/color/font)</li> </ul>
Trace data	<ul style="list-style-type: none"> <li>- Get current traces</li> <li>- Display selection (ch/func/mem/digital bus)</li> <li>- Set requested points</li> </ul>
Measurement data log	<ul style="list-style-type: none"> <li>- Measurement data logging (1 hour duration)                             <ul style="list-style-type: none"> <li>- Unrestricted logging with Pro version</li> </ul> </li> <li>- Logger control</li> <li>- Limit testing (Pro version only)</li> <li>- Data log configuration</li> </ul>
Export data log data	<ul style="list-style-type: none"> <li>- MATLAB</li> <li>- Microsoft Excel</li> <li>- Microsoft Word</li> <li>- CSV</li> </ul>
Export screen images	<ul style="list-style-type: none"> <li>- Clipboard</li> <li>- File (PNG/JPEG/BMP)</li> <li>- E-mail</li> <li>- Microsoft Word</li> </ul>
Export trace data	<ul style="list-style-type: none"> <li>- HDF5</li> <li>- MATLAB</li> <li>- Microsoft Excel</li> <li>- Microsoft Word</li> <li>- CSV</li> </ul>
Save and recall instrument state	
BenchVue Mobile support	

### Supported models (116) (MSO & DSO):

2000 X-Series, 3000 X-Series, 4000 X-Series, 6000 Series, 6000 X-Series, 7000A/B Series, 9000A Series, S-Series

### Pro version capabilities

- Upgrading to the Pro version (Model # BV0004A) provides unrestricted measurement data logging with limit checking and alerts.

## BenchVue Function Generator App



Control your function generator to set waveform properties and load custom arbitrary waveforms from files or drag-and-drop from an oscilloscope.



### Supported functionality

- Output control
- Waveform selection
  - Sine
  - Square
  - Ramp
  - Pulse
  - Arb
  - Triangle
  - Noise
  - PRBS (pseudo-random binary sequence)
  - DC

### Instrument settings

- Waveform: amplitude, offset, frequency, and phase
- Mode select:
  - Modulation:
    - Type: AM/FM/PM/FSK/BPSK/SUM
    - Source (INT/EXT/CH2)
    - Shape (Sin/Squ/Tri/Ramp/Nramp/Noise/PRBS/Arb)
    - DSSC (double sideband suppressed carrier)
    - Depth and AM frequency settings
  - Sweep:
    - Type (linear/log)
    - Frequency set: start/center and stop/span
    - Time set: sweep, hold and return
  - Burst:
    - N cycle mode/gated mode, start phase, number of cycles, and period
- Output:
  - Mode (normal/gated), polarity (normal/inverted) and load (discrete/Hi-Z)
- Trigger:
  - Source (IMM/ext/bus/timer), delay
- Sync output
  - Enable (on/off), polarity (normal/inverted), source (Ch1/Ch2) and mode (normal/carrier)

Export instrument properties to Microsoft Word

Save and recall instrument state


### Supported models (17)

33210A 33220A 33250A 33521A 33522A 33509B 33510B 33511B 33512B 33519B 33520B 33521B 33522B  
33611A 33612A 33621A 33622A

### Pro version capabilities

- Upgrading to the Pro version (Model # BV0002A) provides advanced waveform creation capabilities by linking to Keysight Waveform Builder Pro Software from BenchVue.

## BenchVue Spectrum Analyzer App

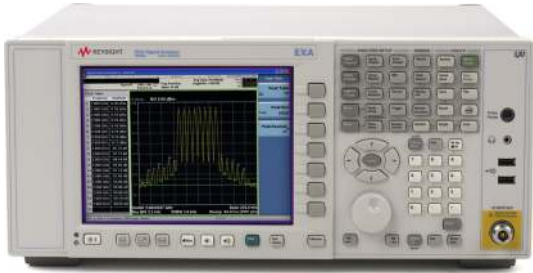

Control your spectrum or signal analyzer to quickly capture and annotate screen images and log trace data.



### Supported functionality

Instrument settings	<ul style="list-style-type: none"> <li>- Frequency</li> <li>- Bandwidth</li> <li>- Amplitude</li> <li>- Sweep</li> <li>- Mode preset</li> <li>- Sweep control</li> </ul>
Screen image	<ul style="list-style-type: none"> <li>- Get current screen with image options</li> <li>- Screen image logging (1 hour duration)                             <ul style="list-style-type: none"> <li>- Unrestricted logging with Pro version</li> </ul> </li> <li>- Annotation (drawing/color/font)</li> </ul>
Trace data	<ul style="list-style-type: none"> <li>- Get current traces</li> <li>- Trace data logging (1 hour duration)                             <ul style="list-style-type: none"> <li>- Unrestricted logging with Pro version</li> </ul> </li> <li>- Save trace data (CSV)</li> </ul>
Export screen images	<ul style="list-style-type: none"> <li>- Clipboard</li> <li>- File (PNG/JPEG/BMP)</li> <li>- E-mail</li> <li>- Microsoft Word</li> </ul>
Export trace data	<ul style="list-style-type: none"> <li>- MATLAB</li> <li>- Microsoft Excel</li> <li>- Microsoft Word</li> <li>- CSV</li> </ul>
Save and recall instrument state	
BenchVue Mobile support	

 
### Supported models (21)

UXA N9040B, PXA N9030A, MXA N9020A, EXA N9010A, CXA N9000A, PSA E444xx, ESA E440xx and E4411B, BSA N9320B, N9322C

### Pro version capabilities

- Upgrading to the Pro version (Model # BV0005A) provides deep memory capture and unrestricted data logging of screen images and trace data.

## BenchVue Power Supply App

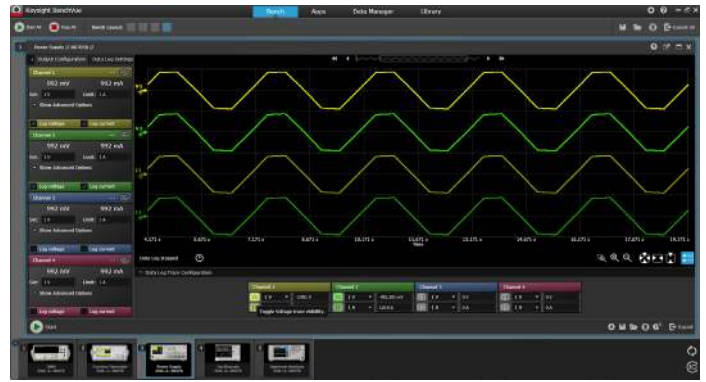

Control your power supply to set parameters, visualize power output and data log changing voltage and current over time.

### Supported functionality

#### Output control

- |                     |                                                                                                                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Instrument settings | <ul style="list-style-type: none"> <li>– Set voltage output and range</li> <li>– Set current limit, limit mode and range</li> <li>– Enable/disable over voltage protection with limits</li> </ul> |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

- |                        |                                                                                                                                                                                                                                                                                                                                                  |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Supply output data log | <ul style="list-style-type: none"> <li>– Output data logging (1 hour duration)                             <ul style="list-style-type: none"> <li>– Unrestricted logging with Pro version</li> </ul> </li> <li>– Logger controls</li> <li>– Enable/disable voltage and current log</li> <li>– Output status alerts (Pro version only)</li> </ul> |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

- |                     |                                                                                              |
|---------------------|----------------------------------------------------------------------------------------------|
| Export screen image | <ul style="list-style-type: none"> <li>– Clipboard</li> <li>– File (PNG/JPEG/BMP)</li> </ul> |
|---------------------|----------------------------------------------------------------------------------------------|

- |             |                                                                                                                                |
|-------------|--------------------------------------------------------------------------------------------------------------------------------|
| Export data | <ul style="list-style-type: none"> <li>– MATLAB</li> <li>– Microsoft Excel</li> <li>– Microsoft Word</li> <li>– CSV</li> </ul> |
|-------------|--------------------------------------------------------------------------------------------------------------------------------|

#### Save and recall instrument state

#### BenchVue Mobile support

### Supported models (44)

E3631A, E3632A, E3633A, E3634A, E3640A, E3641A, E3642A, E3643A, E3644A, E3645A, E3646A, E3647A, E3648A, E3649A, N6700A/B, N6701A, N6702A, N6705A/B, N6950A, N6951A, N6952A, N6953A, N6954A, N6970A, N6971A, N6972A, N6973A, N6974A, N6976A, N6977A, N7950A, N7951A, N7952A, N7953A, N7954A, N7970A, N7971A, N7972A, N7973A, N7974A, N7976A, N7977A

### Pro version capabilities

- Upgrading to the Pro version (Model # BV0003A) provides unrestricted data logging and status alerts.

## BenchVue Data Acquisition Unit App

Control your 34970 or 34972 to data log and visualize measurements in a wide array of display options.



### Supported functionality

Module settings	<ul style="list-style-type: none"> <li>- Slot selection</li> <li>- Mode control (scan, switch, inactive)</li> </ul>
Configure channels	<ul style="list-style-type: none"> <li>- Enable channel                             <ul style="list-style-type: none"> <li>- Toggle</li> <li>- Naming</li> </ul> </li> <li>- Measurement configuration                             <ul style="list-style-type: none"> <li>- Function (DC voltage, AC voltage, period, frequency, 2-wire ohms, 4-wire ohms, temp types B, E, J, K, N, R, S, T, 2-wire RTD, 4-wire RTD, 2.2K therm, 5K therm, 10K therm)</li> <li>- Range</li> </ul> </li> <li>- Scaling                             <ul style="list-style-type: none"> <li>- Toggle</li> <li>- Gain</li> <li>- Offset</li> <li>- Label</li> </ul> </li> <li>- Alarm limits                             <ul style="list-style-type: none"> <li>- Test condition</li> <li>- Test parameters</li> </ul> </li> </ul>
Measurement display options	<ul style="list-style-type: none"> <li>- Data grid</li> <li>- Strip charts</li> <li>- High visibility readout display</li> <li>- Bar meter</li> <li>- Histogram</li> <li>- Alarm light panel</li> <li>- Background settings</li> </ul>
Measurement data log	<ul style="list-style-type: none"> <li>- Measurement data logging (8 hour duration)                             <ul style="list-style-type: none"> <li>- Unrestricted logging with Pro version</li> </ul> </li> <li>- Logger control</li> </ul>
Export screen image	<ul style="list-style-type: none"> <li>- Clipboard</li> <li>- File (PNG/JPEG/BMP)</li> </ul>
Export data	<ul style="list-style-type: none"> <li>- MATLAB</li> <li>- Microsoft Excel</li> <li>- Microsoft Word</li> <li>- CSV</li> </ul>
Save and recall instrument state	

### Supported models (2)

34970A, 34972A

### Pro version capabilities

- Upgrading to the Pro version (Model # BV0006A) provides unrestricted data logging.



## BenchVue Power Sensor App

Control your power sensor to data log and visualize measurements in a wide array of display options.



### Supported functionality

Instrument settings	<ul style="list-style-type: none"> <li>- Preset select (DME, GSM, WCDMA, WLAN, LTE, etc.)</li> <li>- Instrument reset</li> <li>- Channel setup                             <ul style="list-style-type: none"> <li>- Mode, offset, frequency</li> </ul> </li> <li>- Trace setup                             <ul style="list-style-type: none"> <li>- Units, scale configuration</li> </ul> </li> <li>- Measurement setup                             <ul style="list-style-type: none"> <li>- Units, offset, feed setup, alerts, recorder</li> </ul> </li> <li>- Trigger setup                             <ul style="list-style-type: none"> <li>- Mode, source, auto level, delay, slope type</li> </ul> </li> <li>- Gate setup                             <ul style="list-style-type: none"> <li>- Start, length</li> </ul> </li> <li>- Calibration                             <ul style="list-style-type: none"> <li>- Zero, calibration, calibration + zero</li> </ul> </li> <li>- Corrections                             <ul style="list-style-type: none"> <li>- FDO, Gamma, S-parameter</li> </ul> </li> </ul>
---------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Measurement display options	<ul style="list-style-type: none"> <li>- Digital meter view</li> <li>- Analog meter view</li> <li>- Data log view</li> <li>- Trace view with markers and gate</li> <li>- Multilist view</li> <li>- Alert summary</li> </ul>
-----------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Measurement data log	<ul style="list-style-type: none"> <li>- Measurement data logging (1 hour duration)</li> <li>- Logger control</li> </ul>
----------------------	--------------------------------------------------------------------------------------------------------------------------

Export screen image	<ul style="list-style-type: none"> <li>- Clipboard</li> <li>- File (PNG/JPEG/BMP)</li> <li>- E-mail</li> </ul>
---------------------	----------------------------------------------------------------------------------------------------------------

Export data	<ul style="list-style-type: none"> <li>- MATLAB</li> <li>- Microsoft Excel</li> <li>- Microsoft Word</li> <li>- CSV</li> </ul>
-------------	--------------------------------------------------------------------------------------------------------------------------------

Save and recall instrument state

### Supported models (2)

U2021XA, U2022XA

### Pro version capabilities

- Coming in 2015. Upgrading to the Pro version will provide unrestricted data logging.

## BenchVue Mobile


Mobile Apps lets you monitor and respond to long running tests from anywhere. Multimeters, oscilloscopes, function generators, spectrum analyzers and power supplies are all supported from one app.




**BenchVue Mobile** is a mobile app that you can install on an Android or Apple iOS device to control BenchVue bench applications running on your Windows computer. BenchVue Mobile connects to your computer as a client, and requires that your mobile device and computer be connected to the same local network or intranet (behind the same corporate firewall). This network connection can be made via a WiFi connection inside your work location or externally through a VPN connection.

## BenchVue Demonstration Mode

BenchVue includes a demonstration mode that requires no instruments to be connected, making product evaluation quick and easy. Simply download and click “Enable Demo Mode” under the global setting menu to begin exploring BenchVue functionality.

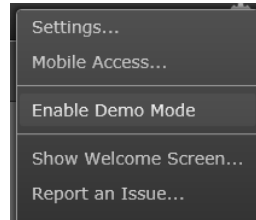

 To assist in the evaluation of BenchVue with physical instruments, BenchVue includes an integrated user manual and getting started guide to make setup quick and easy.

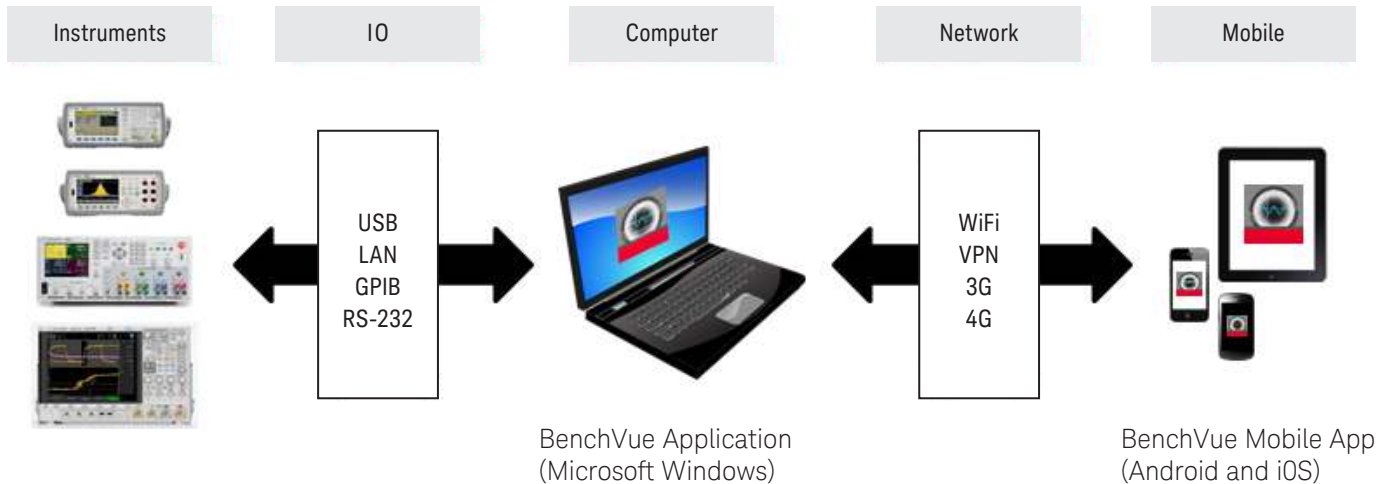

## System and Installation Requirements

PC operating system	
Windows 8 and 7	<ul style="list-style-type: none"> <li>– Windows 8 32-bit and 64-bit (Core, Professional, Enterprise)</li> <li>– Windows 7 SP1 and later 32-bit and 64-bit (Professional, Enterprise, Ultimate)</li> </ul>
Computer hardware	<ul style="list-style-type: none"> <li>– Processor: 1 GHz or faster (2 GHz or greater recommended)</li> <li>– RAM: 1 GB (32-bit) or 2 GB (64-bit) (3 GB or greater recommended)</li> </ul>
Windows XP SP3 32-bit (Professional)	<ul style="list-style-type: none"> <li>– Processor: 600 MHz or faster (1 GHz or greater recommended)</li> <li>– RAM: 1 GB (2 GB or greater recommended)</li> </ul>
Interfaces	USB, GPIB, LAN, RS-232
Display resolution	1024 x 768 minimum for single instrument view (higher resolutions are recommended for multiple instrument view)

### Additional requirements

BenchVue requires a VISA (Keysight or National Instruments) when used to connect to physical instruments. Keysight IO Libraries Suite, which contains the necessary VISA, will be downloaded and installed automatically when BenchVue is installed if needed. IO Libraries Suite information is available at: [www.keysight.com/find/iosuite](http://www.keysight.com/find/iosuite)

### Mobile devices

Apple iPhone, iPad, iPod Touch all models; iOS 6.0 and later.  
 Android phone and tablets; Android 2.3.5 and later.

With BenchVue, it's as simple as:  
**Click. Capture. Done.**

BenchVue software for PC  
 Download cost free at: [www.keysight.com/find/BenchVue](http://www.keysight.com/find/BenchVue)

BenchVue software for mobile devices  
 Find BenchVue Mobile for your respective device by visiting [www.keysight.com/find/BenchVueMobile](http://www.keysight.com/find/BenchVueMobile)



**myKeysight**

[www.keysight.com/find/mykeysight](http://www.keysight.com/find/mykeysight)

A personalized view into the information most relevant to you.

[www.keysight.com/go/quality](http://www.keysight.com/go/quality)

Keysight Technologies, Inc.

DEKRA Certified ISO 9001:2008

Quality Management System

**Keysight Channel Partners**

[www.keysight.com/find/channelpartners](http://www.keysight.com/find/channelpartners)

Get the best of both worlds: Keysight's measurement expertise and product breadth, combined with channel partner convenience.

[www.keysight.com/find/benchvue](http://www.keysight.com/find/benchvue)



For more information on Keysight Technologies' products, applications or services, please contact your local Keysight office. The complete list is available at: [www.keysight.com/find/contactus](http://www.keysight.com/find/contactus)

**Americas**

Canada	(877) 894 4414
Brazil	55 11 3351 7010
Mexico	001 800 254 2440
United States	(800) 829 4444

**Asia Pacific**

Australia	1 800 629 485
China	800 810 0189
Hong Kong	800 938 693
India	1 800 112 929
Japan	0120 (421) 345
Korea	080 769 0800
Malaysia	1 800 888 848
Singapore	1 800 375 8100
Taiwan	0800 047 866
Other AP Countries	(65) 6375 8100

**Europe & Middle East**

Austria	0800 001122
Belgium	0800 58580
Finland	0800 523252
France	0805 980333
Germany	0800 6270999
Ireland	1800 832700
Israel	1 809 343051
Italy	800 599100
Luxembourg	+32 800 58580
Netherlands	0800 0233200
Russia	8800 5009286
Spain	800 000154
Sweden	0200 882255
Switzerland	0800 805353
	Opt. 1 (DE)
	Opt. 2 (FR)
	Opt. 3 (IT)
United Kingdom	0800 0260637

For other unlisted countries:  
[www.keysight.com/find/contactus](http://www.keysight.com/find/contactus)  
(BP-09-23-14)

