


# PRO-ELEC

## INSTRUCTION MANUAL

12" Antique Desk Fan

FT-30MC

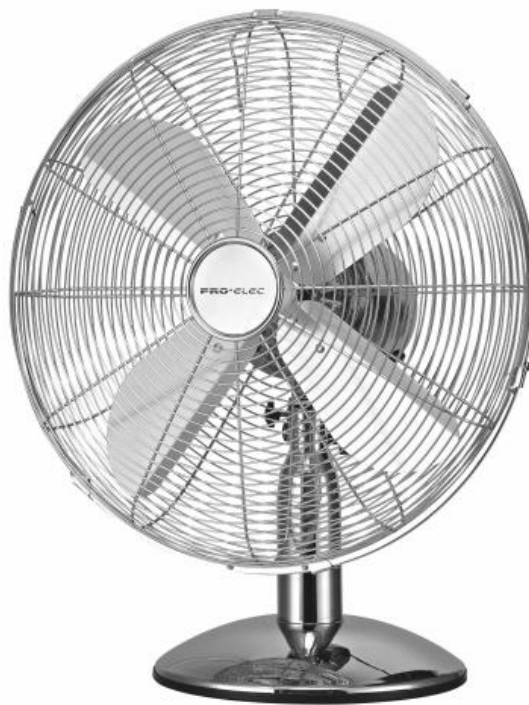


**PLEASE READ INSTRUCTIONS CAREFULLY  
BEFORE OPERATING**

Please read these instructions carefully before connecting your device to the mains. Please pay particular attention to the safety information.

We recommend that you keep the instructions for future reference.

## STRUCTURE

1. Fan Motor
2. Oscillation button
3. Front Cage

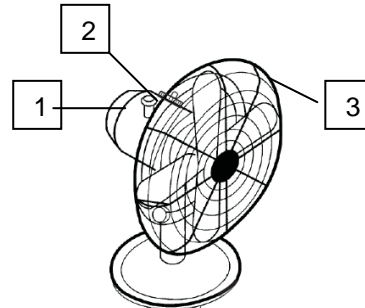

## SAFETY INFORMATION

- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance may be used only for its intended purpose. No responsibility can be taken for any possible damage caused through incorrect use or improper handling.
- Before connecting the appliance to the power source, check that the current and power match those given on the rating label.
- Do not put the appliance or the plug in water or any other liquid. However should the appliance accidentally fall into water, unplug the appliance immediately and have it checked by a qualified person before using it again. **Non-observance could cause a fatal electric shock!**
- Never attempt to open the housing yourself.
- Do not place any kind of object into the inside of the housing.
- Do not use the appliance with wet hands, on a damp floor or when the appliance itself is wet.
- Do not touch the plug with wet or damp hands.
- Check the cord and the plug regularly for any possible damage. If the cord or plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid a hazard.
- Do not use the appliance if it is dropped or otherwise damaged or if the cord or plug are damaged.  
In the case of damaged, take the appliance to the authorised service centre for examination and repair if necessary.
- Never attempt to repair the appliance yourself. This could cause an electric shock.
- Do not allow the cord to hang over sharp edges and keep it well away from hot objects and naked flames. Remove the plug from the socket only by holding the plug.
- Make sure that there is no danger that the cord or extension cord may inadvertently be pulled or cause anyone to trip when in use.
- If an extensive cord is used it must be suited to the power consumption of the appliance, otherwise overheating of the extension cord and /or plug may occur.

- This appliance is not suitable for commercial use nor for use in the open air.
- Never leave the appliance unattended while it is in use.

#### **ATTENTION:**

- Children cannot recognize the dangers involved in the incorrect use of electrical appliances.  
Therefore never allow children to use household appliances without supervision.
- Always remove the plug from the socket when the appliance is not use and each time before it is cleaned.
- Danger! Nominal voltage is still present in the appliance as long as the appliance is connected to the mains socket.
- Switch the appliance off before disconnecting from the mains.
- Never use the cord to carry the appliance. Use handle to carry the appliance.

#### **SPECIAL SECURITY ADVICE**

- The protective frame must be closed properly during operation.
- Do not place anything in the protective frame. Do not cover the protective frame during operation.

#### **ASSEMBLY**

- Remove the wing screw from the motor pain.
- Fit the rear cage onto the motor pain. Make sure that the 2 holes on the motor match the 2 holes on the rear cage. Fit the wing screw and screw it on firmly.
- Put the blade on the motor pain and carefully tighten the screw.
- Fit the front cage onto the rear cage and fix them together using the metal clips. Tighten the small screw.

#### **OPERATING INSTRUCTIONS**

The fan has 3 speed settings:

0 = Device off

I = Low speed

II = Medium speed

III = High Speed

The fan can operate in oscillating or stationary mode. Press the oscillation button to activate the oscillating mode.

## **CLEANING AND CARE**

- Always switch the fan off and unplug it before cleaning.
- Clean the parts using a damp cloth and mild detergent to clean the surface of the device.  
Never use abrasive cleaning agents.
- Under no circumstances use gasoline or solvent to clean.
- Do not immerse in any form of liquid.
- If the ventilator is no longer required, store it in a cool, dry place.

## **TECHNICAL INFORMATION**

Operating Voltage: 220-240V~ 50Hz

Power Consumption: 35W

Dimensions: 340x240x420mm

Weight: 3.0kg



Premier Farnell Ltd

For any enquiries regarding the product, please visit [www.cpc.co.uk](http://www.cpc.co.uk) or call 08447 88 00 88