

PRO-ELEC

INSTRUCTION MANUAL

TOWER FAN




Item No: TF-29N

Thank you for your purchasing this fan. Please read all instructions carefully and keep for future use.

Dear Customer,

Please read these operating instructions through carefully before connecting your device to the mains, in order to avoid damage due to incorrect use. Please pay particular attention to the safety information. If you pass the device on to a third party, these operating instructions must also be handed over.

STRUCTURE

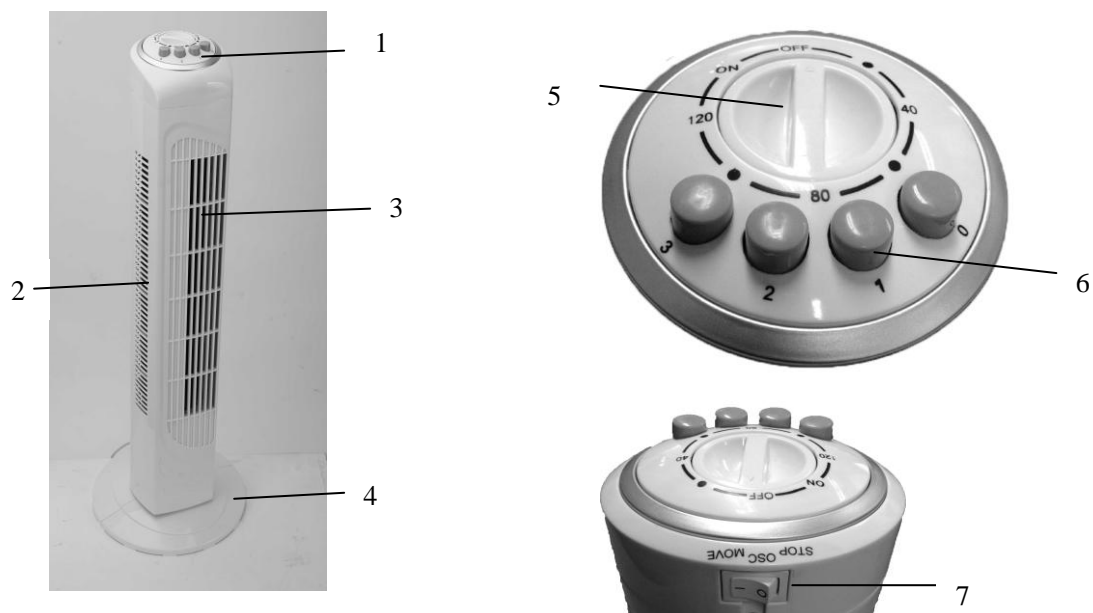

- | | |
|-----------------|-----------------------|
| 1. SWITCH PANEL | 5. TIMER |
| 2. REAR COVER | 6. SPEED SWITCH |
| 3. FRONT COVER | 7. OSCILLATION SWITCH |
| 4. BASE | |

ASSEMBLY

1. Pass the cord through the hole in the base.
2. Insert the front case into the base and turn the butterfly screw clockwise.
3. Pass Cord though pillar of the base.
4. Remove the protruded section by lifting the rib and then pulling the front grill.
5. Remove the knob screw by turning it counter clockwise.
6. Remove the protruded section by pulling the rear grill.

OSCILLATION CONTROL

1. Oscillation is operated by activating the oscillation switch.
2. When the oscillation switch is pushed down, the oscillation is activated. When the oscillation switch is pulled up, the oscillation is turned off.
3. When the switch is set at OFF position, oscillation is not possible.

CAUTION

1. Read the instructions on the manual carefully before using for the first time.
2. Before connecting to the power source, check if the voltage specified on the appliance corresponds with the voltage at your home.
3. DO NOT put the appliance or the plug in water or any other liquid. However, if the appliance did contact with liquid, unplug the appliance immediately and have it checked by a qualified technician before using it again.
4. Never put objects into the grill when the fan is connected to its power source.
5. Keep an eye on children while the fan is operating. Stay out of reach for children and do not allow them to play with the fan.
6. It is the best not be exposed to a continuous cold air stream for a long period of time.(esp. children and elders)
7. DO NOT use the fan in very hot or humid environments, such as bathrooms.
8. Keep the fan away from lace curtains, plants, etc.
9. DO NOT connect the appliance to its power source until completely assembled and adjusted.
10. DO NOT use if the power cord or the appliance is damaged, it must be repaired by an authorized service representative as special tool and or parts are required.
11. Keep the cord away from traffic area or where it can be stumbled over.
12. Indoor use only.
13. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

TECHNICAL DETAILS

Model No. : TF-29N

Power consumption: 50W

Main Voltage: 220-240V~50Hz

Dimensions: 245*245*760mm

Weight: 2.35kg



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

This mark on a product and/or accompanying documents indicates that when it is to be disposed of, it must be treated as Waste Electrical & Electronic Equipment (WEEE).

Any WEEE marked waste products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used.

For proper treatment, recovery and recycling; please take all WEEE marked waste to your Local Authority Civic waste site, where it will be accepted free of charge.

If all consumers dispose of Waste Electrical & Electronic Equipment correctly, they will be helping to save valuable resources and preventing any potential negative effects upon human health and the environment, of any hazardous materials that the waste may contain.



Premier Farnell Ltd

For any enquiries regarding the product, please visit www.cpc.co.uk or call 08447 88 00 88