

PARTS DESCRIPTION

1. Lid
2. Body
3. Oscillation button
4. Speed switch



OPERATING INSTRUCTIONS

1. Plug the power cord into a suitable socket.
2. Open the lid.
3. Press the switch to select the speed. 0 = OFF, I = Low Speed, II = Medium speed, III = High speed.
4. Press the oscillation button to start/stop fan oscillating.

CAUTION: Press only one of the speed control button at a time. Permanent damage to the switch housing may result if two or more of the buttons are pressed simultaneously.

CARE AND CLEANING

CAUTION: ALWAYS UNPLUG THE PRODUCT FROM THE ELECTRICAL OUTLET PRIOR TO CLEANING IT.

1. Do not use the product in oily or dirty areas, as the air vents may become blocked.
2. Clean the plastic parts with a mild soap and a damp cloth or sponge.
3. **Never immerse the appliance in water (danger of short-circuit).** To clean the appliance, only wipe it down with a damp cloth and then dry it carefully. Always take out the mains plug first.
4. Periodically check the screws on the product to ensure they are securely tightened.
5. Store the product in a cool, dry place.

TECHNICAL DATA

Operating voltage: 220-240V ~ 50Hz

Power consumption: 30W

PRO-ELEC

INSTRUCTION MANUAL

MODEL: TF-35



Thank you for your purchasing this fan. Please read all instructions carefully and keep for future use.



Premier Farnell Ltd

For any enquiries regarding the product, please visit www.cpc.co.uk or call 08447 88 00 88

WARNING – When using electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and personal injury.

SAFETY INFORMATION

- 1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.**
- 2. Children shall not play with the appliance.**
- 3. Cleaning and user maintenance shall not be made by children without supervision.**
- 4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.**
- 5. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.**
- 6. Incorrect operation and improper handling can lead to faults on the appliance and injuries to the user.**
- 7. In the event of improper use or incorrect handling, no liability can be accepted for any damage that may occur.**
- 8. Before you put the plug into the socket, please check that the type of current and mains voltage correspond to the instructions on the nameplate on the underside of the appliance.**
- 9. Do not immerse the unit or mains plug in water or other liquids. There is danger to life due to electric shock! However, if this occurs, remove the mains plug immediately and then have the unit checked by an expert before using it again.**
- 10. Do not operate the appliance if the mains cable or the mains plug show signs of damage, if the appliance has fallen on the floor or has been otherwise damaged. In such cases take the appliance to a specialist for checking and repair if necessary.**
- 11. Never remove the mains plug from the socket by pulling on the mains cable, or with wet hands.**
- 12. Ensure that the mains cable does not hang over sharp edges or allow it to become trapped.**
- 13. Keep the appliance away from damp, and protect from splashes.**
- 14. Keep the appliance away from hot objects (e.g. hotplates) and open flames.**
- 15. Keep the appliance and its cord out of reach of children less than 8 years.**
- 16. The machine should not be operated by means of an external timer-switch or by means of a separate system with remote control.**
- 17. Use the appliance on a flat, dry and heat resistance surface.**
- 18. Never leave the appliance in unattended during use.**
- 19. Do not store or operate the appliance in the open air.**
- 20. Keep the appliance in a dry place, inaccessible to children (in its packaging).**
- 21. Never put fingers or any other objects through the grilles (fan guards) when the fan is running.**
- 22. The appliance must be assembled completely before use.**
- 23. Watch out for long hair! It can be caught in the fan owing to the air turbulence.**
- 24. Do not point the air flow to the people for a long time.**
- 25. The rotor guard shall not be disassembled/opened to clean the rotor blades.**