

DC313XXHGP2/BS
DC315XXHGP2/BS

DE Contents 05 Inhalt 06 Contenu 07 Inhoud 08 Sisältö
 UK Inhold 11 Contenuto 12 Contenido 13 Conteúdo
 GR Περιεχόμενα SE Innehåll

DE Getting started 05 Erste Schritte 06 Démarrage 07 Aan de slag 08 Aloitussopas 09 Kom i gang
 IT Operazioni preliminari 15 Para empezar 16 Para começar 17 Πρώτα βήματα 18 Kom igång



 
x2



x1



x1



x1



x2



x2





CR2032



x2




x1

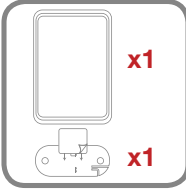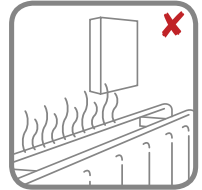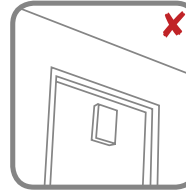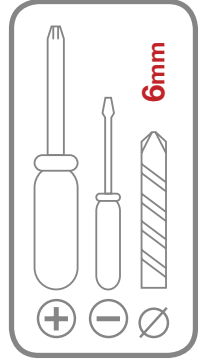


x1



x1

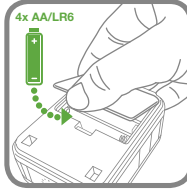

4x AA/LR6

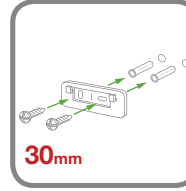


30mm


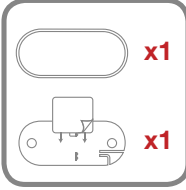
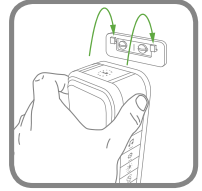


x1



x1

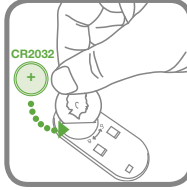

CR2032

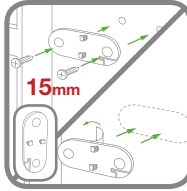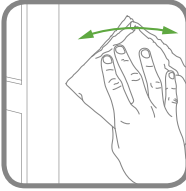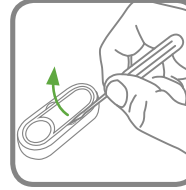









15mm

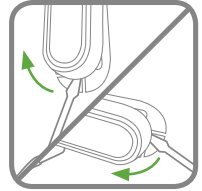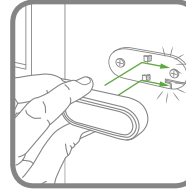

0B Optional features 0E Optionale Funktionen 0F Options disponibles
 0H Optics 0I Valinnaiset ominaisuudet 0K Valgtrirre funktioner
 0L Funzionalità opzionali 0S Opciones disponibles 0T Funções opcionais 0U
 Προαιρετικές λειτουργίες πρόσθετων 0V Mõeldava funktsioner



	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
04	•	•					•	•
06	•	•	•	•				•
08	•	•	•	•	•	•	•	•

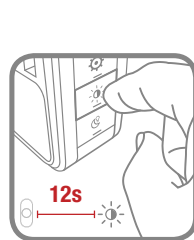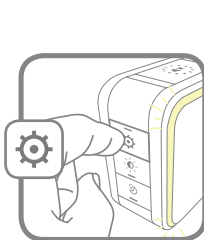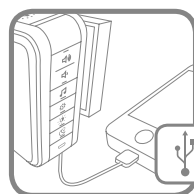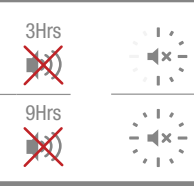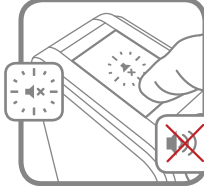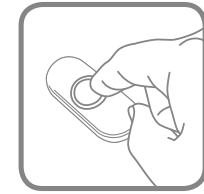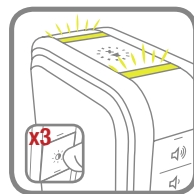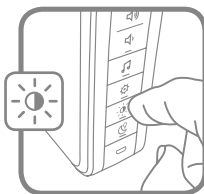

0B Linking 0E Eimernen
 0F Programmation 0H Verknüpfung
 0I Linkitämminen 0K Forbinde
 0L Collegamento 0S Enlace 0T Pro-
 gramação 0U Otvórceni 0V Länkning



0B Trouble shooting 0D Fehlerbehebung 0E Dépannage 0L Probleemoplossing
 0F Vianmääritys 0K Problemlösning 0T Risoluzione die problemi 0S Solución de
 problemas 0U Resolução de problemas 0V Αντιμετώπιση προβλημάτων 0Z Felsöknning

livewell.honeywell.com

