

HS6B Series Sub-Miniature Interlock Switch

HS6B

Key features include:

- Only 30mm x 15mm x 78mm
- Allows highest level of safety by having 3 contacts: dual load contacts + monitoring contact (ISO13849-1, EN954-1)
- Two key entrances provide flexibility for installation options
- Integral molded cable reduces wiring time
- IP67 (IEC60529) watertight sealing (contact is sealed, housing allows drainage)
- Direct Opening Action: Opening the door forces the contacts to disconnect even if the contacts are welded (IEC/EN60947-5-1)
- Keys comply with ISO14119 and EN1088



B1


Safety Products



Specifications	Conforming to Standards		EN1088, IEC60947-5-1, EN60947-5-1, GS-ET-15, IEC60664-1, IEC60204-1, EN60204-1				
	Operating Temperature		-25 to +70°C (no freezing)				
	Storage Temperature		-40 to +80°C (no freezing)				
	Operating Humidity		45 to 85% RH (no condensation)				
	Storage Humidity		95% RH maximum (no condensation)				
	Altitude		2,000m maximum				
	Pollution Degree		3				
	Rated Insulation Voltage (Ui)		300V				
	Impulse Withstand Voltage (Uimp)		4kv				
	Insulation Resistance		Between live & dead metal parts: 100MΩ maximum (at 500VDC mega) Between positive & negative live parts: 100MΩ minimum (at 500VDC mega)				
	Electric Shock Protection Class		Class II				
	Degree of Protection		IP67 (IEC60529)				
	Vibration Resistance	Operating Extremes	5 to 55 Hz, half amplitude 0.5 mm				
		Damage Limits	30Hz, half amplitude 1.5mm				
	Contact Resistance		300mΩ maximum				
	Shock Resistance	Operating Extremes	300m/s ²				
		Damage Limits	1000m/s ²				
	Direct Opening Travel		8 mm minimum				
	Direct Opening Force		60N minimum				
	Thermal Current (Ith)		2.5A				
	Rated Operating Current (Ie)		Rated operating voltage (Ue)		30V	125V	250V
			AC	Resistive load (AC12)	–	2.5A	1.5A
				Inductive load (AC15)	–	1.5A	0.75A
			DC	Resistive load (DC12)	2.5A (2A)	1.1A (0.4A)	0.55A (0.2A)
Inductive load (DC13)				2.3A (1A)	0.55A (0.22A)	0.27A (0.1A)	
Maximum Actuation Frequency		1200 operations/hour					
Mechanical Life		1,000,000 operations (at full rated load)					
Recommended Actuation Speed		0.05 to 1.0m/s					
Wire Tensile Strength		50N minimum					
Electrical Life		100,000 operations (at full rated load)					
Conditional Short-Circuit Current		50A 250V (IEC60947-5-1, IEC60269-1, -2)					
Weight		120g					

Ordering Information

HS6B - 12 B 01

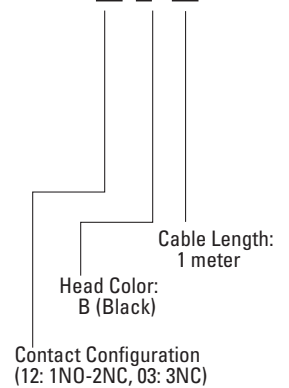

Part Numbers

Part Numbers: Body

Part Number	Contact Configuration	Cable Length
HS6B-12B01	2NC-1NO	1m
HS6B-03B01	3NC	

B1



1. The keys are not included, must be ordered separately.
2. Longer cables can be obtained, contact IDEC for details.

Part Numbers: Keys

Part Number	Shape
HS9Z-A61	Straight (Mainly for sliding doors)
HS9Z-A62	L-shaped (Mainly for hinged doors)
HS9Z-A65	adjustable key 90° angle
HS9Z-A66	adjustable key 180° angle

Installation Notes

Recommended Screw Torque

- Safety switch body installation (M4 screw): 1.0~1.5N-m
- Actuator installation (M4 screw): 1.0~1.5N-m

Handling Cables


- Do not tighten or loosen the fastened cable conduit of the safety switch
- Minimum bend radius of installed cable: 40mm

Wiring Designations

Part Number	Color	Contact
HS6B-12 (2NC-1NO)	blue-blue/white	NC
	brown-brown/white	NC
	orange-orange/white	NO
HS6B-03 (3NC)	blue-blue/white	NC
	brown-brown/white	NC
	orange-orange/white	NC

Dimensions

HS6B

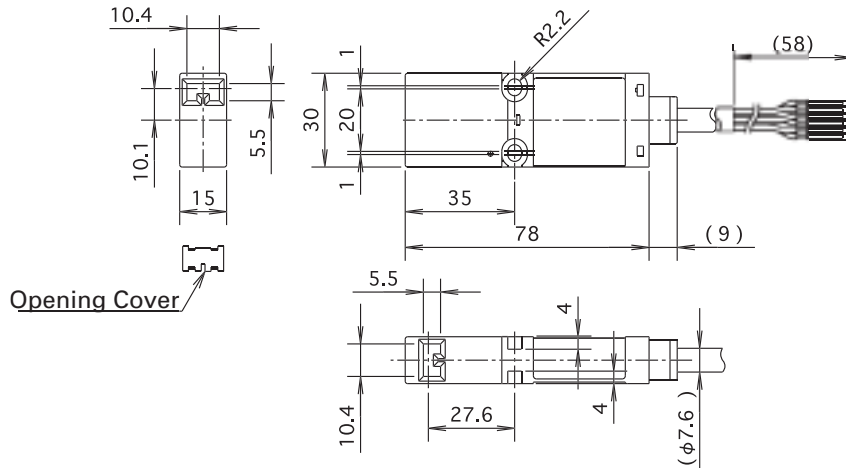


Opening Cover




Cover the unused key opening with cover provided.

Installation

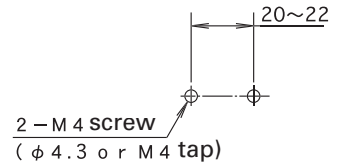


Can be installed either frontwards or backwards.

HS6B - using straight key (HS9Z-A61)

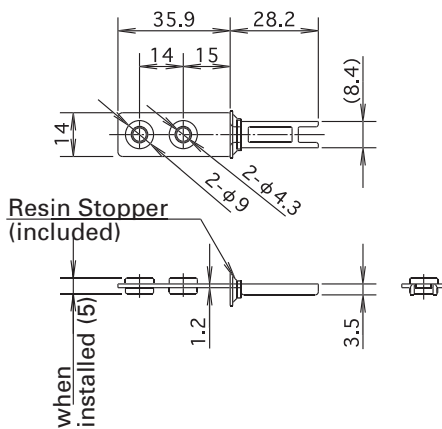


Remove resin stopper after key installation. It is only used for positioning.


HS6B - using the L-shaped key (HS9Z-A62)

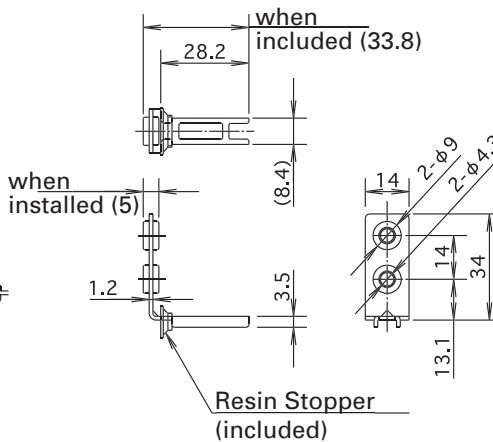


Key Installation

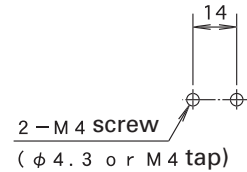

HS6B Standard Key Installation - straight key (HS9Z-A61)

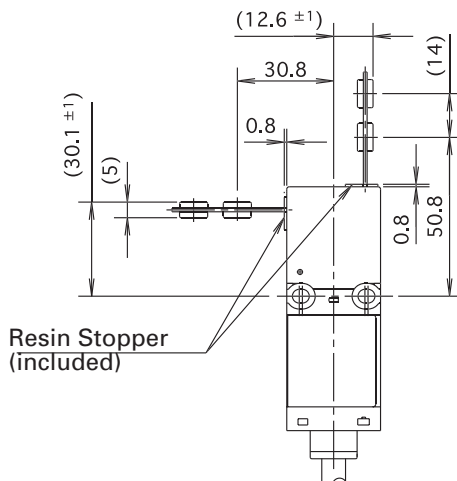

HS6B Standard Key Installation - L-shaped key (HS9Z-A62)

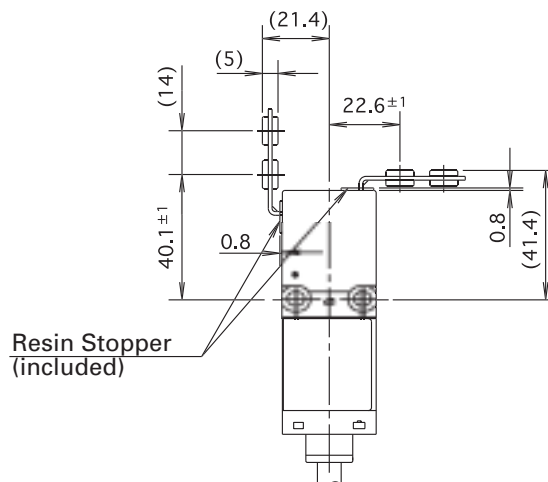

All dimensions in mm.

Interlock Switch Safety Precautions

- In order to avoid electric shock or a fire, turn the power off before installation, removal, wire connection, maintenance, or inspection of the switch.
- If relays are used in the circuit between the safety switch and the load, consider degrees of the danger and use safety relays, since welded or sticking contacts of standard relays may invalidate the functions of the safety switch.
- Do not place a PLC in the circuit between the safety switch and the load. The safety security can be endangered in the event of a malfunction of the PLC.
- Do not disassemble or modify the switch. It may cause a breakdown or an accident.

Operation Precautions - for all series

- Regardless of door types, do not use the safety switch as a door stop. Install a mechanical door stop at the end of the door to protect the safety switch against excessive force.
- Do not apply an excessive shock to the switch when opening or closing the door.
- A shock to the door exceeding 1,000 m/sec² (approx. 100G) may cause the contacts of the switch to chatter, and a malfunction of the switch may occur.
- For connection of wires, unscrew the cover. Unnecessary loosening of other screws may cause a malfunction of the switch.
- Prevent foreign objects such as dust and liquids from entering the switch while connecting a conduit or wiring.
- If the operating atmosphere is contaminated, use a protective cover to prevent the entry of foreign objects into the switch through the actuator entry slots.
- Entry of a considerable amount of foreign objects into the switch may affect the mechanism of the switch and cause a breakdown.
- Do not store the switches in a dusty, humid, or organic-gas atmosphere.


B1

Safety Products


HS5B Precautions

For Rotating Head Directions

- The head of the HS5B can be rotated in 90° increments after removing the 4 screws on the corners of the head. Prevent entry of foreign objects into the switch during removal of the head. Tighten these screws with torque designated in the instruction sheet. Improper torque may cause errors.

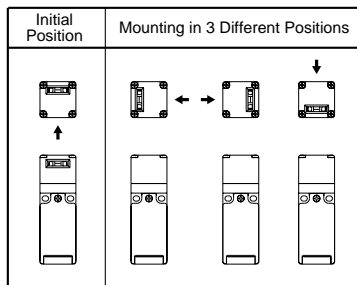


Minimum Radius of Hinged Doors

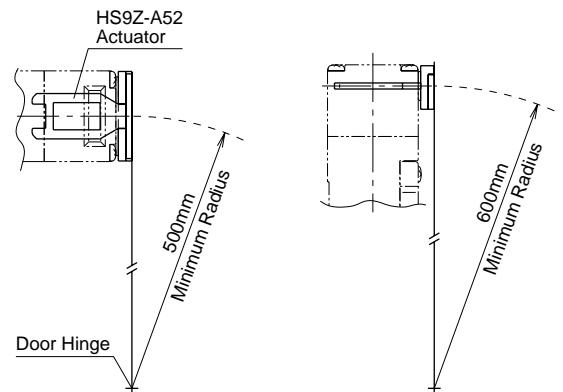

HS2B Precautions

Wire Connection

- The HS2B has 3 conduit ports, which are closed as a part of the molded switch housing.
- Make an opening for wire connection by breaking one of the conduit-port knockouts on the switch housing using a screwdriver.
- When breaking the conduit port, take care not to damage the contact block or other parts inside the switch.
- Cracks or burrs on the conduit entry may deteriorate the housing protection against water.
- When changing to another conduit port, close the unused opening with an optional plug (Type No. HS9Z-P1).


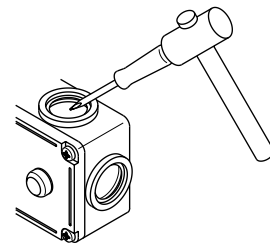


HS1E Precautions



Wire Connection

- Make an opening for wire connection by breaking one of the conduit-port knockouts on the switch housing using a screwdriver.
- Before breaking the knockout, temporarily remove the connector-fixing lock nut from the switch.
- When breaking the knockout, take care not to damage the contact block or other parts inside the switch.
- Cracks or burrs on the conduit entry may deteriorate the housing protection.
- When changing to the other conduit port, close the unused opening with an optional plug (accessory).

B1
Safety Products

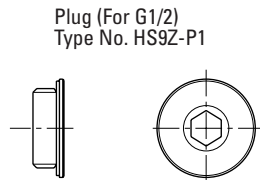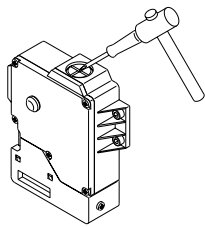


1. This unlocking method is intended for an escape from a machine when a person is locked in. For access to the unlocking entry, an access hole should be opened on the mounting panel. When opening the hole, apply proper protection against water or other foreign objects.
2. Caution: After the unlocking operation, put the screw back into the unlocking entry for safety.

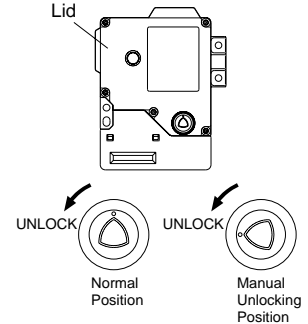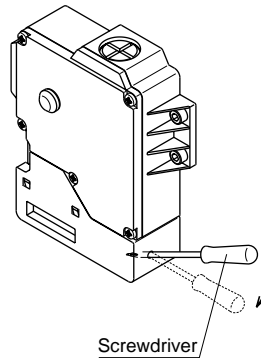

Manual Unlocking

- Remove the screw located on the unlocking entry at the side of the switch using the key wrench included with the switch. Then insert a small screwdriver into the switch to push the lever inside of the switch toward the indicator until the actuator is unlocked (refer to the diagram on the right).
- Insert a small screwdriver into the elliptical hole on the back of the switch, then push the lever inside of the switch toward the indicator until the key is unlocked (refer to the diagram on the right).

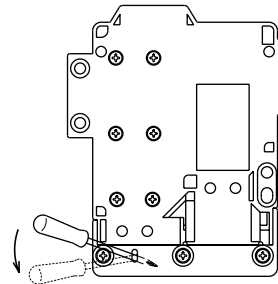


HS1C Precautions

- Regardless of door type, do not use the safety switch as a locking device. Install a locking device independently, for example, using a metal latch (also applicable to Type HS1E).
- The safety switch cover can be only removed with the special key wrench supplied with the switch or with the optional screwdriver (applicable to HS1B and HS1E).
- Remove the screw located on the unlocking entry at the side of the switch using the key wrench included with the switch. Then insert a small screwdriver into the switch to push the lever inside of the switch toward the indicator until the actuator is unlocked (refer to the diagram on the right).




Caution: After the unlocking operation, put the screw back into the unlocking entry for safety.

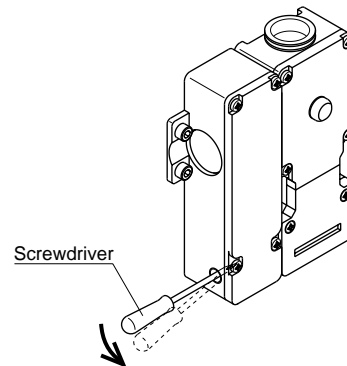


Operation Precautions

Applicable Crimping Terminals


- (Refer to the Crimping Terminal 1 or 2 shown in the drawing below.)
- HS1C
Terminals No. 1 to 6: Use solid or stranded wires only (crimping terminals not applicable).
Terminals No. 7 and 8: Crimping Terminal 1
Ground Terminal: Crimping Terminal 2
- HS1B
Ground Terminal: Crimping Terminal 2
Other Terminals: Crimping Terminal 1
HS2B, HS5B, and HS1E
Crimping Terminal 1

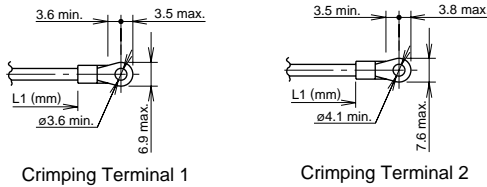

Use an insulation tube on the crimping terminal.

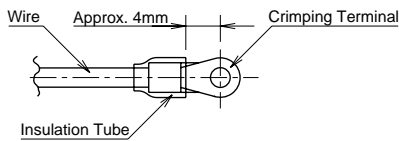


Installation Examples (see the diagrams below)

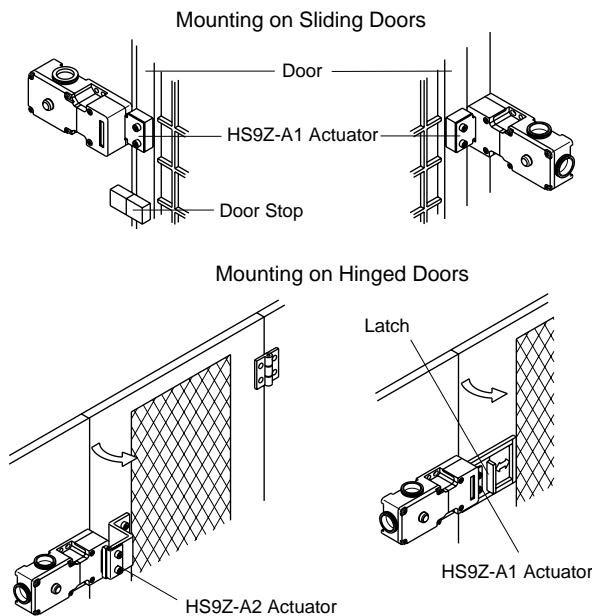

Applicable Connectors (As shown below)

- Use connectors which maintain the IP67 protection.
- Applicable Connector Dimensions
- Flex Conduit: VF03 (Japan Flex) www.nipolex.co.jp
- Steel Connector (G1/2): ALC-103
(PF13.5): RBC-103PG13.5

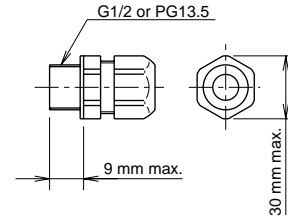

Recommended Screw Tightening Torque

- HS1C: 5.0±0.5 N-m (approx. 50±5 kgf-cm)
(4 or 6 pcs of M5 hex socket head cap screws)
- HS1B: 5.0±0.5 N-m (approx. 50±5 kgf-cm)
(2 or 4 pcs. of M5 hex socket head cap screws)
- HS2B: 5.0±0.5 N-m (approx. 50±5 kgf-cm)
(2 pcs of M5 hex socket head cap screws)
- HS5B: 4.0±0.4 N-m (approx. 40±4 kgf-cm)
(2 pcs of M4 hex socket head cap screws)
- HS1E: 5.0±0.5 N-m (approx. 50±5 kgf-cm)
(4 or 6 pcs of M5 hex socket head cap screws)
- Key (HS9Z-A1/A2)
5.0±0.5 N-m (approx. 50±5 kgf-cm)
- (2 pcs. of M6 hex socket head cap screws)
Key (HS9Z-A51/A52)
- 2.0±0.2 N-m (approx. 20±2 kgf-cm)
(2 pcs of M4 hex socket head cap screws)
- 1.0±0.2 N-m (approx. 10±2 kgf-cm)
(2 pcs of M4 Phillips screws)



The screws are supplied by the user.

Applicable Wire Size

- HS1C: 0.5 to 0.75 mm² (Terminals No.1, 2, 5 to 8)
1.0 to 1.25 mm² (Terminals No.3, 4, and grounding terminal)
- HS5B: 0.5 to 1.25 mm²
- HS1E: 0.5 to 1.25 mm²