# Honeywell



# MICRO SWITCH™ NT Series

# Step Base Toggle Switch

#### **DESCRIPTION**

Honeywell MICRO SWITCH™ NT Series toggle switches meet the need for a rugged, cost-effective toggle switch. Quality construction features include a seal between the toggle lever and bushing, and between the cover and case. These switches can be used where panels are subject to splashes, hose downs, or outdoor environments. Complete sealing of the switching chamber enables NT toggles to comply with UL 508, paragraph 13.3 hose down test. They will also withstand exposure to heavy

accumulations of early morning dew that may condense on the control panel in cabs of vehicles left outdoors overnight.

The "Easy Start" threaded bushing enables quick alignment of the mounting nut to decrease the chance of cross threading. The panel stand-off with O-ring feature available on some listings eliminates the need for behind-the-panel hardware, provides a uniform panel height, and provides a panel-to-cover seal.

#### **FEATURES**

- Completely sealed switching chamber
- IP67/IP68
- NEMA 3, 3R, 4, 13
- 2- or 3-position maintained and momentary action
- Step-design case provides added space between terminals to prevent shorting
- Spring-loaded actuating mechanism provides excellent tactile feedback
- UL recognized, File E12252, Vol. 1, Section 44
- CSA certified, CE certified
- Optional panel stand-off with O-ring panel seal

#### POTENTIAL APPLICATIONS

Aerospace/Military

Military and commercial aviation

#### Industrial

- Construction equipment
- Industrial equipment
- Process control
- Test instruments

#### Medical

• Medical instrumentation

### Transportation

Agricultural machinery

### **SPECIFICATIONS**

Characteristic	Parameter
Description	Industrial-grade toggle switch (flat base)
Sealing	IP67/IP68; NEMA 3, 3R, 4, and 13
Operating temperature	-40 °C to 71 °C [-40 °F to 160 °F]
Actuators	Standard, locking, special design, tab
Action	2- or 3- position; momentary and maintained
Mounting	Bushing 15/32 in
Circuitry	SPST, SPDT, DPST, DPDT, 4PST, 4PDT
Terminations	Solder, screw, quick connect
Contacts	Silver alloy
Amp rating	Up to 20 A (resistive)
Approvals	UL, CSA, CE
Measurement	26,7 mm H x 33,5 mm W x 22,6 mm D [1.05 in H x 1.32 in W x 0.89 in D]

### **UL AND CSA ELECTRICAL RATINGS**

Rating Code	Electrical rating
L192	10 amps, 125, 250, 277 Vac; ¼ Hp, 125 Vac; ½ Hp, 250, 277 Vac; 3 amps, 125 Vac "L"
L191	15 amps, 125, 250, 277 Vac; ½ Hp, 125 Vac; 1 Hp, 250, 277 Vac; 5 amps, 125 Vac "L"


### **ELECTRICAL RATINGS**

Electrical Rating Code	28 Vdc			115 Vdc	250 Vdc	6	115 Vac, 0 Hz & 400 I	-lz	230 Vac
	Ind.	Res.	Lamp	Res.	Res.	Ind.	Res.	Lamp	Res
1	12	20	5	0.75	0.5	10	15	3	6
2	10	15	4	0.75	0.5	7	15	2	6
3	15	20	7	0.75	0.5	15	15	4	6
4	10	18	5	0.75	0.5	8	11	2	6

# Step-Base Toggle Switch


### STANDARD ACTUATOR OPTIONS, TERMINALS, & DIMENSIONS

Note: Single pole NT switches shown

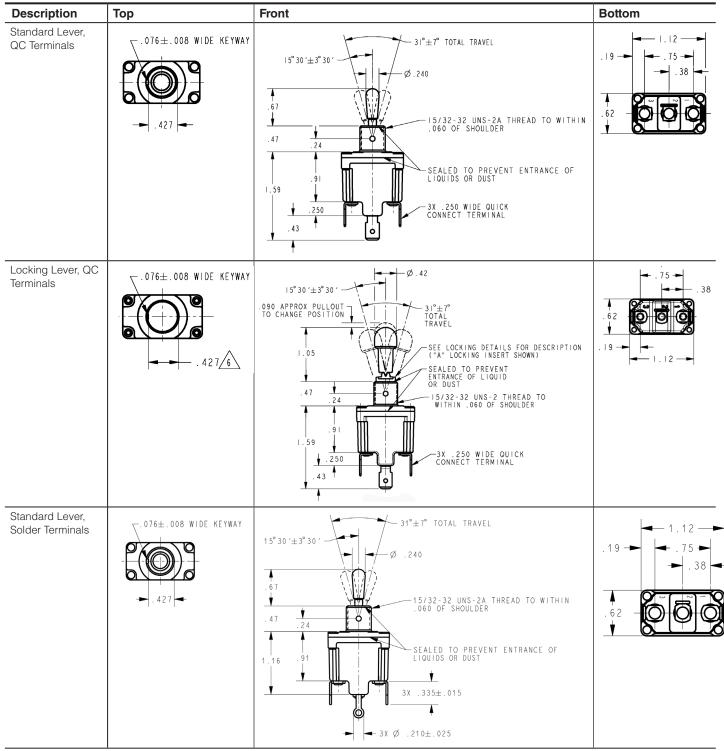

### STANDARD ACTUATOR OPTIONS, TERMINALS, & DIMENSIONS


Note: Single pole NT switches shown

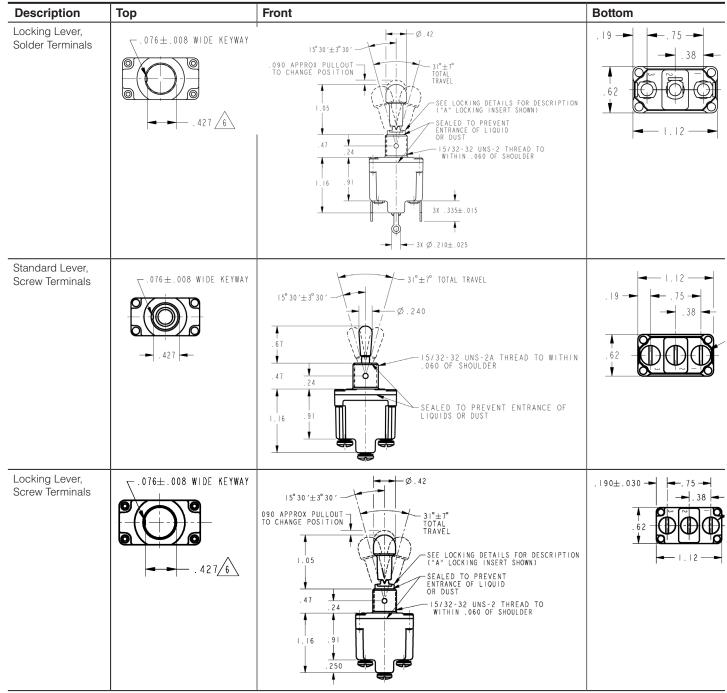

# Step-Base Toggle Switch

## STANDARD ACTUATOR OPTIONS, TERMINALS, & DIMENSIONS

Note: Single pole NT switches shown

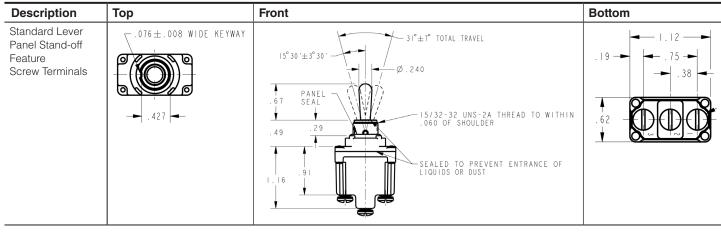

## **NT 2-POSITION ORDER GUIDE**

	Circuits	Made with Toggle A	t:		Catalog Li	isting (Stand	lard Lever)	
No. of poles	Keyway Position	Opposite Keyway	UL Rating Code	Elect. Rat- ing Code	Screw	Solder	Q-C	Pull-To-Unlock Lever (Add suffix to Standard Lever Listing)
1	OFF	2-3	L191	1	1NT1-2	11NT1-2	1NT91-2	D, F, G
	1-2	2-3	L191	1	1NT1-3	11NT1-3	1NT91-3	D, F, G
	OFF*	2-3	L192	2	1NT1-4	11NT1-4	1NT91-4	F
	1-2*	OFF	L192	2	1NT1-6	11NT1-6	1NT91-6	F
	1-2*	2-3	L192	2	1NT1-8	11NT1-8	1NT91-8	F
2	OFF	2-3, 5-6	L191	3	2NT1-2	12NT1-2	2NT91-2	D, F, G
	1-2, 4-5	2-3, 5-6	L191	3	2NT1-3	12NT1-3	2NT91-3	F
	OFF*	2-3, 5-6	L192	4	2NT1-4	12NT1-4	2NT91-4	F
	1-2, 4-5*	OFF	L192	4	2NT1-6	12NT1-6	2NT91-6	D, F, G
	1-2, 4-5*	2-3, 5-6	L192	4	2NT1-8	12NT1-8	2NT91-8	F
4	OFF	2-3, 5-6, 8-9, 11-12	L191	5	4NT1-2	14NT1-2	4NT91-2	D, F, G
	1-2, 4-5, 7-8, 10-11	2-3, 5-6, 8-9, 11-12	L191	5	4NT1-3	14NT1-3	4NT91-3	F
	OFF*	2-3, 5-6, 8-9, 11-12	L192	6	4NT1-4	14NT1-4	4NT91-4	F
	1-2, 4-5, 7-8, 10-11*	OFF	L192	6	4NT1-6	14NT1-6	4NT91-6	D, F, G
	1-2, 4-5, 7-8, 10-11*	2-3, 5-6, 8-9, 11-12	L192	6	4NT1-8	14NT1-8	4NT91-8	F

### NT 2-POSITION ORDER GUIDE • PANEL STAND-OFF FEATURE

	Cir	cuits Made with Toggl				
No. of poles	Keyway Position	Opposite Keyway	UL Rating Code	Elect. Rating Code	Catalog Listing Screw	
1	OFF	2-3	L191	1	61NT1-2	
	1-2	2-3	L191	1	61NT1-3	
	1-2*	OFF	L192	2	61NT1-6	
	1-2*	2-3	L192	2	61NT1-8	
2	OFF	2-3, 5-6	L191	3	62NT1-2	
	1-2, 4-5	2-3, 5-6	L191	3	62NT1-3	
	1-2, 4-5*	OFF	L192	4	62NT1-6	
	1-2, 4-5*	2-3, 5-6	L192	4	62NT1-8	

<sup>\*</sup>These positions are momentary. All others are maintained.

## NT 3-POSITION ORDER GUIDE • PANEL STAND-OFF FEATURE

	Circ	uits Made with Toggl				
No. of poles	Keyway Position	Center Position	Opposite Keyway	UL Rating Code	Elect. Rating Code	Catalog Listing Screw
1	1-2	OFF	2-3	L191	1	61NT1-1
	1-2*	OFF	2-3*	L192	2	61NT1-7
2	1-2, 4-5	OFF	2-3, 5-6	L191	3	62NT1-1
	1-2, 4-5	OFF	2-3, 5-6*	L192	4	62NT1-7

<sup>\*</sup> These positions are momentary. All others are maintained.

# Step-Base Toggle Switch

## **NT 3-POSITION ORDER GUIDE**

	Circu	uits Made with Tog	gle At:	]		С	1		
No. of poles	Keyway Position	Center Position	Opposite Keyway	UL Rat- ing Code	Elect. Rat- ing Code	Screw	Solder	Q-C	Pull-To- Unlock Lever (Add suffix to Standard Le- ver Listing)
1	1-2	OFF	2-3	L191	1	1NT1-1	11NT1-1	1NT91-1	ALL TYPES
	1-2*	OFF	2-3	L192	2	1NT1-5	11NT1-5	1NT91-5	E, F, K, L, M, N
	1-2*	OFF	2-3*	L192	2	1NT1-7	11NT1-7	1NT91-7	E, L, N
	NONE**	OFF	2-3	L191	1	1NT1-21	11NT1-21	1NT91-21	E, F, K, M
	NONE**	1-2	2-3	L191	1	1NT1-31	11NT1-31	1NT91-31	E, F, K, M
	NONE**	1-2	2-3*	L192	2	1NT1-51	11NT1-51	1NT91-51	Е
	1-2*	OFF	NONE**	L192	2	1NT1-61	11NT1-61	1NT91-61	Е
2	1-2, 4-5	OFF	2-3, 5-6	L191	3	2NT1-1	12NT1-1	2NT91-1	ALL TYPES
	1-2, 4-5*	OFF	2-3, 5-6	L192	4	2NT1-5	12NT1-5	2NT91-5	E, F, K, L, M, N
	1-2, 4-5	OFF	2-3, 5-6*	L192	4	2NT1-7	12NT1-7	2NT91-7	E, L, N
	NONE*	OFF	2-3, 5-6	L191	3	2NT1-21	12NT1-21	2NT91-21	E, F, K, M
	NONE**	1-2, 4-5	2-3, 5-6	L191	3	2NT1-31	12NT1-31	2NT91-31	E, F, K, M
	NONE**	1-2, 4-5	2-3, 5-6*	L192	4	2NT1-51	12NT1-51	2NT91-51	Е
	1-2, 4-5*	OFF	NONE**	L192	4	2NT1-61	12NT1-61	2NT91-61	Е
	1-2, 4-5	2-3, 4-5	2-3, 5-6	L191	3	2NT1-12	12NT1-12	2NT91-12	ALL TYPES
	1-2, 4-5	1-2, 5-6	2-3, 5-6	L191	3	2NT1-10	12NT1-10	2NT91-10	ALL TYPES
	1-2, 4-5*	1-2, 5-6	2-3, 5-6	L192	4	2NT1-50	12NT1-50	2NT91-50	E, F, K, L, M, N
	1-2, 4-5	1-2, 5-6	2-3, 5-6*	L192	4	2NT1-70	12NT1-70	2NT91-70	E, L, N
4	1-2, 4-5, 7-8, 10-11	OFF	2-3, 5-6, 8-9, 11-12	L191	5	4NT1-1	14NT1-1	4NT91-1	ALL TYPES
	1-2, 4-5, 7-8, 10-11*	OFF	2-3, 5-6, 8-9, 11-12	L192	6	4NT1-5	14NT1-5	4NT91-5	E, F, K, L, M, N
	1-2, 4-5, 7-8, 10-11*	OFF	2-3, 5-6, 8-9, 11-12*	L192	6	4NT1-7	14NT1-7	4NT91-7	E, L, N
	NONE*	OFF	2-3, 5-6, 8-9, 11-12	L191	5	4NT1-21	14NT1-21	4NT91-21	E, F, K, M
	NONE**	1-2, 4-5, 7-8, 10-11	2-3, 5-6, 8-9, 11-12	L191	5	4NT1-31	14NT1-31	4NT91-31	E, F, K, M
	NONE**	1-2, 4-5, 7-8, 10-11	2-3, 5-6, 8-9, 11-12*	L192	6	4NT1-51	14NT1-51	4NT91-51	Е
	1-2, 4-5, 7-8, 10-11*	OFF	NONE**	L192	6	4NT1-61	14NT1-61	4NT91-61	Е
	1-2, 4-5, 7-8, 10-11	2-3, 4-5, 7-8, 11-12	2-3, 5-6, 8-9, 11-12	L191	5	4NT1-12	14NT1-12	4NT91-12	ALL TYPES
	1-2, 4-5, 7-8, 10-11	2-3, 4-5	2-3, 5-6, 8-9, 11-12	L191	5	4NT1-10	14NT1-10	4NT91-10	ALL TYPES
	1-2, 4-5, 7-8, 10-11*	2-3, 4-5, 7-8, 11-12	2-3, 5-6, 8-9, 11-12	L192	6	4NT1-50	14NT1-50	4NT91-50	E, F, K, L, M, N
	1-2, 4-5, 7-8, 10-11*	2-3, 4-5	2-3, 5-6, 8-9, 11-12*	L192	6	4NT1-70	14NT1-70	4NT91-70	E, L, N

<sup>\*</sup> These positions are momentary. All others are maintained.
\*\* Toggle lever is blocked from these products. Toggle becomes 2-position, with center being one extreme position.

### MICRO SWITCH NT™ SERIES LOCKING CONFIGURATIONS

Α		В		D		E	F		G	н								
																1		
Locked In Three Positions	Locked In Center and Extreme Position (Keyway Side)		Center and Locked Out Locked In Locked Ir Extreme Pos		sition	Locked In Extreme Positio (Keyway Side)	Locked Out Of Center And Extreme Position (Keyway Side)											
J		К		L			М		N	Р								
						E												
			ł ion	Locked ( Extreme P (Keyway	osition	Ar Extren	ed Out Of nd Into ne Position ite Keyway)	Ext	ocked Out Of reme Position posite Keyway)	Locked Out Of And Into Extreme Position (Keyway Side)								

## This Honeywell datasheet supports the following MICRO SWITCH™ NT Series Toggle Switch (Step Base) Listings

11NT1-1A	1NT1-3-C	1NT887-21K	2NT1-31	2NT91-10	4NT91-70
11NT1-2	1NT1-3D	1NT887-3	2NT1-3-C	2NT91-1A	611NT1-7
11NT1-3	1NT1-3F	1NT887-5	2NT1-3D	2NT91-2	61NT1-1
11NT1-3D	1NT1-3-JLG	1NT887-6	2NT1-3-JLG	2NT91-3	61NT1-1-NH
11NT1-3G	1NT1-3-NH	1NT887-7	2NT1-3-NH	2NT91-3D	61NT1-2
11NT1-5	1NT1-3-NH-ALT	1NT887-7E	2NT1-3-NH-ALT	2NT91-5	61NT1-3
11NT1-6	1NT1-3-TM	1NT887-8	2NT1-4	2NT91-50	61NT1-3-A04
11NT1-7	1NT1-4	1NT91-1	2NT1-5	2NT91-50K	61NT1-3-NH
11NT1-7-NH	1NT1-5	1NT91-1E	2NT1-50	2NT91-6	61NT1-5
12NT1-1	1NT1-51	1NT91-2	2NT1-50F	2NT91-7	61NT1-6
12NT1-10	1NT1-5-C	1NT91-3	2NT1-50-NH-ALT	2NT91-70	61NT1-6-A01
12NT1-2	1NT1-5N	1NT91-3D	2NT1-51	2NT91-7-NH	61NT1-7
12NT1-3	1NT1-5-TM	1NT91-5	2NT1-5M	2NT91-8	61NT1-7-NH
12NT1-7	1NT1-6	1NT91-5E	2NT1-5N	4NT1-1	61NT1-8
14NT1-3	1NT1-61	1NT91-6	2NT1-5-TM	4NT1-10	61NT1-8-NH
14NT1-5	1NT1-61-JLG	1NT91-61	2NT1-6	4NT1-10E	61NT887-1
14NT1-6	1NT1-6F	1NT91-7	2NT1-61	4NT1-119	61NT887-3
14NT1-7	1NT1-6-NH-ALT	2NT101-7	2NT1-61-JLG	4NT1-12	61NT887-5
14NT1-8	1NT1-6-TM	2NT1-1	2NT1-6-NH-ALT	4NT1-12A	61NT887-7
1NT1-1	1NT1-7	2NT1-10	2NT1-7	4NT1-1A	61NT887-7-NH
1NT1-1A	1NT1-7-C	2NT1-10A	2NT1-70	4NT1-1E	61NT887-8
1NT1-1A 1NT1-1-C 1NT1-1L 1NT1-1N	1NT1-7-COMB 1NT1-7E 1NT1-7-JLG	2NT1-10A 2NT1-10J 2NT1-12 2NT1-12-NH-ALT	2NT1-70 2NT1-70-C 2NT1-70-TM 2NT1-72	4NT1-2 4NT1-3 4NT1-3D	61NT91-2 62NT1-1 62NT1-1-NH
1NT1-1N 1NT1-1-NH 1NT1-1-NH-ALT 1NT1-1P	1NT1-7-DEG 1NT1-7-NH 1NT1-7-NH-ALT 1NT1-7-SKY	2NT1-12-NTI-ALI 2NT1-1A 2NT1-1-C 2NT1-1E	2NT1-72 2NT1-7-COMB 2NT1-7E 2NT1-7-JLG	4NT1-5 4NT1-5 4NT1-50 4NT1-6	62NT1-2 62NT1-3 62NT1-3-A04
1NT1-1F	1NT1-7-3KT	2NT1-1E	2NT1-7-JLG	4NT1-6	62NT1-3-A04
1NT1-2	1NT1-7-TM	2NT1-1-JLG	2NT1-7-NH	4NT1-61	62NT1-3-NH
1NT1-21	1NT1-8	2NT1-1L	2NT1-7-NH-ALT	4NT1-7	62NT1-6
1NT1-21-JLG	1NT1-8-C	2NT1-1N	2NT1-8	4NT1-70	62NT1-7
1NT1-21-NH-ALT	1NT1-8F	2NT1-1-NH	2NT1-8-C	4NT1-72	62NT1-7-NH
1NT1-2-C	1NT1-8-NH	2NT1-1-NH-ALT	2NT1-8-COMB	4NT1-8	62NT1-8
1NT1-2D	1NT1-8-TM	2NT1-2	2NT1-8-NH	4NT207-1E	62NT1-8-NH
1NT1-2F 1NT1-2G 1NT1-2-NH-ALT 1NT1-3 1NT1-31	1NT20-7E 1NT20-7N 1NT231-7 1NT887-1 1NT887-2	2NT1-21 2NT1-21-JLG 2NT1-2-C 2NT1-2G 2NT1-3	2NT1-8-NH-ALT 2NT231-7 2NT887-10 2NT889-70 2NT91-1	4NT319-7-C08 4NT91-1 4NT91-3 4NT91-5 4NT91-7	62NT91-1 62NT91-1-NH

Warranty. Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Honeywell's standard product warranty applies unless agreed to otherwise by Honeywell in writing; please refer to your order acknowledgement or consult your local sales office for specific warranty details. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace, at its option, without charge those items it finds defective. The foregoing is buyer's sole remedy and is in lieu of all warranties, expressed or implied, including those of merchantability and fitness for a particular purpose. In no event shall Honeywell be liable for consequential, special, or indirect damages.

While we provide application assistance personally, through our literature and the Honeywell web site, it is up to the customer to determine the suitability of the product in the application.

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

## **A** WARNING

### **MISUSE OF DOCUMENTATION**

- The information presented in this datasheet is for reference only. DO NOT USE this document as product installation information.
- Complete installation, operation and maintenance information is provided in the instructions supplied with each product.

Failure to comply with these instructions could result in death or serious injury.

# **A** WARNING PERSONAL INJURY

DO NOT USE these products as safety or emergency stop devices or in any other application where failure of the product could result in personal injury.

Failure to comply with these instructions could result in death or serious injury.

### Find out more

Honeywell serves its customers through a worldwide network of sales offices, representatives and distributors. For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact your local sales office. To learn more about Honeywell's sensing and control products, call +1-815-235-6847/
1-800-537-6945, visit sensing.honeywell.com, or e-mail inquiries to info.sc@honeywell.com

Sensing and Control Honeywell 1985 Douglas Drive North Golden Valley, MN 55422 USA

sensing.honeywell.com

