

PRO-ELEC

CLIP FAN Model: HG00655



IMPORTANT SAFETY INFORMATION


Please read these instructions carefully before use and retain for future reference.

- When using electrical appliances basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- Children shall not play with the appliance.
- There are no user-serviceable parts in this product. Refer servicing to qualified personnel.
- Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety in a safe way and understands the hazards involved.
- The fan must be securely clipped on to a table or a stable surface before use, to avoid overturning.
- The fan should not be used in a damp place or an environment of high humidity, e.g. a bathroom.

ASSEMBLY



1. Connect the base and the connector of the motor.

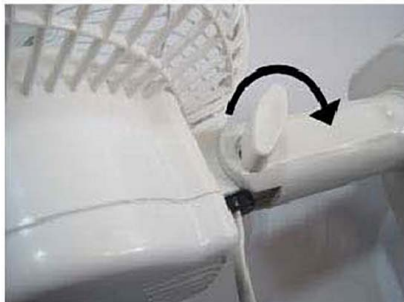

2. Turn the screw to fix the base and the connector of the motor.

OPERATION

- Prior to use, ensure that the screw, which fixes the base and the connector of the motor is secure.
- Make sure that the clip is clamped securely to a stable surface, so that the fan doesn't fall.
- The post can be rotated 360°.
- The speed settings indicated are as follows:
 - 0 → Off
 - I → Low speed
 - II → High speed

CLEANING & MAINTENANCE

- Refer all servicing and maintenance to qualified personnel.
- Before cleaning, turn off the fan and unplug it from the power supply.
- To clean the fan, use a soft dry cloth to wipe off any dust.
- If the fan is exceptionally dirty, use a damp cloth and wipe it dry.
- Do not use any chemicals, abrasives or solvents that may damage the fan.



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT

When this product has reached the end of its life it must be treated as Waste Electrical & Electronics Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.

