

Mcmelectronics.com

USER MANUAL

1x4 HDMI Splitter

Model #: 33-12786

INTRODUCTION

Dear customer

Thank you for purchasing this Stellar Labs product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

Our selection of HDMI Converter, switchers, extenders, matrixes and splitters are designed to make your AV device use more convenient, comfortable, productive and cost-efficient.

FEATURES

One HDMI input signal split to four HDMI outputs Supports: Full HD, Full 3D Supports: Akv2K resolution Supports: CEC Supports: CEC Supports: CEC Supports: Blue-Ray 24/50(60fs/HD-DVD/xyVCC Digital audia format, as DTS-HD/Doby-trueHD/LPCM7.1/DTS/Doiby-AC3/DSD/[HBR] Supports: signal refilming No loss of quality Installs in minutes

This unit is a 1x4 HDMI Splitter which splits a single HD source input into four HD outputs to connect to your HD Displays. It is capable of reproducing both a 4k and 3D signal with no loss in quality.

Our devices offer solutions for noise, space, security concerns, data center control, information distribution, conference room presentations, schools, and corporate training environments.

Mcmelectronics.com

Output1-4: HDMI output led status light Input: HDMI input led status light Output 4 Output 3 Output 2 Output 1 Input

Figure 1.1 Front Panel Showing Picture

Contents:

Figure 1.0 Front Panel Showing Picture

hput Output 1 Output 2 Output 3 Output 4 Power

Mcmelectronics.com

DC/5V: 5V DC-DC Power Interface Input: HDMI input interface Output1-4: HDMI output interface

Power Adapter
 User Manual

 Connect the source unit to the input section of splitter via HDMI cable.
 Connect the HD display units to the output section of the splitter via HDMI cables. 3.Connect the power adapter to the splitter.

SPECIFICATIONS:

HDMI resolution24/50/60fs/1080p/1080i/720p/576p/576i/480p/480i Max baud rate..... Input/Output TMDS signal0.5~1.5Volts p-p(TTL) Input/Output DDC signal 5Volts p-p (TTL) Input cable distance......

Output cable distance.....≤8m Using HDMI AWG26 Cable ...≤8m Using HDMI AWG26 HDMI cable

Operating and Connecting:

Please use this device as the instructions have described to improve the longevity and safety of the unit.

1.The unit should be placed in a location away from damp, high-temperature, dusty, erosive, and 2.Please hold the power adapter head and do not pull the power cord when disconnecting from the

Mcmelectronics.com

Troubleshooting

Issue	Cause and Ways to deal with
No Power	1. Make sure the power plug is inserted securely into the
	unit.
	2. Check the power source to make sure it is connected to
	an outlet.
No Picture	1. Make sure the monitor is on and connected to the unit.
	2. Make sure the source is on and connected to the unit.
	3. Check all connections to make sure they are secure.
	4. Connect the source to the monitor to see if the issue wit
	your other components.
	5. Inspect your HDMI cable for damage.
Obscure Picture	1. Connect the source to the monitor to see if the issue wit
	your other components.
	2. Inspect your HDMI cable for damage.
Remote Not Working	1. Make sure the plastic tab is removed from the batter
	compartment.
	Make sure the battery has a charge.

Warranty

This device is warranted against manufactures defects for a period of one year from the date of purchase from the dealer. This warranty extends solely to the repair or replacement of this product and does not cover additional costs, including but not limited to installation or removal of the product or any incidental or consequential damages. Nor does it cover damage due to improper use, storage or application of this device. Should a service issue arise within the one year period, please contact the dealer in which this device was purchased. It will be the sole decision of Stellar Labs to repair or replace any device found to be defective during this period.

Mcmelectronics.com

Mcmelectronics.com