

# VGA Over Cat5 Extender plus x4 Splitter - sender only Model #50-15025 Table of Contents

1.0 Introduction	2
2.0 Specifications	2
3.0 Package Contents	3
4.0 Panel Descriptions	4
5.0 Connection and Operation	5

# VGA UTP Extender 1X4 Splitter with Audio

#### **Dear Customer**

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

#### **Please Note**

This unit includes only the VGA transmiter with 1x4 splitter. The receivers mentioned within this manual are sold speparately, under MCM Electronics Item #50-15035.

#### **1.0 Introduction**

This VGA UTP Extender 1X4 Splitter with Audio is an ideal device for local displaying and remote viewing. It combines split function and extension function. It distributes the input of the VGA signal and audio signal into the four identical outputs simultaneously. Each receiver by Cat5 x1 works with the Sender as a full functional module by receiving the distributed signal from the sender and transmitting to displays individually. Only by the most inexpensive UTP cable with cross stand inside, the full functional module extend the VGA display max up to 300 meters.

It offers solutions for VGA retail and show site and Projector factory, noise space and security concerns, data center control, information distribution, conference room presentation, school and corporate training environments.

#### **1.1 FEATURES**

This device has many features that enable it to perform in a superior manner. Among those features you will find:

- I Extends VGA video and stereo audio signal max up to 300m over one UTP cable with cross stand inside.
- Adjusting GAIN and PEAK to adapt for the different length of UTP cable. GAIN: Brightness adjustment. PEAK: Skew adjustment.
- Supports resolution max up to 1920x1200.
- I Dual output at local unit: 1 x VGA output for local site, plus 4 x UTP output for remote site.
- I Works with monitors, projectors, HDTV, and flat panels.

#### **2.0 SPECIFICATIONS**

Input /Output Connector	
Input connector	VGA(Female 15pin), Stereo Audio
Output connector	VGA(Female 15pin),
	Stereo Audio,4xRJ45
Operating Frequency	
Vertical Frequency Range	60/75/85Hz

Resolutions(PC)				
640X480				
800X600				
024X768				
1280X720				
1280X768				
1280X960				
1280X1024				
1600X900				
1600X1200				
1920X1080				
1920X1200				
Mechanical				
Size of VGA UTP Extender 1X4	146× <b>70</b> × <b>25mm</b>			
Splitter				
Weight of VGA UTP Extender 1X4	312g			
Splitter				
Size of Receiver (L-W-H)	81.5×43×23MM			
Weight of Receiver (Net)	108g			
Warranty				
Factory Limited Warranty	1 Year Parts and Labor			
Environmental				
Operating Temperature	0°℃ to +70°℃			
Operating Humidity	10% to 85 % RH (no condensation)			
Storage Temperature	-10℃ to +80℃			
Storage Humidity	5% to 90 % RH (no condensation)			
Power Requirement	· · · · · · · · · · · · · · · · · · ·			
Power Supply for VGA UTP Extender	5V@2A, max 10W			
1X4 Splitter				
Power Supply for Receiver	5V@2A, max 5W			
Regulatory Approvals				
Converter Unit	FCC,CE,UL			
Power Supply	UL,CE,FCC			
Accessories Adapter				
AC Power Adapter	US standard, UK standard and so on			
User Manual	English Version			

Note: Specifications are subject to change without notice.


#### **3.0 PACKAGE CONTENTS**

Before attempting to use this unit, please check the packaging and make sure the following items are contained in the shipping carton:

- 1) VGA UTP Extender 1X4 Splitter
- 2) User's Manual
- 3) One piece of 5V@2A DC Power Supply

### **4.0 PANEL DESCRIPTIONS**


Sender

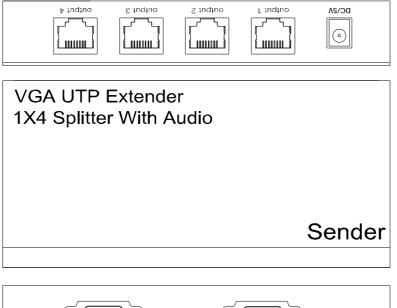


$\bigcirc$		$\sim$ $\odot$	
Power	VGA Input	Audio In	VGA Output Audio Out

## **Receiver - sold separately**



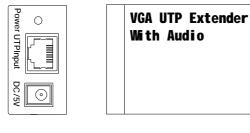

 




Receiver

#### **5.0 CONNECTION AND OPERATION**

- 1) Connect the single VGA source to the main VGA input using a piece of VGA cable.
- 2) Connect VGA output of the Sender to a local display and Audio output of the Sender to a local Sounder
- 3) Connect Sender and each Receiver using a piece of each pieces of CAT-5e/6
- 4) Connect VGA outputs of Receivers to remote displays and Audio output of Receivers to remote sounders.
- 5) Plug one 5V@ 2A power supply into the VGA UTP 1X4 Splitter and the others 5V@2A power suppliers to each Receiver individually.

Attention: Insert / Extract cable gently.

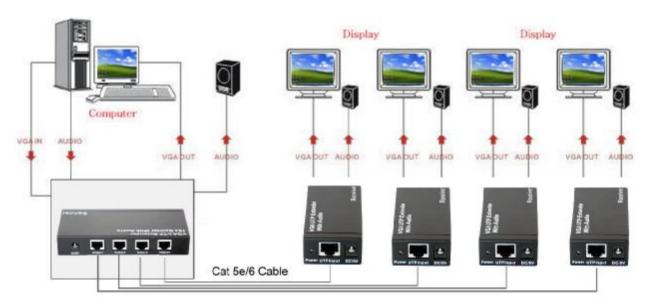

#### **5.1 CONNECTION DIAGRAM**