


CHROMATIC TUNER TU300



Thank you for showing your confidence in us by purchasing the BEHRINGER CHROMATIC TUNER TU300. This compact guitar and bass tuner provides 7 different tuning modes. Thanks to its 7-segment LED display and 11-point LED indicators, it provides great visibility, especially in dark environments.

1. CONTROLS

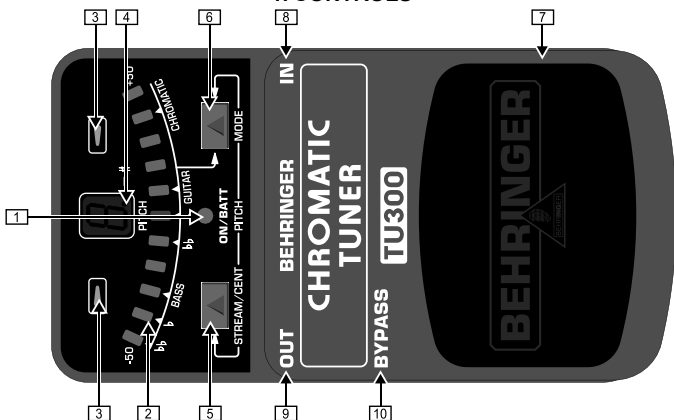

Top view

- 1 The *ON/BATT* LED illuminates when the tuner is activated. It also serves as a battery level indicator.
- 2 This LED meter indicates to what degree the instrument's tone deviates from the reference tone.
- 3 These yellow arrow LEDs light up when the played note is below or above pitch. Both LEDs will light up when the tone's pitch is correct.
- 4 The 7-segment LED display indicates the string number (high E string: "1", B string: "2" etc.) of the strummed string of your instrument, if the TU300 is operated in one of the guitar or bass modes. In chromatic mode it displays the note name. Semitones are shown by the decimal point LED ("#") in the display.
- 5 Press the *STREAM/CENT* button to switch between the LED display modes (see chapter "OPERATIONS").
- 6 Press the *MODE* button to select the tuning mode (see chapter "OPERATIONS").
- 7 Use the footswitch to activate/deactivate the tuner.
- 8 Connect your guitar or bass to the 1/4" TS *IN* connector.
- 9 Connect your amp or another stompbox to the 1/4" TS *OUT* connector. When the tuner is activated (footswitch pressed) the output is muted. This way, you can silently tune your guitar or bass.
- 10 The 1/4" TS *BYPASS* connector always sends a signal to your amp independently of the footswitch position.

Use the *DC IN* connection at the right side of the unit to plug in a 9 V power supply (not included). The *BATTERY COMPARTMENT* is located underneath the pedal cover. To install or replace the 9 V battery, press the hinges with a ballpen and remove the pedal cover. Be careful not to scratch the unit.

The TU300 is powered as soon as you insert a plug into the INPUT. The battery is "disconnected" when the plug is removed. For this reason, the TU300 has no on/off switch. To extend battery life, always disconnect the INPUT when the unit is not in use.

The *SERIAL NUMBER* is located at the bottom.

2. OPERATION

Selecting the tuning mode: Select between 3 Guitar modes (Regular, Flat, Double Flat), 3 Bass modes (Regular, Flat, Double Flat) and Chromatic mode.

| Display | 1 | 2 | 3 | 4 | 5 | 6 |
|---------|-----------------|-----------------|-----------------|-----------------|-----------------|-----------------|
| String | 1 st | 2 nd | 3 rd | 4 th | 5 th | 6 th |
| Regular | E | B | G | D | A | E |
| b | E ^b | B ^b | G ^b | D ^b | A ^b | E ^b |
| bb | D | A | F | C | G | D |

| Display | 1 | 2 | 3 | 4 | 5 |
|---------|-----------------|-----------------|-----------------|-----------------|-----------------|
| String | 1 st | 2 nd | 3 rd | 4 th | 5 th |
| Regular | G | D | A | E | B |
| b | G ^b | D ^b | A ^b | E ^b | B ^b |
| bb | F | C | G | D | A |

Guitar (left) and bass (right) tuning modes

Guitar modes:

- ▲ Press the *MODE* button repeatedly until the "GUITAR" meter LED lights up. If you want to play in flat or double flat mode, select "b" or "bb" guitar mode.
- ▲ Pick a single string on your guitar. The string number closest to the pitch of the played tone will be displayed. The meter LEDs [2] and the pitch indicators [3] will show the pitch deviation.

Bass modes:

- ▲ Press the *MODE* button repeatedly until the "BASS" meter LED lights up. For flat or double flat mode select "b" or "bb" bass mode.
- ▲ Pick a single string on your bass. The string number closest to the pitch of the played tone will be displayed. The meter LEDs [2] and the pitch indicators [3] will show the pitch deviation.

Chromatic mode: In chromatic mode the tuner automatically recognizes all tones and semitones and indicates the note name in the LED display. Chromatic is the standard mode when powering up the TU300.

- ▲ Cycle the *MODE* button to make the "CHROMATIC" LED light up.
- ▲ Play a single note on your instrument. The note closest to the pitch of the played tone will be indicated.
- ▲ Tune your instrument until the green "0" cent LED of the meter display [2] and the pitch indicators [3] light up.

CHROMATIC TUNER TU300



| Display | c | c. | d | d. | E | F | F. | G | G. | A | A. | b |
|---------|---|----|---|----|---|---|----|---|----|---|----|---|
| Note | C | C# | D | D# | E | F | F# | G | G# | A | A# | B |

Chromatic mode

Selecting the display mode

Stream mode: If the played tone deviates from the reference tone this will be displayed by a stream of LEDs in the meter display [2]. If the LED stream moves to the left, the input pitch is flat, when it moves to the right, it is sharp. As you approach the correct pitch, the LEDs will stop moving and both yellow arrows LEDs [3] will start flashing.

Cent mode: Compare the Cent mode to a VU meter needle: one LED shows the deviation of the reference tone within a range of +/-50 cents. If the pitch is perfect the green LED (0 cent) lights up.

Setting up the "a" reference tone: When you power up your TU300, it is set to 440 Hz.

- ▲ Press the STREAM/CENT [5] and the MODE button [6] simultaneously.
- ▲ Increase the reference tone in 1-Hz steps by pressing the MODE button [6].
- ▲ Decrease the reference tone by pressing the STREAM/CENT button [5].

The display will show 8/9/0/1/2/3/4/5/6/7 to indicate the reference tone from 438 to 447 Hz.

3. WARRANTY

For our current warranty terms, please refer to our website at <http://www.behringer.com>.

4. SPECIFICATIONS

In

Connector 1/4" TS
Impedance 500 kΩ

Out

Connector 1/4" TS
Impedance 1 kΩ

Bypass

Connector 1/4" TS
Impedance 1 kΩ

Power supply

9 V --- , 100 mA, regulated
BEHRINGER PSU-SB
U.S./Canada 120 V~, 60 Hz
China/Korea 220 V~, 50 Hz
U.K./Australia 240 V~, 50 Hz
Europe 230 V~, 50 Hz
Japan 100 V~, 50 - 60 Hz

Power connector

2 mm DC jack, negative center

Battery

9 V type 6LR61

Power consumption

70 mA

Dimensions (H x W x D)

approx. 54 mm (2 1/8") x 70 mm (2 3/4") x 123 mm (4 4/5")

Weight

approx. 0.33 kg (0.73 lbs)

BEHRINGER is constantly striving to maintain the highest professional standards. As a result of these efforts, modifications may be made from time to time to existing products without prior notice. Specifications and appearance may therefore differ from those listed or shown.

5. SAFETY INSTRUCTIONS

Do not use near water, or install near heat sources. Use only authorized attachments/accessories. Do not service product yourself. Contact our qualified servicing personnel for servicing or repairs, **especially when power supply cord or plug is damaged.**

No utilizar cerca de agua o instalar cerca de fuentes de calor. Utilice sólo accesorios y aditamentos autorizados. No intenté reparar el producto usted mismo. Contacte a nuestro personal técnico cualificado para servicio y reparaciones, **especialmente cuando la fuente o el cable de alimentación estén dañados.**

Не эксплуатуйте прибор вблизи от источников воды и тепла. Применяйте только авторизованные дополнительные устройства. Никогда не ремонтируйте прибор самостоятельно. Ремонт может производить только квалифицированный специализированный персонал, **особенно при повреждениях сетевого провода или сетевой вилки.**

水分の近くや、ヒーターなど熱気のある場所では使用しないでください。正式に認可された付属品のみを使用してください。製品はご自分では決して修理せず、特に電源コードもしくはプラグが損傷した場合には、必ず製品サービスおよびリペアの資格を有した当社の担当員にご相談ください。

不要在靠近水源的地方使用，或在靠近热源的地方安装。只使用经过许可的附件 / 配件。不要自己进行产品维修，**尤其是当电源线或插座损坏的时候**，请联系我们的专业服务人员有关产品维修事宜。

Die deutsche Anleitung ist erhältlich @ www.behringer.com

Manuel francophone en téléchargement sur www.behringer.com

Manual en español disponible en www.behringer.com

Manuali italiani disponibili @ www.behringer.com

Русскоязычное руководство @ www.behringer.com

Polska instrukcja dostępna jest pod adresem @ www.behringer.com

Nederlandse handleiding beschikbaar @ www.behringer.com

Suomenkielinen käyttöohje saatavilla osoitteesta www.behringer.com

Svensk manual finns tillgänglig på www.behringer.com

Dansk vejledning findes på @ www.behringer.com

Manual português disponível @ www.behringer.com

Ελληνικό εγχειρίδιο υπάρχει διαθέσιμο στη διεύθυνση www.behringer.com

日本語版マニュアル @ www.behringer.com

使用说明书可在 www.behringer.com 下载

Technical specifications and appearance subject to change without notice. The information contained herein is correct at the time of printing. The names of companies, institutions or publications pictured or mentioned and their respective logos are registered trademarks of their respective owners. Their use neither constitutes a claim of the trademarks by BEHRINGER® nor affiliation of the trademark owners with BEHRINGER®. BEHRINGER® accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph or statement contained herein. Colours and specification may vary slightly from product. Products are sold through our authorised dealers only. Distributors and dealers are not agents of BEHRINGER® and have absolutely no authority to bind BEHRINGER® by any express or implied undertaking or representation. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording of any kind, for any purpose, without the express written permission of BEHRINGER Spezielle Studioteknik GmbH. BEHRINGER® is a registered trademark. ALL RIGHTS RESERVED. © 2006 BEHRINGER Spezielle Studioteknik GmbH, Hanns-Martin-Schleyer-Str. 36-38, 47877 Willich-Münchheide II, Germany. Tel. +49 2154 9206 0, Fax +49 2154 9206 4903

FEDERAL COMMUNICATIONS COMMISSION

COMPLIANCE INFORMATION



Responsible party name: **MUSIC Group Services USA, Inc.**

Address: **18912 North Creek Parkway,
Suite 200 Bothell, WA 98011,
USA**

Phone/Fax No.: **Phone: +1 425 672 0816
Fax: +1 425 673 7647**

CHROMATIC TUNER TU300

complies with the FCC rules as mentioned in the following paragraph:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Important information:

Changes or modifications to the equipment not expressly approved by MUSIC Group can void the user's authority to use the equipment.