GS-20-099	APPLICATION MANUAL		FC
TITLE		PAGE 1 of 4	REVISION
Manual for 0.5mm Contact Spacing Connector (62674 Series)		аитногіzед ву H.takakura	DATE 10/19/07
		CLASSIFICATION UNRESTRICTED	

1.0 SCOPE

This APPLICATION MANUAL summarizes the important and necessary points for using the 0.5mm contact spacing connector "62674series".

Before this connector is used, please be sure to look through this APPLICATION MANUAL.


2.0 APPLICATION PRODUCT

Product No.: 62674-____

3.0 BASIC OPERATION PROCEDURES OF CONNECTOR

The cable connections after soldered the connector on P.C.Board shall be done by the following procedures. Pulling a cable forcibly in the condition of the slider being locked must be avoided.

Works	No.	Operating Procedure		
Connecting of a cable	4-1-1	Provide open status by pulling the slider		
	4-1-2	Match connecting side of a cable to connecting side of connector		
	4-1-3	Fix temporarily by inserting a cable into card slot		
	4-1-4	Provide lock status by pressing the slider into		
Removing of a cable	4-2-1	provide open status by pulling the slider		
	4-2-2	Extract a cable straightly		

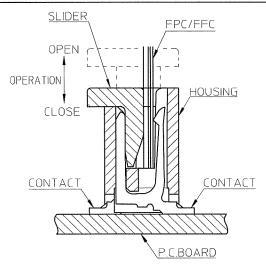

CROSS SECTION OF MATED CONDITION


Copyright FCI

Form E-3334 Rev F GS-01-001

PDM: Rev:A STATUS: Released Printed: Nov 28, 2010

NUMBE	GS-20-099	APPLICATION MANUAL		FCj
TITLE	TITLE		PAGE 2 of 4	REVISION A
Manual for 0.5mm Contact Spacing Connector (62674 Series		t Spacing Connector (62674 Series)	AUTHORIZED BY H.takakura	DATE 10/19/07
			CLASSIFICATION UNRESTRICTED	

4.0 **DETAIL HANDLING PROCEDURE AND REMARKS**

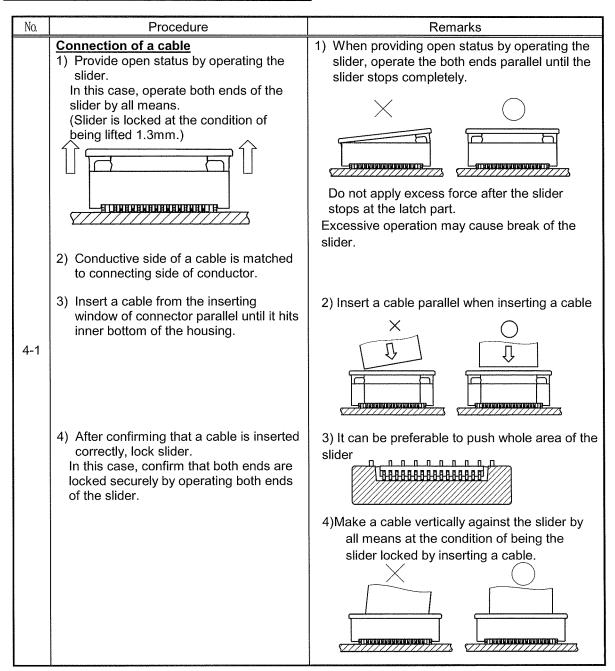

GS-20-099	APPLICATION MANUAL		FC
TITLE		PAGE 3 of 4	REVISION A
Manual for 0.5mm Contact Spacing Connector (62674 Series)		аитногіzed ву H.takakura	DATE 10/19/07
		CLASSIFICATION UNRESTRICTED	

No.	Procedure	Remarks
4-1		5) At the condition of being the slider locked, adjust so as not to have any gap at connecting portion of slider and main body. Do not apply excess force on a cable and connector at the condition of being a cable mated.
4-2	Removing of a cable 1) Provide open status by operating the slider. In this case, operate both ends of the slider by all means. (The slider is locked at the condition of being lifted 1.3mm.)	1) Pull the slider horizontally by the operation method of pulling both ends of the slider paralell. Excessive operation may cause break of the slider. Do not push the side of the slider operating. 2) Remove a cable after the slider is opened completely.

Copyright FCI

Form E-3334 Rev F

GS-01-001

GS-20-099)	APPLICATION MANUAL		FC
TITLE		PAGE 4 of 4	REVISION A	
Manual for 0.5mm Contact Spacing Connector (62674 Series)		AUTHORIZED BY H.takakura	DATE 10/19/07	
			CLASSIFICATION UNRESTRICTED	

5.0 OTHER REMARKS

- 1) Do not insert any things other than a cable and probe directly into contact point of the connector.
- 2) Do not perform any soldering process, when a cable is mated.

REVISION RECORD

REV	PAGE	DISCRIPTION	ECN NO	DATE
A	ALL	New release	J07-0519	10/19/07

Copyright FCI

Form E-3334 Rev F GS-01-001

PDM: Rev:A STATUS: Released Printed: Nov 28, 2010