

Quick Start Guide

Imager-based barcode reader with superior decoding capability in compact housing

This guide is designed to help you set up and install the ABR 3000. For complete information on programming, performance, troubleshooting, dimensions, and accessories, please refer to the Instruction Manual at www.bannerengineering.com. Search for p/n 207637 to view the Instruction Manual and for p/n 207635 to view the Barcode Manager Software Instruction Manual. Use of this document assumes familiarity with pertinent industry standards and practices.



WARNING: Not To Be Used for Personnel Protection

Never use this device as a sensing device for personnel protection. Doing so could lead to serious injury or death. This device does not include the self-checking redundant circuitry necessary to allow its use in personnel safety applications. A sensor failure or malfunction can cause either an energized or de-energized sensor output condition.

Models

Table 1: ABR 3000 Models

Model	Resolution	Lens	Lighting	Options	Communications	Codes
ABR3009-WSU2	WVGA (752 × 480 pixels)	9 mm, manual focus	White	Standard	Serial/USB	1D and 2D
ABR3009-WSE2					Serial/Ethernet	1D and 2D
ABR3009-WSU1					Serial/USB	1D
ABR3009-WSE1					Serial/Ethernet	1D
ABR3106-WSU2	1.2 MP (1280 × 960 pixels)	6 mm, manual focus			Serial/USB	1D and 2D
ABR3106-WSE2					Serial/Ethernet	1D and 2D
ABR3106-WSU1					Serial/USB	1D
ABR3106-WSE1					Serial/Ethernet	1D
ABR3106-WPU2				Polarized	Serial/USB	1D and 2D
ABR3106-WPE2					Serial/Ethernet	1D and 2D

Features

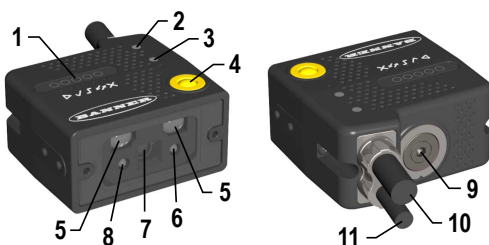


Figure 1. Models with Serial and Ethernet

1. Smart Teach Interface
2. Ethernet Connection LED
3. Power LED
4. Button
5. Internal Illuminators
6. Good Read LED (green)
7. Lens
8. Aiming System Laser Source
9. Focus Adjustment Screw
10. Ethernet Cable
11. Power - Serial - I/O Cable

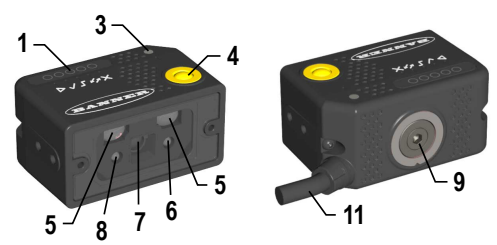


Figure 2. Models with Serial and USB

Indicators

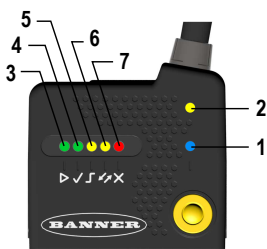


Figure 3. Indicators—Top of Device

Indicator	Color	LED Status During Normal Operation	
1	Power	Blue	Indicates connection to the power supply
2	Ethernet Connection	Amber	Indicates connection to the Ethernet network
3	READY/Learn	Green	Ready
4	GOOD/Setup	Green	Reading successful
5	TRIGGER/Focus (Aim)	Amber	Reading in progress. Do not trigger a new reading attempt until the current attempt finishes
6	COM/Test	Amber	Active result output transmission on the Main serial or USB ports
7	STATUS	Red	No read result

During the reader startup, all of the LEDs turn on for one second.

See [Smart Teach Interface](#) on page 3 for the colors and meanings of the five LEDs when the reader is in Smart Teach mode.

Laser Description and Safety Information

All ABR 3000 contain one aiming laser source used to position the reader. Disconnect the power supply when opening the device during maintenance or installation to avoid exposure to hazardous laser light. The laser beam can be switched on or off through a software command.

These products conform to the applicable requirements of IEC 60825-1 and comply with 21 CFR 1040.10 except for deviations pursuant to Laser Notice N° 50, date June 24, 2007. This product is classified as a Class 1 M laser product according to IEC 60825-1 regulations.



CAUTION: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. Do not attempt to disassemble this sensor for repair. A defective unit must be returned to the manufacturer.

Class 1 lasers are lasers that are safe under reasonably foreseeable conditions of operation, including the use of optical instruments for intra-beam viewing.

Installation Instructions

Set the Focus

The reader is factory-calibrated at three focus positions (45 mm, 70 mm, and 125 mm for WVGA models; 45 mm, 80 mm, and 125 mm for 1.2 MP models). The focus range is continuous to provide fine-tuning for your application. This means you can select a focus position different than these three positions.

1. Determine the focus position needed for your application. The following tables show the reading ranges at the three focus positions for Code 128 (1D) and Data Matrix (2D) 10 mil resolution codes.

Table 2: WVGA Models

Focus Position (mm)	Horizontal Field of View	Reading Range (Depth of Field)	
		1D	2D
45	38 mm (1.5 in)	30 mm to 80 mm (1.2 in to 3.1 in)	25 mm to 70 mm (1.0 in to 2.8 in)
70	56 mm (2.2 in)	60 mm to 125 mm (2.4 in to 4.9 in)	45 mm to 100 mm (1.8 in to 3.9 in)
125	95 mm (3.7 in)	95 mm to 155 mm (3.7 in to 6.1 in)	65 mm to 120 mm (2.6 in to 4.7 in)

Table 3: 1.2 MP Models

Focus Position (mm)	Horizontal Field of View	Reading Range (Depth of Field)	
		1D	2D
45	52 mm (2.0 in)	25 mm to 90 mm (1.0 in to 3.5 in)	30 mm to 65 mm (1.2 in to 2.6 in)
80	86 mm (3.4 in)	65 mm to 145 mm (2.6 in to 5.7 in)	55 mm to 105 mm (2.2 in to 4.1 in)
125	130 mm (5.1 in)	105 mm to 180 mm (4.1 in to 7.1 in)	80 mm to 125 mm (3.1 in to 4.9 in)

2. Using a 2.5 mm hex key, rotate the focus ring at the back of the reader to one of the three pre-calibrated distances or to the desired distance according to your application.



CAUTION: Do not rotate the focus ring beyond the focus scale limits; damage to the focus mechanism can occur.

Refer to the Reading Diagrams in the Instruction Manual which show the reading ranges at the different focus positions for Code 128 (1D) and Data Matrix (2D) codes.

Mount the Reader



Note: Mount the device at a 10° to 15° angle from the target to avoid direct reflections.

1. If a bracket is needed, mount the device onto the bracket.
2. Mount the device (or the device and the bracket) to the machine or equipment at the desired location. Do not tighten the mounting screws at this time.
3. Check the device alignment.
4. Tighten the mounting screws to secure the device (or the device and the bracket) in the aligned position.

Connect the Cables

Table 4: Power and I/O Pinouts for MQDC2S-17xx

Pin	Wire Color	Name	Description
1	Brown	V dc	Power Supply Input Voltage +
2	Blue	GND	Power Supply Input Voltage -
3	White	NC	not connected
4	Green	NC	not connected
5	Pink	-	Reserved
6	Yellow	IN1	External Trigger (referenced to GND)

Pin	Wire Color	Name	Description
7	Black	USB+	USB Data+ (only for USB models) ²
8 ³	Gray	O2	Output 2 (referenced to GND)
9 ³	Red	O1	Output 1 (referenced to GND)
13	White/Green	IN2	Input Signal 2 (referenced to GND)
14	Brown/Green	NC	not connected
15	White/Yellow	USB-	USB Data - (only for USB models) ²
16	Yellow/Brown	NC	not connected
Shield	n/a	n/a	Cable shield connected to chassis and 17-pin connector shell
		RS232 Main Serial Interface	RS422 FD Main Serial Interface
10	Violet	-	RX- ⁴
11	Gray/Pink	RX	RX+ ⁴
12	Red/Blue	-	TX-
17	White/Gray	TX	TX+

If using a TCNM-ACBB1 connection box, connect the reader using cable MQDEC-1703SS-DB25 and refer to the Instruction Manual for wiring details.

For Ethernet models, use Cat 5e or superior M12 D-code cables, such as STP-M12D-4xx.

To meet EMC requirements:

- Connect the reader chassis to the plant earth ground by means of a flat copper braid shorter than 100 mm
- Connect pin "Earth" of the TCNM-ACBB1 connection box to a good earth ground

Simple Configuration

From the factory, all standard 1D and 2D ABR 3000 models are set up to read Data Matrix barcodes. To configure other codes, perform the simple configuration using the Smart Teach Interface. A simple configuration does not require Barcode Manager software.

Smart Teach Interface

Smart Teach is designed to improve ease of installation and maintenance.


Status information is clearly presented by means of the five colored LEDs. The single push button provides access to the following modes.

Icon	Description
	Test Mode includes bar graph visualization to check static reading performance.
	Focus (Aim) turns on the laser aiming cross to aim the reader at the target.
	Setup self-optimizes and auto-configures image brightness parameters.
	Learn automatically detects and recognizes a single code which is presented to it. Successive Learns will substitute the current code. To configure multiple codes, use the Barcode Manager Auto-learn procedure.

Quick access to the following modes is provided using the push button:

1. Press the button. The **Status** LED gives visual feedback.
2. Hold the button until the specific mode LED is on (**Test**, **Focus/Aim**, **Setup**, or **Learn**).
3. Release the button to enter the specific mode.

After the button is pressed, the cycle of LED activation is as follows:

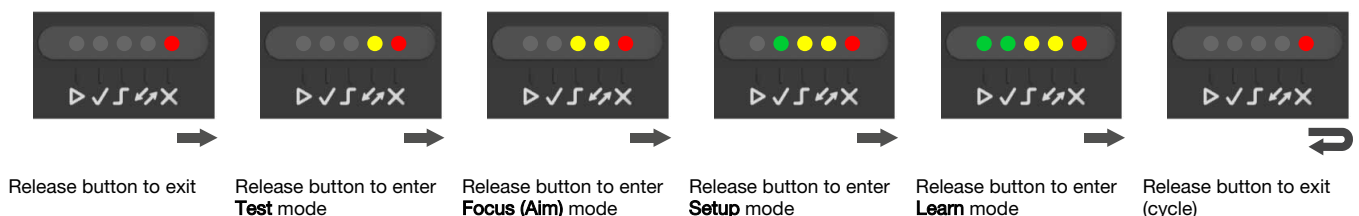

² If using the USB interface without Banner accessory cables, EMC compliance requires USB data and power signals to originate from the same source (computer). Maximum USB cable length from M12 17-pin connector is 2 meters. Incorrect disconnection can result in damage to the USB hub.

³ Referenced to GND; Outputs become opto-isolated and polarity sensitive when connected through the TCNM-ACBB1 connection box. See the Instruction Manual for connection details.

⁴ If using RS422, do not leave floating. See the Instruction Manual for connection details.

Focus/Aiming

The reader includes a built-in aiming system to aid in reader positioning. Access the aiming system through the Smart Teach Interface.


1. Power on the reader.
During startup, all of the LEDs blink for one second. On the connector side of the reader near the cable, the **Power LED** (blue) indicates the reader is correctly powered.
2. Enter **Focus/Aim** mode by pressing and holding the Smart Teach button until the  **Focus/Aim LED** is on.



Figure 4. Smart Teach Interface: Aim Mode

3. Release the button to enter **Aim** mode.
The aiming system turns on.
4. Place an application specific code in front of the reader at the reading distance indicated for your model, as described above, centering it a few mm to the left of the aiming system indicator as shown in the following figure.

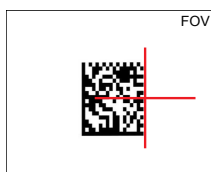


Figure 5. Aiming Mode Using the Red Crosshairs

5. Exit **Aim** mode by pressing the Smart Teach button once. The aiming system turns off.




Setup

Once entered, the imager automatically performs the Image Acquisition parameter calibration for the specific code presented to it.

1. Enter **Setup** mode by pressing and holding the Smart Teach button until the  **Setup LED** is on.



Figure 6. Smart Teach Interface: Setup Mode

2. Release the button to enter **Setup** mode.
The  **Setup LED** blinks until the procedure is completed. The **Setup** procedure ends when the Image Acquisition parameters are successfully saved in the reader memory, the  **Setup LED** stops blinking, the ABR beeps once, and exits **Setup** mode.
3. If the calibration cannot be reached after a timeout of about 5 (five) seconds, ABR exits without saving the parameters to memory, the  **Setup LED** stops blinking, and the ABR beeps once.

Learn

Once entered, the imager starts a procedure to automatically detect and recognize a single code⁶ which is presented to it. Successive Learns will substitute the current code. To configure multiple codes, use the Barcode Manager Auto-learn procedure.

Exit **Learn** mode at any time by pressing the Smart Teach button once. After a short delay the Learn procedure is cancelled.




1. Enter **Learn** mode by pressing and holding the Smart Teach button until the  **Learn LED** is on.



Figure 7. Smart Teach Interface: Learn Mode

2. Release the button to enter **Learn** mode.
The  **Learn LED** blinks until the procedure is complete. The Learn procedure ends when the Image Processing and Decoding parameters **for a single code** are successfully saved in the reader memory, the Green Spot is activated, the  **Learn LED** stops blinking, the ABR beeps once, and exits **Learn** mode.

Advanced Configuration

Use the following procedures for a more advanced configuration of the ABR. Advanced configuration requires Barcode Manager software. For complete configuration instructions, refer to the Instruction Manual at www.bannerengineering.com. Search for p/n 207637 to view the Instruction Manual.

⁶ The Learn procedure does not recognize the following symbologies: Postal Codes, Pharmacode, MSI, Standard 2 of 5, or Matrix 2 of 5.

Install Barcode Manager

Administrative rights are required to install the Barcode Manager software.



Important: Install Barcode Manager on a Windows® XP⁷, 7, 8, or 10⁸ computer. Barcode Manager does not currently support Windows Embedded (often used in industrial PCs and/or PLCs).

1. Download the latest version of Barcode Manager from www.bannerengineering.com.
2. Navigate to and open the downloaded file.
3. Run `Barcode_Manager_Setup.exe` to access the installation screen.
4. Follow the onscreen installation procedure.
After the installation is complete, the Barcode Manager entry is created under **Start > Programs > Banner Engineering**. A desktop icon is also created.

Connect to Barcode Manager

Depending on your ABR 3000 model, you can connect to the Barcode Manager configuration environment through one of the following interfaces:

- Ethernet Configuration— [Ethernet Device Discovery](#) on page 5
- USB Configuration— [USB Device Discovery](#) on page 5
- Serial Configuration⁹—See the Instruction Manual

Ethernet Device Discovery

The following configuration procedure assumes that a laptop computer running Barcode Manager is connected to a factory default reader through the Ethernet port.

The Barcode Manager user interface opens and displays a list of all the devices belonging to the Local Area Network (LAN).

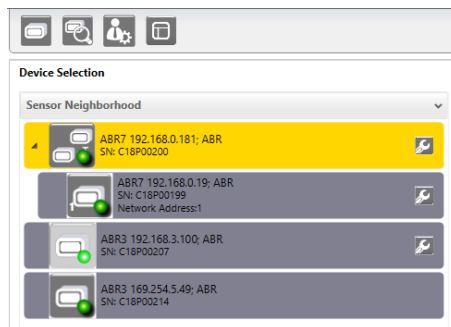




Figure 8. Device Discovery

The Barcode Manager discovery feature also shows devices not belonging to the LAN and displays them in light gray (see [Figure 8](#) on page 5). The following is an example configuration for Windows® operating system version 7, 8, or 10.

1. Confirm the network connections. Changing the Local Area Connection (LAN) properties of the programming computer to be compatible with the ABR device on the network may be required for connection.
 - a) Click the **Start** button, then on the **Start** menu, click **Control Panel** or search for **Control Panel**.
 - b) In **Control Panel**, click **Network and Internet**, then click **Network and Sharing Center**, and then click **Change adapter settings**.
 - c) Right-click on the connection that you want to change, then click **Properties**.
If you are prompted for an administrator password or confirmation, enter the password or provide confirmation.
 - d) In the connection properties, click **Internet Protocol Version 4 (TCP/IPv4)**, and then click **Properties**.
 - e) In the **Internet Protocol (TCP/IPv4) Properties**, select **Use the following IP address**.
 - f) Make sure that the IP address is 192.168.3.1, and the subnet mask is 255.255.255.0.
The IP address must be compatible with the default device address 192.168.3.100.
2. As an alternate method, change the IP address of the device.
3. In Barcode Manager, click  **Find Devices**.
The device displays in **Sensor Neighborhood** with a dark gray icon, meaning it is now part of the LAN and can be configured. The new IP address also displays.
4. Double-click or drag the **device**  icon into the **Selected Device Information Area**.
Details about the device display in this area.

After device discovery, configure your device through Barcode Manager. Go to [Automatic Setup](#) on page 6.


USB Device Discovery

The following configuration procedure assumes that a laptop computer running Barcode Manager is connected to an ABR 3000 reader through the USB port using cable MQDEC-1703SS-USB.

⁷ Windows XP is not compatible with ABR USB models.

⁸ Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.

⁹ All devices can be configured through their Main Serial port. However, through this interface, configuration is slower than the Ethernet or USB interfaces and presents some limitations. It is recommended to use the Serial interface for configuration only if the other interfaces are not available.

1. After the reader is connected to the USB port and successfully starts, from Barcode Manager, click  **Getting Started** to discover the reader.
The reader is shown in the network **Sensor Neighborhood** list.

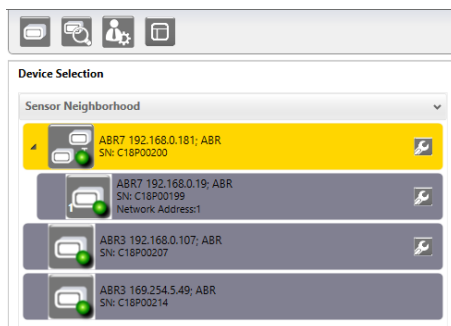



Figure 9. *Sensor Neighborhood List*

2. Find your reader in the list by matching its serial number (SN). The USB driver creates a virtual Ethernet connection with an IP address that cannot be modified.





Tip: The USB unit is the one in the **Sensor Neighborhood** list without a wrench  icon (used for modifying the IP parameters).

3. Double-click on or drag the **device**  icon into the **Selected Device Information Area**. Details about the device display in this area.

Automatic Setup

To begin configuration, the reader must be correctly mounted at the correct reading distance for your application so that its Field of View covers the application reading area.

1. Click  **Open Device Configuration**. The **Open Device Configuration** window opens showing the list of configurations (jobs) currently saved on the device. For new devices, the only saved configuration is the Default configuration.
2. Click **OK**. The device enters continuous mode and begins acquiring images.
3. Place the application code in front of the reader at the correct application reading distance.
4. If needed, set the focus manually. See [Set the Focus](#) on page 2.
5. After the code is positioned, click **Pause**  to stop image acquisition.



Note: If the image display area is too dark to see the images being captured, drag the Gain and Exposure Time sliders to the right to increase visibility. This will not affect Automatic Setup.

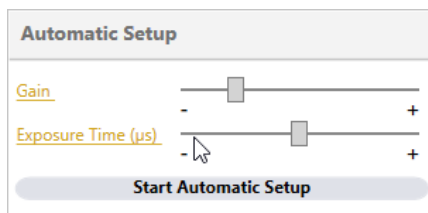


Figure 10. *Gain and Exposure Time*

6. Click **Start Automatic Setup**. The **Automatic Setup** window opens.

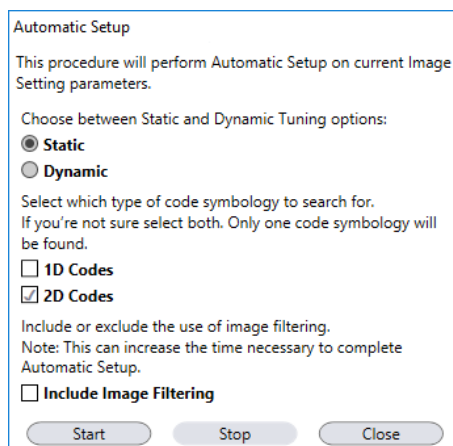


Figure 11. *Automatic Setup*

7. Select the correct reading conditions: **Static** or **Dynamic** Self-Tuning option, **1D** or **2D** code. Select **Include Image Filtering** to find the best decoding condition.
8. Click **Start**.

The reader begins acquiring images and adjusting the brightness and decoding settings to find a barcode and optimize reading for the first code it finds. At the end of the procedure the Status: Completed message displays.

9. Close the **Automatic Setup** window.

Your reader is now optimized for decoding. Continue setting up the reader for your application as desired. Typically, **Reading Phase** is configured next.

Specifications—Reader

Supply Voltage

5 V dc to 30 V dc
10 V dc to 30 V dc with TCNM-ACBB1

Consumption

0.4 A to 0.1 A maximum

Communication Interface

Main RS232 or RS422 full duplex: 2400 bit/s to 115200 bit/s
USB: USB 2.0 Hi-Speed
Ethernet¹⁰: 10/100 Mbit/s

Inputs

Input 1 (External Trigger) and Input 2: Protected against short-circuits (opto-isolated and polarity insensitive when connected through TCNM-ACBB1)

Outputs

2 NPN or PNP short circuit protected (opto-isolated and polarity sensitive when connected through TCNM-ACBB1)

Optical Features

See the Instruction Manual for details
LED Safety: LED emission according to EN 62471

Imager

WVGA: 752 × 480 pixels, CMOS
1.2MP: 1280 × 960 pixels, CMOS

Construction

Aluminum

Operating Conditions

Operating Temperature¹¹: 0 °C to +45 °C (+32 °F to +113 °F)
Storage Temperature: -20 °C to +70 °C (-4 °F to +158 °F)
90% maximum relative humidity (non-condensing)

Environmental Rating

IEC IP65

Other

Smart Teach button (configurable via Barcode Manager), beeper

Parameter Storage

Permanent memory (Flash)

Required Overcurrent Protection



WARNING: Electrical connections must be made by qualified personnel in accordance with local and national electrical codes and regulations.

Overcurrent protection is required to be provided by end product application per the supplied table.
Overcurrent protection may be provided with external fusing or via Current Limiting, Class 2 Power Supply.
Supply wiring leads < 24 AWG shall not be spliced.
For additional product support, go to www.bannerengineering.com.

Supply Wiring (AWG)	Required Overcurrent Protection (Amps)
20	5.0
22	3.0
24	2.0
26	1.0
28	0.8
30	0.5

Certifications



Barcode Types

1-D and stacked		2-D	POSTAL
<ul style="list-style-type: none"> PDF417 Standard and Micro PDF417 Code 128 (GS1-128) Code 39 (Standard and Full ASCII) Code 32 MSI Standard 2 of 5 Matrix 2 of 5 	<ul style="list-style-type: none"> Interleaved 2 of 5 Codabar Code 93 Pharmacode EAN-8/13-UPC-A/E (including Addon 2 and Addon 5) GS1 DataBar Family Composite Symbolologies 	<ul style="list-style-type: none"> Data Matrix ECC 200 (Standard, GS1 and Direct Marking) QR Code (Standard and Direct Marking) Micro QR Code MAXICODE Aztec Code 	<ul style="list-style-type: none"> Australia Post Royal Mail 4 State Customer Kix Code Japan Post PLANET POSTNET POSTNET (+BB) Intelligent Mail Swedish Post

FCC Statement

Modifications or changes to this equipment without the expressed written approval of Banner Engineering could void the authority to use the equipment.

This device complies with PART 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference which may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

PC Requirements—Barcode Manager

Administrative rights are required to install the Barcode Manager software.

Operating System

Microsoft® Windows® operating system version XP SP3¹², 7, 8, or 10¹³
Barcode Manager does not currently support Windows Embedded (often used in industrial PCs and/or PLCs)

System Type

32-bit or 64-bit

Hard Drive Space

2 GB hard disk for 64-bit machines; 1 GB hard disk for 32-bit machines

Memory (RAM)

1 GB RAM

Processor

2.00 GHz or faster microprocessor

Screen Resolution

One 19-inch or larger monitor, optimized for 1280×1024 resolution

Third-Party Software

Web Browser: Google Chrome, Mozilla Firefox, Microsoft Internet Explorer, Opera, etc.

Connection

100 Base-T Ethernet

¹⁰ The Ethernet interface supports application protocols: TCP/IP, EtherNet/IP, Modbus TCP

¹¹ High ambient temperature applications should use a metal mounting bracket for heat dissipation.

¹² Windows XP is not compatible with ABR 3000 USB models.

¹³ Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.

This product is covered by one or more of the following patents:

Design patents: EP003042845; EP003074079

Utility patents: EP0996284B1; EP0999514B1; EP1014292B1; EP1128315B1; EP1172756B1; EP1396811B1; EP1413971B1; EP1804089B1; EP2315156B1; EP2517148B1; EP2649555B1; JP4435343B2; JP4571258B2; JP5192390B2; US6512218; US6616039; US6808114; US6877664; US6997385; US7053954; US7387246; US8058600; US8113430; US8368000; US8688003; US8915443; US9268982; US9430689; ZL200680050007.8.

Banner Engineering Corp. Limited Warranty

Banner Engineering Corp. warrants its products to be free from defects in material and workmanship for one year following the date of shipment. Banner Engineering Corp. will repair or replace, free of charge, any product of its manufacture which, at the time it is returned to the factory, is found to have been defective during the warranty period. This warranty does not cover damage or liability for misuse, abuse, or the improper application or installation of the Banner product.

THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS OR IMPLIED (INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE), AND WHETHER ARISING UNDER COURSE OF PERFORMANCE, COURSE OF DEALING OR TRADE USAGE.

This Warranty is exclusive and limited to repair or, at the discretion of Banner Engineering Corp., replacement. **IN NO EVENT SHALL BANNER ENGINEERING CORP. BE LIABLE TO BUYER OR ANY OTHER PERSON OR ENTITY FOR ANY EXTRA COSTS, EXPENSES, LOSSES, LOSS OF PROFITS, OR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES RESULTING FROM ANY PRODUCT DEFECT OR FROM THE USE OR INABILITY TO USE THE PRODUCT, WHETHER ARISING IN CONTRACT OR WARRANTY, STATUTE, TORT, STRICT LIABILITY, NEGLIGENCE, OR OTHERWISE.**

Banner Engineering Corp. reserves the right to change, modify or improve the design of the product without assuming any obligations or liabilities relating to any product previously manufactured by Banner Engineering Corp. Any misuse, abuse, or improper application or installation of this product or use of the product for personal protection applications when the product is identified as not intended for such purposes will void the product warranty. Any modifications to this product without prior express approval by Banner Engineering Corp will void the product warranties. All specifications published in this document are subject to change; Banner reserves the right to modify product specifications or update documentation at any time. Specifications and product information in English supersede that which is provided in any other language. For the most recent version of any documentation, refer to: www.bannerengineering.com.