


PRO-ELEC

AIR COOLER Model: PEL00310

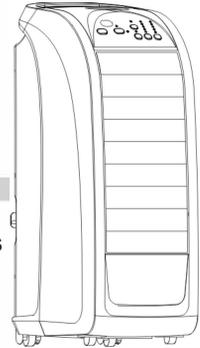

Please read these instructions carefully before use and retain for future reference.


IMPORTANT SAFETY INFORMATION

- When using electrical appliances basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. The air cooler should be placed on a flat and stable surface when operating. There are no user-serviceable parts in this appliance. Refer servicing to qualified personnel.
- This appliance is a fan driven air humidifier/cooler NOT an air conditioning unit designed for indoor domestic application, not for commercial use.
- The power plug must be removed from the power socket before cleaning, servicing, maintenance and moving from one location to another.
- For the remote control, only use the batteries recommended (2 x AAA, *not provided*).
- Ensure that the batteries are inserted correctly, observing the plus and minus marks on both the batteries and compartment. Fit a full set of batteries at one time. Remove dead batteries from the remote control, or if it is not going to be used for a long time.
- Never mix old and new batteries together or different types of batteries. Never dispose of batteries in a fire or attempt to recharge ordinary batteries.
-

ASSEMBLY


A) Disassembly method of the rear grille and curtain:

1.

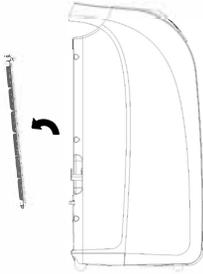

Remove the grille from the back of the air cooler by pushing down the two clasps at the top of the grille and pulling towards you.


2.

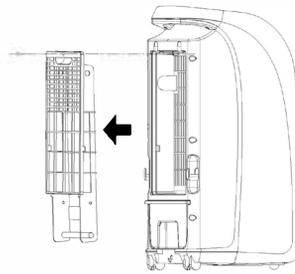


Loosen one screw to disassemble the curtain bracket and pull the bracket towards you to remove it.

B) Filling the water tank:

3.

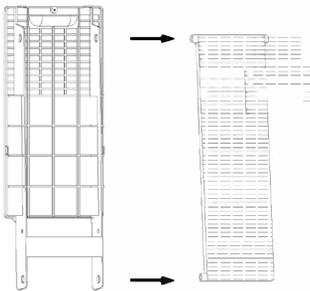


Remove the curtain from the bracket. To refit the curtain reverse steps 1, 2 and 3.

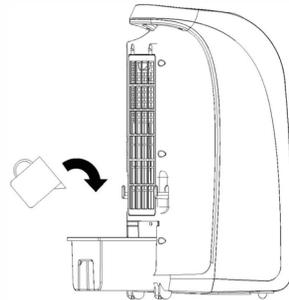

Turn the locking nut of the water tank anti-clockwise, pull out the tank and pour the water into the tank.


Note: Ensure you do not overfill the tank.

OVERVIEW

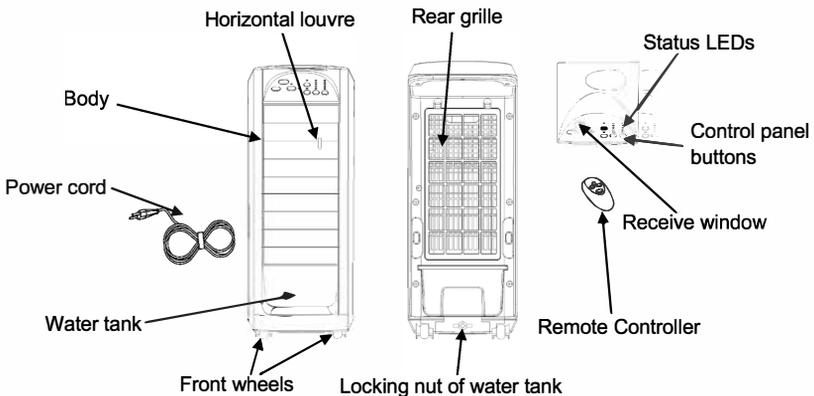

CONTROL PANEL FUNCTIONS

Button	Function
1. TIMER	Set the time for which the air cooler operates, selecting 1h, 2h, 4h, 6h or 8h.
2. SWING	The inner vents will move from side to side constantly in order to redirect air.
3. SPEED	There are three speed levels to choose from: Low/Med/Hi.
4. ON/OFF	Turn the appliance off when it is not in use.
5. MODE	Select between 'Variable' or 'Sleep' mode. Please note that when the fan is turned on the mode function is off and the cooler will operate normally at the selected speed.
6. HUMIDIFIER	1. Press the button once to operate the motor. 2. Press the button for a second time to stop the motor.

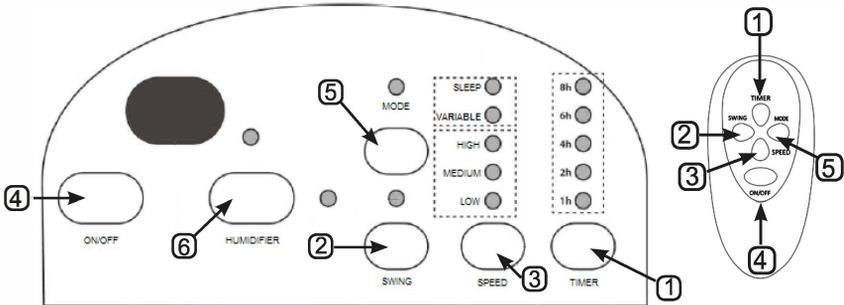

VARIABLE MODE

In "Variable" mode the air cooler is set to step through a cycle of variable fan speeds. The average speed at which the fan operates in Variable mode is dependent upon the speed selected on the control panel (High/Medium/Low).

The higher the speed setting, the faster the average variable speed will be.

Note: Once you turn the air cooler on it will operate normally until a mode is selected.

SLEEP MODE

Operation Rules	Action
High Speed Sleep Mode	<ul style="list-style-type: none"> • High variable speed for 30 minutes, • Then medium variable speed for 30 minutes, • Then low variable speed until the cooler turns off.
Medium Speed Sleep Mode	<ul style="list-style-type: none"> • Medium variable speed for 30 minutes, • Then low variable speed until the cooler turns off.
Low Speed Sleep Mode	<ul style="list-style-type: none"> • Low variable speed until the cooler turns off.

Note: For the remote control, only use the batteries recommended (2 x AAA, *not provided*). When inserting the batteries, ensure that they are inserted correctly, observing the plus and minus marks on both the batteries and the compartment.

CLEANING & MAINTENANCE

IMPORTANT: Unplug or disconnect the air cooler from the power supply before servicing or cleaning.

Body: Clean the body of the appliance with a soft cloth. If the dust is difficult to remove, wipe it with a damp cloth. Do not use chemicals, abrasives or solvents that may damage the air cooler.

Curtain: Clean the curtain with clean water.

Water: The water should be changed every two days for hygiene reasons.

If the product is not going to be used for a long period of time the water should be removed from the tray. The tray and fan should be dried thoroughly before storing.

The appliance must be cleaned before use.

CAUTION: Disregarding the cleaning instructions can cause danger to hygiene.

SPECIFICATIONS

Rated Voltage	220-240V ~ 50Hz
Rated Input Power	70W
Power - Standby Mode (PSB)	0.45W
Maximum Fan Flow Rate (F)	15.5m ³ /min
Service Value	0.23(m ³ /min)/W
Seasonal Electricity Consumption (Q)	21.9kWh/a
Fan Sound Power Level (LWA)	63.1dB(A)
Maximum Air Velocity (c)	3.15m/sec



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.

