# XCSRC11MM12

Safety RFID contactless switch-Standalone model-EDM+Manual Start-Unique pairing



#### Main

Range of product	Preventa Safety detection	
Product or component type	Preventa RFID safety switch	
Component name	XCSRC	


# Complementary

Design	Rectangular, standard	
Size	50 x 15 x 15 mm transponder 108.3 x 30 x 15 mm reader	
Material	Valox	
Electrical connection	1 male connector	
Connector type	M12 male	
Type of output stage	Solid-state, PNP	
Safety outputs	2 NO	
Number of poles	8	
Local signalling	2 multi-colour LEDs green, orange and red	
[Sa] assured operating distance	10 mm face to face	
[Sar] assured tripping distance	35 mm face to face	
Approach directions	3 directions-transponder with rotary sensing face	
[Ue] rated operational voltage	24 V DC (- 2010 %) SELV or PELV conforming to EN/IEC 60204-1	
[le] rated operational current	60 mA	
[Ui] rated insulation voltage	30 V DC	
[Uimp] rated impulse withstand voltage	0.8 kV IEC 60947-5-2	
Protection type	Short-circuit protection	
Maximum switching voltage	26.4 V DC	
Switching capacity in mA	400 mA	
Switching frequency	<= 0.5 Hz	
Discordance time	<= 120 ms	
Response time	250 ms typical	
Delay first up	5 s	
Tightening torque	< 1.5 N.m	
Standards	EN/IEC 60947-5-2 EN/IEC 60947-5-3 ISO 14119	
Product certifications	CSA 22-2 FCC IC TÜV Ecolab RCM EAC	
Marking	CE TÜV EAC RCM CULus	

	FCC IC
Safety level	SIL 3 EN/IEC 61508 SILCL 3 EN/IEC 62061 PL = e EN/ISO 13849-1 Category 4 EN/ISO 13849-1
Safety reliability data	$PFH_{D} = 5E-10/h EN/IEC 62061$ $PFH_{D} = 5E-10/h EN/ISO 13849-1$
Service life	20 yr
Ambient air temperature for operation	-2570 °C
Ambient air temperature for storage	-4085 °C
Vibration resistance	10 gn 10150 Hz EN/IEC 60068-2-6
Shock resistance	30 gn 11 ms EN/IEC 60068-2-27
Electrical shock protection class	Class III EN/IEC 61140
IP degree of protection	IP65 EN/IEC 60529 IP66 EN/IEC 60529 IP67 EN/IEC 60529 IP69K DIN 40050


### **Environment**

# **Dimensions**

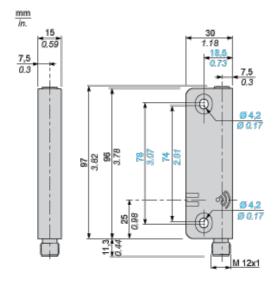

# **Connections**

## M12 Connector, 8-pin

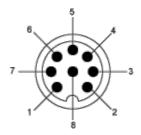


- (1) + 24 VDC
- (2) OSSD2
- (3) 0 VDC
- (4) OSSD1
- (5) EDM\_ST\_1
- (6) EDM\_ST\_2
- (7) NC (Not connected)



## **Connections**

## **Wiring Diagram**

Cat. 4 / PL=e (EN/ISO 13849-1) / SIL3 (IEC 61508) / SILCL3 IEC 62061)

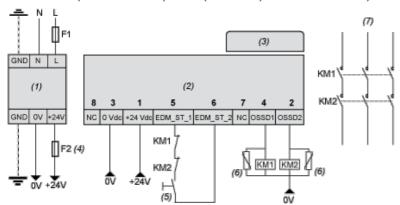

- (1) Power Supply
- (2) Reader
- (3) Transponder
- (4) 1 A max.
- (5) Restart
- (6) Use of arc suppressors for KM1 and KM2 is recommended.
- (7) Power circuit


**NOTE:** KM1 and KM2 contactors must have force-guided contacts.


# **Mounting and Clearance**

**Face to Face Mounting (Preferred Configuration)** 

Example n°1

Example n°2

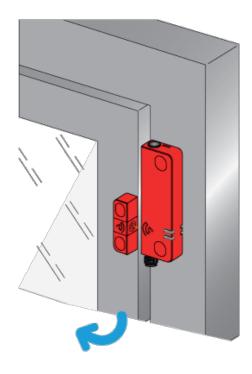


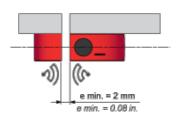


**e:** Recommended minimum mounting distance between transponder and reader.


# Face to Face Mounting (Preferred Configuration)

Example n°3

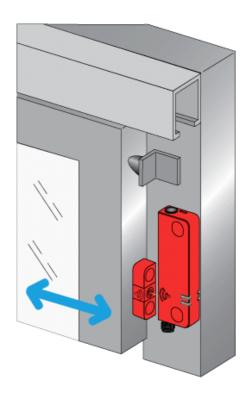

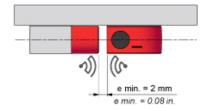

**e:** Recommended minimum mounting distance between transponder and reader.

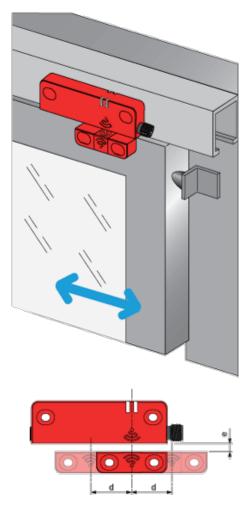


 ${f e}$  > 2 mm. (e: recommended minimum mounting distance between transponder and reader)  ${f min.}$ 

d: Detection limit

# **Mounting and Clearance**

Side by Side Mounting

**Correct Mounting Configuration** 

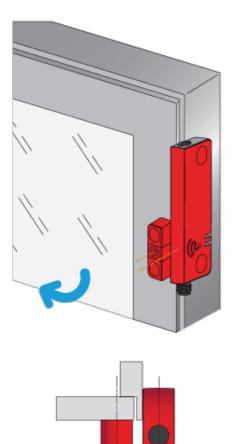


e: Recommended minimum mounting distance between transponder and reader.


e min. = 0.5 mm e min. = 0.02 in.

# **Mounting and Clearance**

# Minimum Mounting Clearances between Safety Switches

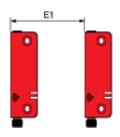



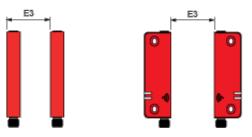

Dimensions in mm

E1 min. E2 min. E3 min.

45 150 65	
-----------	--


Dimensions in in.

E1 min.	E2 min.	E3 min.
1.77	5.91	2.56

## **Detection Curves**

# Face to Face Mounting (Preferred Configuration)


Sao and Sar sensing distances along Y axis as function of Z (longitudinal misalignment for X=0)

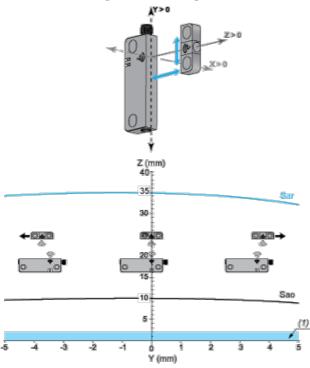

**Sar:** Assured release distance **Sao:** Assured operating distance

(1) Recommended minimum mounting distance between transponder and reader.

Sao and Sar sensing distances along X axis as function of Z (transverse misalignment for Y=0)

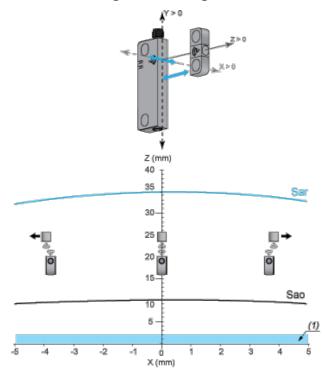


Sar: Assured release distance

(1) Recommended minimum mounting distance between transponder and reader.

### **Detection Curves**

### **Side by Side Mounting**

Sao and Sar sensing distances along Y axis as function of X (longitudinal misalignment for Z=0mm)

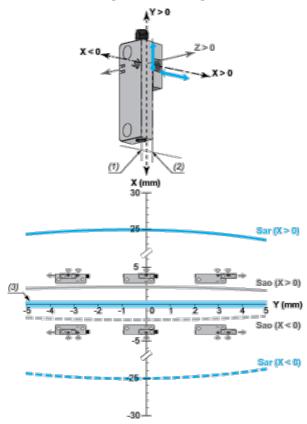


Sar: Assured release distance

Sao: Assured operating distance

- (1) X=0 for X<0
- (2) X=0 for X>0
- (3) Recommended minimum mounting distance between transponder and reader.

Sao and Sar sensing distances along Z axis as function of X (transverse misalignment for Y=0mm)

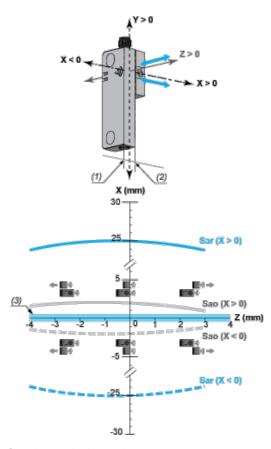

**Sar:** Assured release distance **Sao:** Assured operating distance

- (1) X=0 for X<0
- (2) X=0 for X>0
- (3) Recommended minimum mounting distance between transponder and reader.