


PRO-ELEC

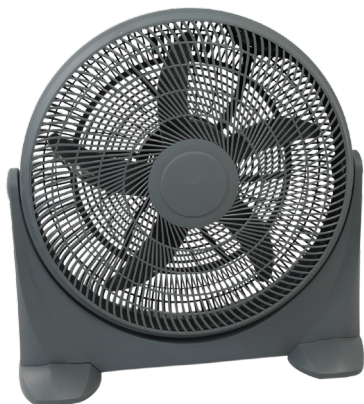

20" High Velocity Fan Model: PEL01927

Please read these instructions carefully before use and retain for future reference.

IMPORTANT SAFETY INFORMATION

- When using electrical appliances basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understands the hazards involved.
- Children should not play with this appliance.
- Cleaning and maintenance shall not be made by children without supervision.
- There are no user-serviceable parts in this product. Refer servicing to qualified personnel.
- Do not operate this fan with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not insert anything through the grille when the fan is in use.
- Make sure that the fan is on a stable surface when operating.
- It is recommended to unplug the fan from the mains socket when not in use.

FEATURES

- High velocity motor for maximum air circulation.
- Tilt-adjustment for flexible use.
- Three different speed settings.
- Precision fan blades for powerful air-flow, yet low noise.

OPERATION

- Tilt the fan by turning the fan guard assembly to the desired angle.
- Do not touch the blades by hand or with any object.
- Select the desired speed setting. The speed control numbers correspond as follows:
 - 0 = off
 - 1 = slow
 - 2 = medium
 - 3 = fast

CLEANING

- To clean, disconnect the power cord from the mains and remove the guard and fan blades carefully.
- Use a soft cloth and soapy water to clean any stains that may have appeared.
- Then wipe using a dry cloth.
- Do not use any chemicals, abrasives or solvents that could damage the fan.
- Ensure that the blades and guards are fixed securely before using again.

TECHNICAL SPECIFICATION

Power consumption	100W
Main voltage	220-240V~ 50Hz
Dimensions (HxWxD)	600 x 610 x 250mm
Weight	3.5kg



INFORMATION ON WASTE DISPOSAL FOR CONSUMERS OF ELECTRICAL & ELECTRONIC EQUIPMENT.

When this product has reached the end of its life it must be treated as Waste Electrical & Electronic Equipment (WEEE). Any WEEE marked products must not be mixed with general household waste, but kept separate for the treatment, recovery and recycling of the materials used. Contact your local authority for details of recycling schemes in your area.

