**Automotive Products** 

Basic Electrical Testers

**Calibrators** 

Clamp Meters

**Data Acquisition** 

**Digital Multimeters** 

**Gas Measurement** 

**Power Supplies** 

Oscilloscopes

**RCL Meters** 

**Process Products** 

**Power Quality Tools** 

ScopeMeter® Test

**Thermometers** 

**Signal Sources** 


Timer/Counters

**TV Generators** 

## FlukeView® Software for documenting, archiving and analysis

**Product Home** 



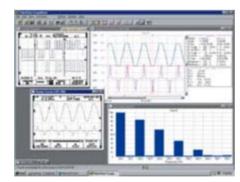

## FlukeView for Windows® helps you get more out of your ScopeMeter by:

- Documenting transfer waveforms, screens and measurement data from the ScopeMeter to a PC. Print or import the data into your report.
- Adding user text to individual ScopeMeter settings - providing guidance to the operator when recalling a set-up.
- Archiving create a library of waveforms with your comments for easy reference and comparison.
  Store complete Replay cycles for analysis of waveform changes.
  Store complete memory content of the ScopeMeter on your PC for back-up purposes.
- Waveform Compare store reference waveforms, add operator instructions, and send both to the ScopeMeter for waveform comparison and "Pass/Fail" testing.
- Analysis use cursors, perform spectrum analysis or export data to other analysis programs.

Download the latest update, or the