

# DIN Rail Power Supply Unit 240W, 24V Output



- Universal Input 90 264 Vac
- 100% Full Load Burn-in test
- Cooling by Free Air convection
- Led Indicator for DC Power ON and for DC Low
- Protections against: Short Circuit, Over Voltage, Over Current and Over Temperature.

# Power Supply Unit

## **Revised January 2020**

Preface

This User Guide is been implemented by Boot & Work, S.L. working under the name Industrial Shields.

### Purpose of the manual

The information contained in this manual can be used as a reference to operating, to functions, and to the technical data of the signal modules, power supply modules and interface modules.

#### **Intended Audience**

This User Guide is intended for the following audience:

- Persons in charge of introducing automation devices.
- Persons who design automation systems.
- Persons who install or connect automation devices.
- Persons who manage working automation installation.

# Intended use or of Industrial Shields products

#### Consider the following:

Industrial Shields products should only be used for the cases of application foreseen in the catalogue and the associated technical documentation. If third-party products and components are used, they must have been recommended or approved by Industrial Shields.

The correct and safe operation of the products requires that your transport, storage, installation, assembly, operation and maintenance have been carried out in a correct It must respect the permissible ambient conditions. You should also follow the indications and warnings that appear in the associated documentation.

The product / system dealt with in this documentation should only be handled or manipulated by qualified personnel for the task entrusted and observing what is indicated in the documentation corresponding to it, particularly the safety instructions and warnings included in it. Due to their training and experience, qualified personnel are in a position to recognize risks resulting from the handling or manipulation of such products / systems and to avoid possible hazards.

#### Disclaimers

### Weights and Dimensions

Dimensions and weights are nominal and they are not used for manufacturing purposes, even when tolerances are shown.

#### Performance Data

The performance data given in this manual is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of INDUSTRIAL SHIELDS's test conditions, and the users most correlate it to actual application requirements. Actual performance is subject to the INDUSTRIAL SHIELDS Warranty and Limitations of Liability.

#### Change in Specifications

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when features are changed, or published ratings or when significant construction changes are made. However, some specifications of the products may be changed without any notice. When in doubt, special numbers may be assigned to fix or establish key specifications for your

application on your request. Please consult with your INDUSTRIAL SHIELDS representative at any time to confirm actual specifications of purchased products.

#### **Errors and Omissions**

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

These components may only be operated in closed housings or in higher-level control cabinets with protective covers that are closed, and when all of the protective devices are used. These components may only be handled by qualified and trained technical personnel who are knowledgeable and observe all of the safety information and instructions on the components and in the associated technical user documentation. When carrying out a risk assessment of a machine in accordance with the EU Machinery Directive, the machine manufacturer must consider the following residual risks associated with the control and drive components of a PDS.

# **Table of Contents**

| Ge | neral Description          | 6  |
|----|----------------------------|----|
|    | 1.1. Electrical            | 6  |
|    | 1.2. Input Parameters      | 6  |
|    | 1.3. Output Parameters     | 7  |
|    | 1.4. Protection            | 7  |
|    | 1.5. Mechanical dimension  | 8  |
|    | 1.6. Serigraphy            | 8  |
| Op | erating Specifications:    | 9  |
|    | 2.1. Environment           | 9  |
|    | 2.2. Safety/EMC            | 9  |
| Ар | plications and Maintenance | 10 |
|    | 3.1. Series Operation      | 10 |
|    | 3.2. Parallel Operation    | 11 |
|    | 3.3. Din Rail Mounting     | 12 |



# 1 General Description

# 1.1. Electrical

| Nominal Input<br>Voltage | Output<br>Voltage | Output<br>Current | Ripple (Max.) | Efficiency<br>(Typ.) | Certificate             |
|--------------------------|-------------------|-------------------|---------------|----------------------|-------------------------|
| 100-240 Vac              | 24 Vdc            | 10 A              | 1% Vo mVp-p   | 90%                  | CE, FCC, CB,<br>UL, CUL |

# 1.2. Input Parameters

| PARAMETER   | CONDITIONS  | MIN | ТҮР | MAX          | UNITS  |  |
|---|---|-----|-----|--------------|--------|--|
| Input Voltage   |   | 90  |     | 264          | Vac    |  |
| Input<br>Frequency  |   | 47  |     | 63           | Hz     |  |
| Input Current Full load, Vin=115Vac Full load, Vin = 230Vac |   |     |     | 2.6<br>1.3   | A<br>A |  |
|   | Cold start, Vin = 115Vac<br>Cold start, Vin = 230Vac  |     |     | 35<br>65     | A<br>A |  |
| Inrush Current  | 1. This product is built inrush limiting circuit to protect the circuit from surge curre when the power is turned on. Malfunction can occur by repeating the input voltage rapidly. Therefore, sufficient interval should be given between turning on and off the |     |     |              |        |  |
|   | 2. To avoid connecting the switch or fuse to input terminal (outside of the power supply), more consideration should be given when selecting the parts that can endure the inrush current.  |     |     |              |        |  |
| Power factor<br>(PF)  | Full load, Vin = 115Vac<br>Full load, Vin =230Vac   |     |     | 0.99<br>0.96 |        |  |
| Stand-by<br>power<br>consumption                            | Vin = 230Vac  |     |     | 7            | W      |  |
| Surge voltage   | L-N   |     |     | 2            | KV     |  |


# 1.3. Output Parameters


| PARAMETER                             | CONDITIONS  | MIN | ТҮР   | MAX | UNITS |  |  |
|---------------------------------------|---|-----|-------|-----|-------|--|--|
| Output Voltage accuracy               |   |     |       | 2   | %     |  |  |
|                                       |   |     | 22-28 |     | Vdc   |  |  |
| Output Voltage<br>adjustment<br>range | Output voltage can be adjusted within above range by V-ADJ. variable resistance inside of the power supply. When output voltage exceeds the range, the power supply will be in failure or get into over voltage protection mode. To avoid the case that the output voltage is higher than rated voltage, output current should be used under rated current. |     |       |     |       |  |  |
| Minimum Load                          |   | 0   |       |     | А     |  |  |
| Line regulation                       | Vin from 100 Vac to<br>240 Vac  |     |       | 2   | %     |  |  |
| Stand-by power consumption            | Vout from min. to max.  |     |       | 3   | %     |  |  |
| Turn-on delay<br>time                 | Full load, Vin = 115<br>Vac   |     | 3600  |     | ms    |  |  |
| Hold up time                          | Full load, Vin = 115<br>Vac   |     | 20    |     | ms    |  |  |


# 1.4. Protection

| Short Circuit       | Hiccup mode, it will recover automatically after fault condition is removed   |
|---------------------|---|
|                     | Over Voltage protection value 33V   |
| Over Voltage        | (1) When output voltage exceeds above over voltage protection value or reversal voltage occurs, the protection will be started and the output voltage will be cut off in order to protect the power supply;  (2) The power supply will recover after the power is turned on again                     |
|                     | Over Current protection value 11A   |
| Over Current        | <ul><li>(1) When output voltage exceeds above over current protection value, the protection will be started and the output voltage will be cut off in order to protect the power supply;</li><li>(2) The power supply unit will recover automatically after the fault condition is removed.</li></ul> |
|                     | Over Temp. protection value: 110 ± 10°C   |
| Over<br>Temperature | <ul><li>(1) When the ambient temperature exceeds above over temperature protection value, the protection will be started and go into hiccup mode;</li><li>(2) The power supply unit will recover automatically after the fault condition is removed.</li></ul>  |

### 1.5. Mechanical dimension

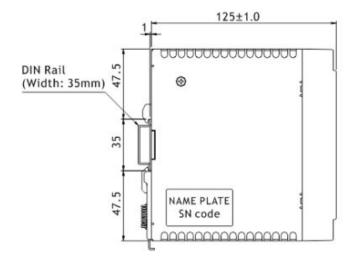

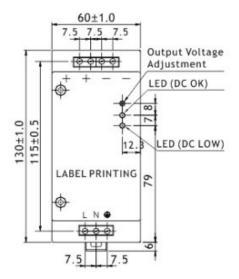

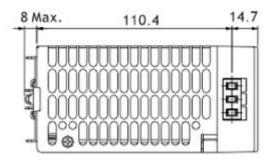

Unit: mm Tolerance ± 1.0

# 1.6. Serigraphy



| Marking  | No. | Assignment                                |  |
|----------|-----|---|--|
| +        | 1   | DC/ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ |  |
| +        | 2   | DC(+) Output Terminal                     |  |
| -        | 3   | DC( ) Output Terminal                     |  |
| -        | 4   | - DC(-) Output Terminal                   |  |
| L        | 5   | AC(L) Input Terminal                      |  |
| N        | 6   | AC(N) Input Terminal                      |  |
| <b>(</b> | 7   | AC Grounding Terminal                     |  |
| V-ADJ.   | 1   | DC Output voltage adjustment trimmer      |  |
| DC OK    | 1   | DC Output OK indication LED(Green)        |  |
| DC LOW   | 1   | DC Output Low indication LED(Red)         |  |

# **2 Operating Specifications:**

# 2.1. Environment

| PARAMETER                           | CONDITIONS  | MIN | TYP | MAX | UNITS |
|-------------------------------------|---|-----|-----|-----|-------|
| Ambient<br>Operating<br>temperature | Startup at rated voltage  | -25 |     | 70  | °C    |
| Operating<br>Relative<br>humidity   | Non Condensing  | 20  |     | 95  | %     |
| Storage<br>Temperature              | Humidity 5 - 95% RH   | -40 |     | 85  | °C    |
| MTBF                                | Full load, 220Vac input, 25°C ambient temperature   | 230 |     |     | Khrs  |
| DC-OK led                           | LED (Green) DC OK LED light will be ON when the power supply is properly operated   |     |     |     |       |
| DC-Lowled                           | LED (Red) DC Low LED Light will be ON: (1) When output voltage is below 85%(±2.5%) from the rated output voltage; (2) When get over voltage, over current, over temperature and short circuit fault |     |     |     |       |
| Cooling                             | Free air convection   |     |     |     |       |
| Mounting<br>Method                  | Vertical  |     |     |     |       |
| Dimensions<br>(WxHxD)               | 60.0 x130.0 x 125.0 mm<br>(2.36 x 5.12 x 4.92 inch)   |     |     |     |       |
| Weight                              | 800g  |     |     |     |       |
| Packing                             | 11pcs / 12.5Kg / 0.7cuft / carton<br>Carton size 620x260x175 mm (L x W x H)   |     |     |     |       |

# 2.2. Safety/EMC


| Isolation Voltage        | P-O/P: 3KVac ,I/P-FG: 1.5 KVac, O/P-FG: 1.5 KVac |  |
|--------------------------|--|--|
| Insulation<br>Resistance | 00MΩ Max. / 500Vdc                               |  |
| Safety                   | Design refer to UL60950-1, EN60950-1             |  |

| ЕМС | EN 55032:2010+AC:2011 (CISPR 22:2008) ClassA<br>EN 61000-3-2:2014 (IEC 61000-3-2:2014)<br>EN 61000-3-3:2013(IEC 61000-3-3:2013)<br>EN 55024:2010(CISPR 24:2010) |
|-----|---|
|     | EN 55024:2010(CISPR 24:2010)  |

# 3 Applications and Maintenance

# 3.1. Series Operation


Series Operation can be connected as shown:

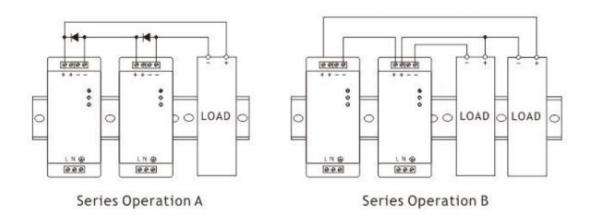

Load current should be less than the current value of the product with the lowest output current specified at the product specification with the Power Supply at series connection.


## 3.2. Parallel Operation

Do not connect the power supplies as follows:

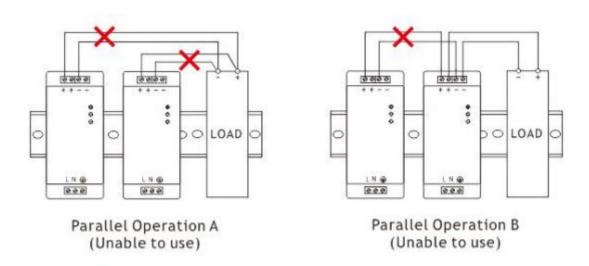


Parallel operation should be composed with the same products, while the connection should be as shown as "Parallel operation C";

2. In Parallel operation C, current capacity cannot be increased, while it should be used for backup only. Moreover, diode that is to be added during parallel operation should be selected after considering it's voltage drop, output voltage and current capacity.

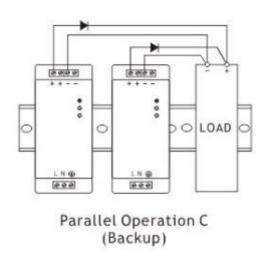


# 3.3. Din Rail Mounting

Hang part A on the top of the Rail as shown below, then push into B direction to fix it on the DIN Rail.

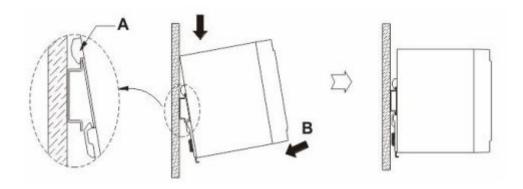

Remember to leave a minimum of 25mm between both PSU or between the PSU and another device located inside the cabinet. Forced air cooling makes protection against heat better.

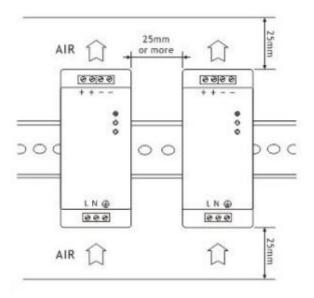

About Industrial Shields:

Direction: Fàbrica del Pont, 1-11

Zip/Postal Code: 08272

City: Sant Fruitós de Bages (Barcelona)

Country: Spain

Telephone: (+34) 938 760 191 / (+34) 635 693 611

Mail: industrialshields@industrialshields.com