

18V Cordless Planer

R18PL-0

RYOBI®



- Cordless planer delivers fast stock removal, ideal for trimming doors and other surfaces leaving a smooth finish
- Adjustable depth of cut from 0-1.6mm and 82mm planing width
- Additional front handle for greater control
- Durable steel planing base with integrated chamfering groove
- Rear mounted kickstand protects work piece
- Dual left and right chip exhaust
- Side fence for precision planing

Article Number	5133002921
Article Number	5133004683
Charger included?	No
EAN Code	4892210151520
EAN Code	4892210184733
No load speed (rpm)	11000
No. of batteries supplied	0
Planing depth (mm)	1.6
Planing width (mm)	82
Power	18V
Rebate depth (mm)	12.5
Sound power level (Lwa) (dB(A))	89.5
Sound power level uncertainty [dB(A)]	3.0
Sound pressure level (Lpa) (dB(A))	78.5
Sound pressure level uncertainty [dB(A)]	3.0
Standard equipment	Side fence, dust bag, dust port adaptor, 2x reversible blades
Supplied in	Recyclable Carton
Vibration level [m/s ²]	2.7
Vibration Level Main Handle [m/s ²]	2.7
Vibration Level Main Handle uncertainty [m/s ²]	1.5
Weight [without battery] [Kg]	2.4
Weight with battery pack (kg)	2.8

*Registration required for extension from 2-3 years. Please visit our site for full T&C's