 



 
**PRO-SIGNAL**

 
**PSG3412-M292**  
**WIRELESS NOISE**  
**CANCELLING HEADPHONES**

 
**OPERATION**

**Turn on/off:** Press and hold  for 3 seconds. The blue & red LED will flash. From your source device search for wireless device "PSG3412-M292" to connect. No pass required. Use "0000" if your device demands one. The blue LED flashes slowly when connected.

**Play/pause:** Short press  to play/pause music.

**Call answer :** Short press  button again in standby or during music-play mode.

**Call end:** Short press  button.

**Call redial last number:** Press the  button twice in standby or music-play mode.

**Volume:** Long press + or - to increase or reduce the volume.

**Next/last song:** Short press + or - to play next or last song.

**Noise Cancel Function:** Short press **M** button to turn ANC mode on or off. When on, green LED is lit.

**Charging:** Insert the charge cable to the micro USB slot, the red LED will light. It will extinguish when fully charged.

**External Audio Input:** In power on mode, plugging in an external source automatically switches to AUX mode.



**PRO-SIGNAL**

**PSG3412-M292**  
**WIRELESS NOISE**  
**CANCELLING HEADPHONES**

**SAFETY WARNINGS**

Keep the headphone clean and dust free or the sound quality may be reduced.  
Do not subject the headphones to impact or excessive vibration.  
Do not allow water or other liquids to enter the headphones.  
Be aware that wearing for long periods and at high volume may cause fatigue and hearing damage.

**PRO-SIGNAL**

**PSG3412-M292**  
**WIRELESS NOISE**  
**CANCELLING HEADPHONES**



MADE IN CHINA  
PR2 9PP

**PRO-SIGNAL**

**PSG3412-M292**  
**WIRELESS NOISE**  
**CANCELLING HEADPHONES**

**SPECIFICATIONS**

- USB charge: DC 5V
- Wireless frequency: 2.401-2.480GHz
- Wireless distance: ≤10 meters
- Frequency: 20Hz-20KHz
- Output power: 30mW
- SNR: ≥75dB
- Charging time: <2.5 hours
- Active noise reduction: 18-25dB