


contacta 

 series **PRO**

V22a / V34 / V34a
Hearing Loop Drivers

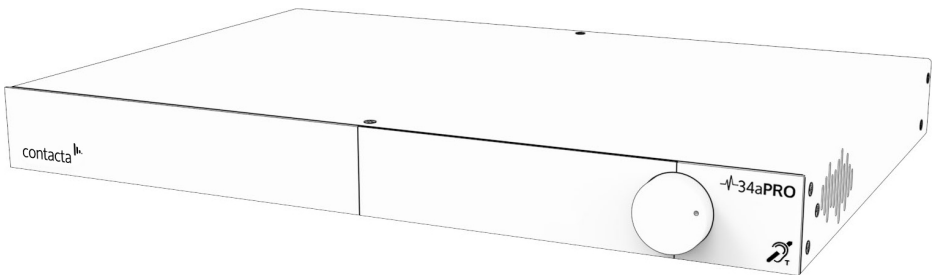

Installation & User Guide

December 2020

Contents

Product Overview	3
Components	4-5
Suitable Cable Lengths	6-9
Driver Area Coverage	10-11
Connections	12-13
Using the System	14-16
Inputs Menu	17-18
Guided Loop Setup	19-24
Manual Loop Setup	25-29
Diagnostics	30-31
Service	32
Save/Load Settings	33
System Updates	34-36
Remote Monitoring	37
Contacta Dashboard	38-49
Troubleshooting	50
Notification Guide	51
Technical Specification	52-54
Standards	55

Product Overview

Our highly efficient and slimline V Series PRO range of hearing loop drivers (V22a, V34, and V34a) are suitable for medium to large facilities and venues.


The V34 is a high current hearing loop driver which powers hearing loops utilising a single output. The V22a and V34a are dual output, high current hearing loop drivers with integral phase shifters for phased array configurations. These drivers have a Class-D amplifier output stage and an audio subsystem built around advanced digital systems including an ARM Cortex processor and dual DSPs.

Combined with a powerful CPU to ensure peak performance, the V Series PRO range provides self-monitoring and email alerts, remote setup over local area networks, guided hearing loop setup to make installation simple, and excellent speech and music reproduction.

Note: For large area hearing loop installation instructions, consult Contacta's Large Area Hearing Loop Installation Guide.


Components

V22a

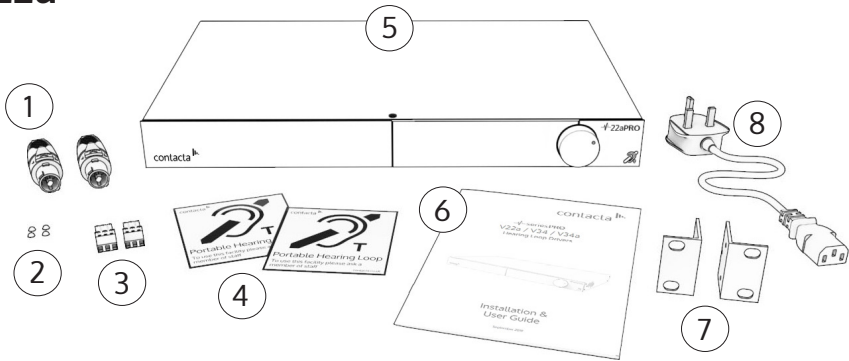

- | | |
|---------------------------------|------------------------------|
| 1. NL4 Connector x2 | 5. V22a Hearing Loop Driver |
| 2. Rubber Feet x4 | 6. Installation & User Guide |
| 3. 3.5mm Euroblock Connector x2 | 7. Mounting Brackets |
| 4. Signage | 8. IEC Power Lead* |


V34

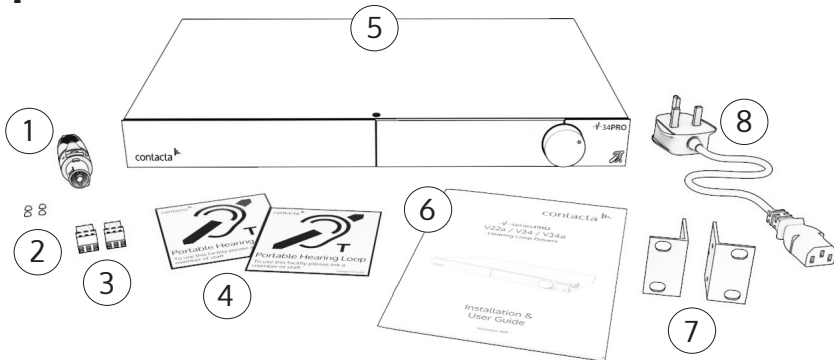

- | | |
|---------------------------------|------------------------------|
| 1. NL4 Connector | 5. V34 Hearing Loop Driver |
| 2. Rubber Feet x4 | 6. Installation & User Guide |
| 3. 3.5mm Euroblock Connector x2 | 7. Mounting Brackets |
| 4. Signage | 8. IEC Power Lead* |

*Plug type varies by country.

V34a

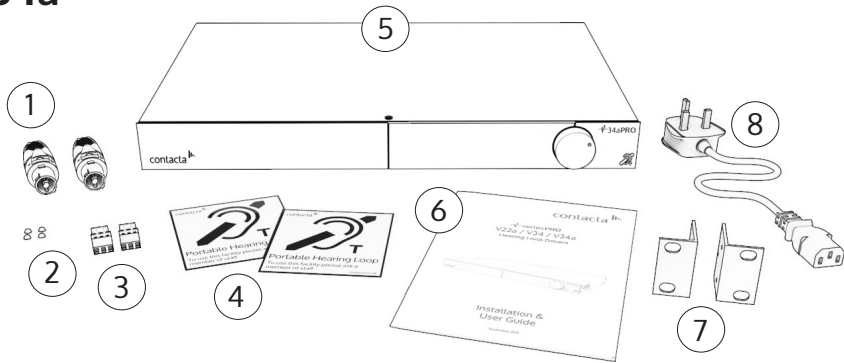

1. NL4 Connector x2
2. Rubber Feet x4
3. 3.5mm Euroblock Connector x2
4. Signage
5. V34a Hearing Loop Driver
6. Installation & User Guide
7. Mounting Brackets
8. IEC Power Lead*

*Plug type varies by country.

Cable & Equipment: A length of loop cable determined by the loop design is also required. Hearing loop drivers also require additional equipment for audio feeds, such as a microphone or sound system.

Suitable Cable Lengths

The tables in this section show the approximate maximum cable lengths for differing maximum required currents.

Loop impedance (at 1.6kHz) should be less than the voltage capability of the driver (**V22a**: 22Vrms, **V34**: 34Vrms, **V34a**: 34Vrms) divided by the required current.

This achieves 400mA/m field strength at 1kHz.

V22a Single-Turn Hearing Loop (Metric)

Current	1A	2A	3A	4A	5A	6A	7A	8A
Impedance	21.3Ω	10.7Ω	7.1Ω	5.3Ω	4.3Ω	3.6Ω	3.0Ω	2.7Ω

Cable Type		Cable Length								
Maximum Cable Length	Round Cable (AWG)	1mm	782m	391m	261m	195m	156m	130m	112m	98m
		1.5mm	917m	458m	306m	229m	183m	153m	131m	115m
		2.5mm	1031m	515m	344m	258m	206m	172m	147m	129m
	Flat Cable (Width)	10mm	580m	290m	193m	145m	116m	97m	83m	73m
		12.5mm	1097m	548m	366m	274m	219m	183m	157m	137m
		25mm	1452m	726m	484m	363m	290m	242m	207m	182m

V22a Single-Turn Hearing Loop (Imperial)

Current	1A	2A	3A	4A	5A	6A	7A	8A
Impedance	36.0Ω	18.0Ω	12.0Ω	9.0Ω	7.2Ω	6.0Ω	5.1Ω	4.5Ω

Cable Type		Cable Length								
Maximum Cable Length	Round Cable (AWG)	18AWG	2346ft	1173ft	782ft	587ft	469ft	391ft	335ft	293ft
		14AWG	3132ft	1566ft	1044ft	783ft	626ft	522ft	447ft	392ft
	Flat Cable (Width)	18AWG (equivalent)	2639ft	1320ft	880ft	660ft	528ft	440ft	377ft	330ft
		14AWG (equivalent)	4171ft	2085ft	1390ft	1043ft	834ft	695ft	596ft	521ft

V22a Double-Turn Hearing Loop (Metric)

Current	1A	2A	3A	4A	5A	6A	7A	8A	9A	10A	11A	12A
Impedance	21.3Ω	10.7Ω	7.1Ω	5.3Ω	4.3Ω	3.6Ω	3.0Ω	2.7Ω	2.4Ω	2.1Ω	1.9Ω	1.8Ω

Cable Type		Cable Length												
Max Cable Length	Round Cable (AWG)	1mm	568m	284m	189m	142m	114m	95m	81m	71m	63m	57m	52m	47m
		1.5mm	614m	307m	205m	154m	123m	102m	88m	77m	68m	61m	56m	51m
		2.5mm	645m	323m	215m	161m	129m	108m	92m	81m	72m	65m	59m	54m
	Flat Cable (Width)	10mm	508m	254m	169m	127m	102m	85m	73m	63m	56m	51m	46m	42m
		12.5mm	785m	392m	262m	196m	157m	131m	112m	98m	87m	78m	71m	65m
		25mm	929m	465m	310m	232m	186m	155m	133m	116m	103m	93m	84m	77m

V22a Double-Turn Hearing Loop (Imperial)

Current	1A	2A	3A	4A	5A	6A	7A	8A
Impedance	36.0Ω	18.0Ω	12.0Ω	9.0Ω	7.2Ω	6.0Ω	5.1Ω	4.5Ω

Cable Type		Cable Length									
Maximum Cable Length	Round Cable (AWG)	18AWG	2649ft	1324ft	883ft	662ft	530ft	441ft	378ft	331ft	
		14AWG	3027ft	1514ft	1009ft	757ft	605ft	505ft	432ft	378ft	
	Flat Cable (Width)	18AWG (equivalent)	3203ft	1601ft	1068ft	801ft	641ft	534ft	458ft	400ft	
		14AWG (equivalent)	4202ft	2101ft	1401ft	1050ft	840ft	700ft	600ft	525ft	

V34 / V34a Single-Turn Hearing Loop (Metric)

Current	1A	2A	3A	4A	5A	6A	7A	8A	9A	10A	11A	12A
Impedance	32.1Ω	16.0Ω	10.7Ω	8.0Ω	6.4Ω	5.3Ω	4.6Ω	4.0Ω	3.6Ω	3.2Ω	2.9Ω	2.7Ω

Cable Type		Cable Length												
Max Cable Length	Round Cable (AWG)	1mm	1176m	588m	392m	294m	235m	196m	168m	147m	131m	118m	107m	98m
		1.5mm	1379m	690m	460m	345m	276m	230m	197m	172m	153m	138m	125m	115m
		2.5mm	1551m	775m	517m	388m	310m	258m	222m	194m	172m	155m	141m	129m
	Flat Cable (Width)	10mm	873m	436m	291m	218m	175m	145m	125m	109m	97m	87m	79m	73m
		12.5mm	1650m	825m	550m	413m	330m	275m	236m	206m	183m	165m	150m	138m
		25mm	2185m	1092m	728m	546m	437m	364m	312m	273m	243m	218m	199m	182m

V34 / V34a Single-Turn Hearing Loop (Imperial)

Current	1A	2A	3A	4A	5A	6A	7A	8A	9A	10A	11A	12A
Impedance	36.0Ω	18.0Ω	12.0Ω	9.0Ω	7.2Ω	6.0Ω	5.1Ω	4.5Ω	4.0Ω	3.6Ω	2.9Ω	2.7Ω

Cable Type		Cable Length												
Max Cable Length	Round Cable (AWG)	18AWG	3626ft	1813ft	1209ft	906ft	725ft	604ft	518ft	453ft	403ft	363ft	330ft	302ft
		14AWG	4841ft	2420ft	1614ft	1210ft	968ft	807ft	692ft	605ft	538ft	484ft	440ft	403ft
	Flat Cable (Width)	18AWG (equiv.)	4079ft	2039ft	1360ft	1020ft	816ft	680ft	583ft	510ft	453ft	408ft	371ft	340ft
		14AWG (equiv.)	6445ft	3223ft	2148ft	1611ft	1289ft	1074ft	921ft	806ft	716ft	645ft	586ft	537ft

V34 / V34a Double-Turn Hearing Loop (Metric)

Current	1A	2A	3A	4A	5A	6A	7A	8A	9A	10A	11A	12A
Impedance	32.1Ω	16.0Ω	10.7Ω	8.0Ω	6.4Ω	5.3Ω	4.6Ω	4.0Ω	3.6Ω	3.2Ω	2.9Ω	2.7Ω

Cable Type		Cable Length												
Max Cable Length	Round Cable (AWG)	1mm	855m	427m	285m	214m	171m	142m	122m	107m	95m	85m	78m	71m
		1.5mm	924m	462m	308m	231m	185m	154m	132m	116m	103m	92m	84m	77m
		2.5mm	971m	485m	324m	243m	194m	162m	139m	121m	108m	97m	88m	81m
	Flat Cable (Width)	10mm	764m	382m	255m	191m	153m	127m	109m	95m	85m	76m	69m	64m
		12.5mm	1181m	590m	394m	295m	236m	197m	169m	148m	131m	118m	107m	98m
		25mm	1398m	699m	466m	350m	280m	233m	200m	175m	155m	140m	127m	117m

V34 / V34a Double-Turn Hearing Loop (Imperial)

Current	1A	2A	3A	4A	5A	6A	7A	8A	9A	10A	11A	12A
Impedance	36.0Ω	18.0Ω	12.0Ω	9.0Ω	7.2Ω	6.0Ω	5.1Ω	4.5Ω	4.0Ω	3.6Ω	2.9Ω	2.7Ω

Cable Type		Cable Length												
Max Cable Length	Round Cable (AWG)	18AWG	2649ft	1324ft	883ft	662ft	530ft	441ft	378ft	331ft	294ft	265ft	241ft	221ft
		14AWG	3027ft	1514ft	1009ft	757ft	605ft	505ft	432ft	378ft	336ft	303ft	275ft	252ft
	Flat Cable (Width)	18AWG (equiv.)	3203ft	1601ft	1068ft	801ft	641ft	534ft	458ft	400ft	356ft	320ft	291ft	267ft
		14AWG (equiv.)	4202ft	2101ft	1401ft	1050ft	840ft	700ft	600ft	525ft	467ft	420ft	382ft	350ft

Driver Area Coverage

Note: A full site survey of an installation area is recommended for optimal loop design.

Perimeter Loops

Perimeter loop areas detailed in the table on page 11 are valid only when the following conditions are met:

1. Area is at the maximum current the driver is capable of delivering without voltage clipping at 1.6KHz
2. Loop layout is designed to achieve 0dB in the centre
3. 25mm x 0.1mm flat copper cable
4. Loop is installed in the floor
5. Listening height 1.2m (large perimeter loops may have areas where the actual signal level is higher than required)

Phased Array Loops


Phased array loop areas detailed in the table on page 11 are valid only when the following conditions are met:

1. Area is at the maximum voltage the driver is capable of delivering without voltage clipping at 1.6KHz
2. Layout of 3m segment widths
3. 25mm X 0.1mm flat copper cable is used
4. Loop is installed in the floor
5. Listening height 1.2m
6. Medium metal loss = 6dB

				Area		
		Voltage	Current	1:1	1:2	1:3
Perimeter loops						
V34 Pro	34.0V	12.0A		702.25m ²	882.00m ²	1200.00m ²
Phased array (no metal loss)						
V22a Pro	22.6V	8.0A		1024.00m ²	1104.50m ²	1160.33m ²
V34a Pro	34.0V	12.0A		1521.00m ²	1740.50m ²	1680.33m ²
Phased array (medium metal loss)						
V22a Pro	22.6V	8.0A		441.00m ²	480.50m ²	588.00m ²
V34a Pro	34.0V	12.0A		676.00m ²	840.50m ²	867.00m ²

Connections

Rear Panel Connections

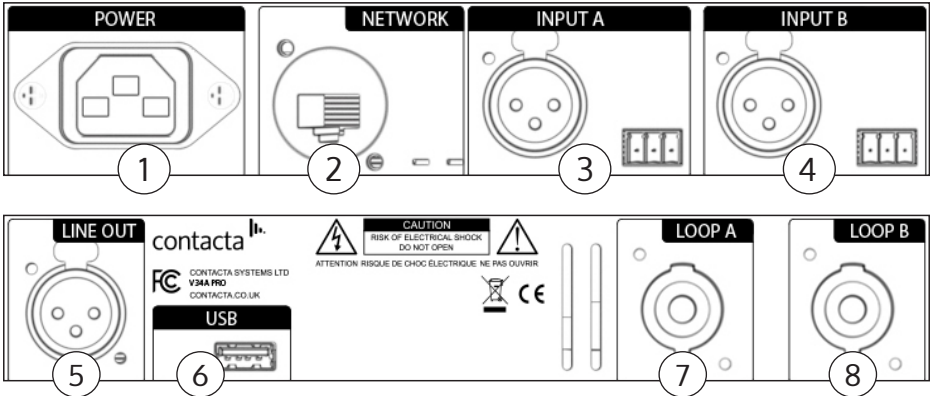

1. **Power Supply Input** - The primary method of isolating the amplifier from the mains supply is to disconnect the mains plug. Ensure that the mains plug remains accessible at all times. Unplug the AC power cord from the AC outlet if the unit will not be used for several months or more.
2. **Network Input** - Ethernet port for setup and remote monitoring.
3. **Input A** - Microphone or line in via 3 Pin Euroblock or XLR.
4. **Input B** - Microphone or line in via 3 Pin Euroblock or XLR.
5. **Line Output** - XLR port for connections with multiple drivers.
6. **USB** - Storage transfer port.
7. **Loop A Output** - NL4 port for Loop A.
8. **Loop B Output** - NL4 port for Loop B.

Connection Examples

XLR to XLR (line)



TRS to XLR (line)



Unbalanced to XLR



XLR to Euroblock (balanced)




Unbalanced to Euroblock



Using the System

Startup

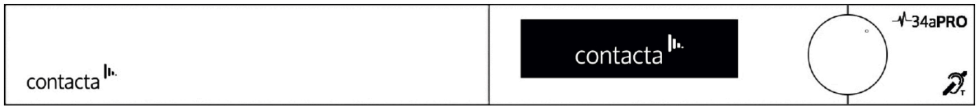

V Series PRO drivers perform a series of tests when powered on. The Contacta logo will appear and driver will therefore take between 40 to 60 seconds to become active.


Fault Detected

If a fault is detected, the Attention symbol will appear on the top right of the screen (⚠) along with an error message:

1. **Open Circuit [Primary/Secondary Loop]:** See Connections on page 12 or consult the Contacta Large Area Loop Installation Guide to ensure the hearing loop is correctly installed and connected.
2. **Short Circuit [Primary/Secondary Loop]:** See Connections on page 12 or consult the Contacta Large Area Loop Installation Guide to ensure the hearing loop is correctly installed and connected.


The start-up sequence will be halted. Power should be removed and reapplied to the driver once the fault has been addressed.

Loop Attenuation

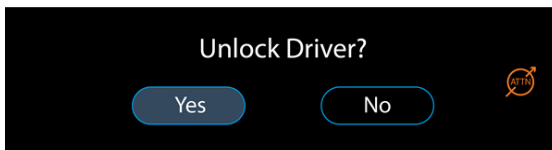

If the 'ATTN' (Loop Attenuation) symbol (⚠) appears on the screen, the driver has detected that due to the characteristics of the loop(s) connected it will be unable to deliver maximum rated current without clipping at 1.6Kz. Maximum current will therefore be attenuated.


Front Panel Overview

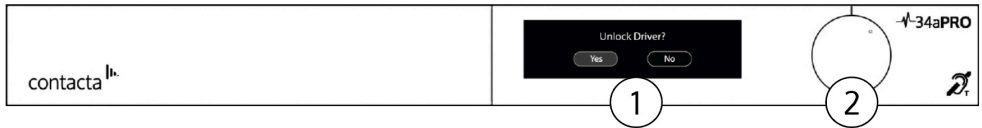

1. **Display Screen** - Displays menu and adjustment options.
2. **Control Dial** - Used to unlock the driver and make a range of system adjustments. Rotate the dial clockwise or counter-clockwise to make a selection, then press to confirm any adjustments.

Note: When using V Series PRO menus, selecting "Return" sends the user to a previously displayed screen. Selecting "Exit" will send them to the main menu.

Locking/Unlocking the Hearing Loop Driver

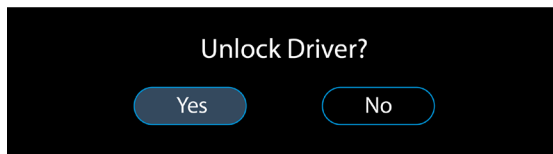

Unlock the Driver


1. To unlock the hearing loop driver, press the control dial, and when prompted "Unlock driver?" click "Yes."
2. Enter the passcode **2239**:
 - a. Rotate the control clockwise to select the first required digit.
 - b. Press the control dial in to select the digit.
 - c. Repeat steps (a) and (b) until all the digits have been selected.

Note: Entering the wrong code returns the hearing loop driver to the lock screen.

When the control dial is not used for half an hour, the hearing loop driver will automatically lock.

Signal Activity Indicators

When the driver is locked, the “ABC” indicators on the bottom left of the screen display signal activity on the driver inputs.

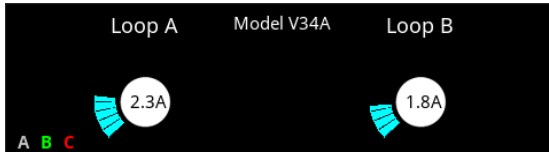

Each letter are shown in **green, yellow, or red**, corresponding to **low, good, or high** signal levels respectively.


The “A” and “B” indicators show the levels of the A and B inputs. This is the level after the corresponding input gain control, but before the AGC. If the AGC is not enabled, it is important that A or B are indicating acceptable levels. If the AGC is enabled, this is less important as the AGC will compensate for a wide range of levels.

The “C” indicator shows the signal level within the signal chain after the AGC, if enabled, has been applied. It is normal to see activity here, at least on program peaks.

If the driver appears to stop working, and no changes have been made, the ABC indicators will assist the user by showing whether the inputs are active.


Main Menu

After being unlocked, the hearing loop driver will display the main menu.

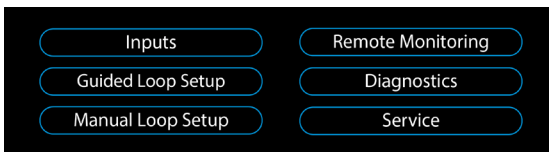

Inputs


Selecting Inputs from the main menu opens the following screen:

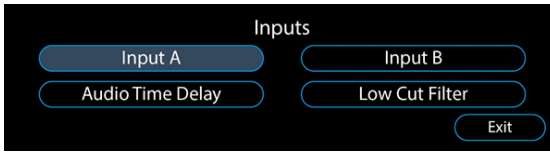


- **Input A** - Adjust connections to Input A.
- **Input B** - Adjust connections to Input B.
- **Audio Time Delay** - Sync audio across large distances to compensate for latency.
- **Low Cut Filter** - Audio filter for when there is low frequency background noise in the surrounding environment of a loop.

Input A/B


1. Menus for Input A and Input B are functionally identical. Selecting either Input A or Input B opens the following screen:

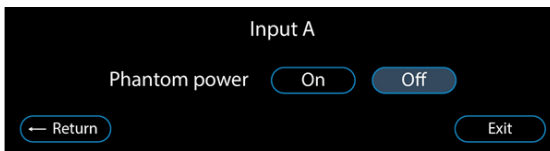

2. Turning on Phantom Power sends power to a connected microphone via the selected input. When either Input A or Input B has enabled this function, a symbol will appear on the left of the display (see page 51 for Notification Guide).

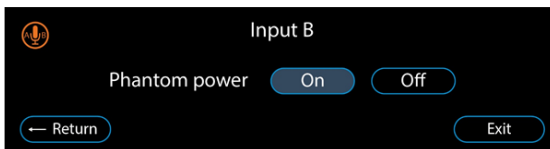


3. Once you have made a selection on the Phantom Power screen, the driver will display the following screen:

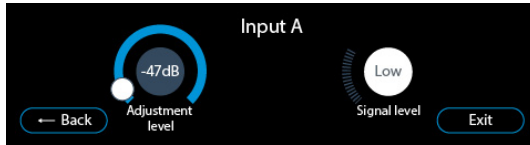

- **Adjustment Level** - Displays the input attenuation level (0db to -47dB). Selecting this circle allows attenuation level adjustment.
- **Signal Level** - When optimum Adjustment Level has been achieved, "Good" will display consistently (though peak levels may flash to "Low or "High"). Consistent display of "Low" or "High" means the level is incorrect and automatic gain control cannot operate.

Audio Time Delay

Selecting Audio Time Delay from Inputs opens the following screen:

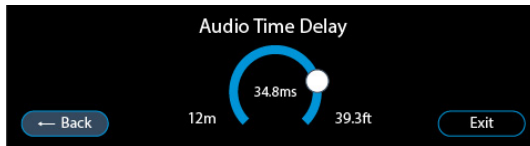


In theatres, stadiums, and other large venues, sound sent from speakers will be impacted by the speed of sound, whereas audio sent through a hearing loop will reach a user instantly. This means the two sounds must be aligned or users will hear a constant echo.

Select the screen's circle to adjust syncing and compensate for latency.

Low Cut Filter

Selecting Low Cut Filter from Inputs opens the following screen:

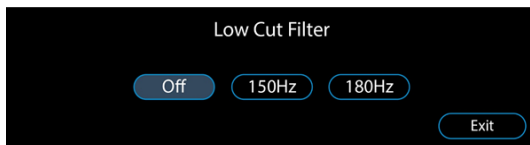

This feature removes low frequency sounds from the hearing loop when background noise such as air conditioners might impact users. Select either 150Hz or 180Hz if required and a green 'LCF' (Low Cut Filter) symbol will be displayed on the left.

Guided Loop Setup

Guided Loop Setup ensures that hearing loops achieve optimum field strength,* ideal frequency response, and avoid clipping.

Only begin Guided Loop Setup once the connected hearing loop cable has been laid in place and all relevant connections have been made (see page 12).


*This is dependant on correct loop design and metal loss.

Required for Setup

- FSM - Contacta Field Strength Meter (IL-CONTACTA-FSM)
- Tripod or similar for mounting the FSM is recommended

Begin the Setup

Begin the Guided Loop Setup by selecting it from the driver's main menu, and when prompted select "Yes" from the following screen:

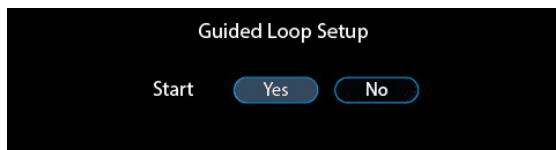


For large area hearing loop cable installation instructions, consult Contacta's Large Area Hearing Loop Installation Guide.

Note: The guided loop setup will optimise the loop signal at the point used to take the measurement. Therefore, there may be variations in the signal coverage where no measurements have been taken and fed into the driver.


Stage 1: High Frequency Compensation

High Frequency Compensation will be suggested by the driver when measurements in this section indicate metal in the surrounding environment impacts the hearing loop's signal quality.

1. Select "Yes" when prompted by the following screen:

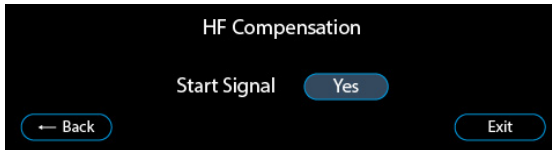


2. The driver will begin outputting a pink noise signal at a low level (1A on peaks) to allow accurate setup. The following screen will be displayed, with a symbol on the top right indicating "Signal On":

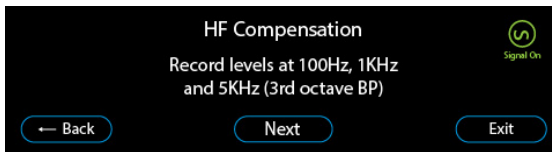

3. Note the hearing loop's field strength at 100Hz, 1KHz, and 5KHz using the Contacta Field Strength Meter (IL-CONTACTA-FSM) set at the 3rd octave band pass setting.


Once this is completed, select "Next" on the display to turn off the signal.

4. Enter the three levels into the hearing loop driver. The "Backspace" button will become a "Next" button when the correct number of digits have been entered for each value:

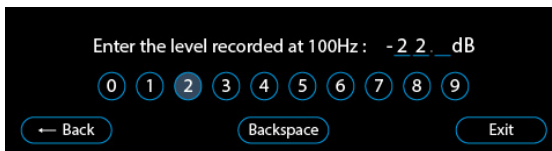


5. When the three levels have been entered, one of following options will be displayed (see next page):


5a. If the values at 100Hz and 5KHz are within +/-3db of the value measured at 1KHz, this section is complete. Select "Next":

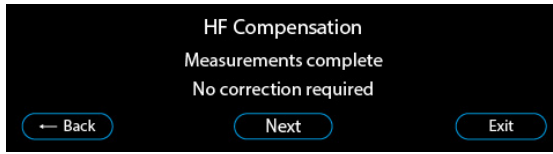

5b. If the driver has calculated that High Frequency Compensation is required, it will ask whether to apply this correction. Selecting "Yes" is recommended.

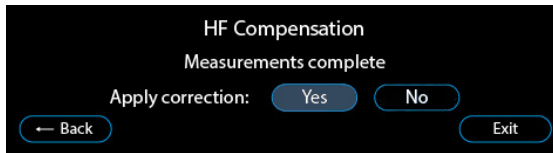


5c. If the driver cannot provide ideal High Frequency Compensation, it will ask whether to apply the maximum adjustment available. Selecting "Yes" is recommended.

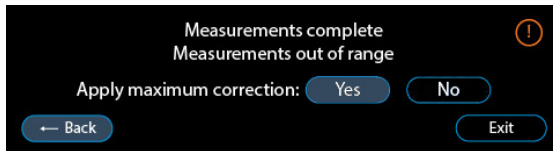


Stage 2: Loop Drive

1. Select "Yes" when prompted by the following screen:

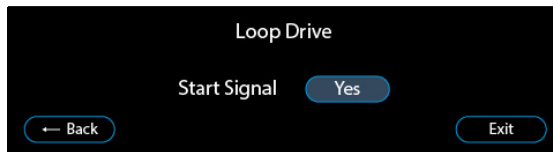


The driver will begin outputting a 1KHz sinewave signal at a low level (2Arms) to allow accurate setup.


2. The following screen will be displayed, with a symbol on the top right indicating "Signal On":

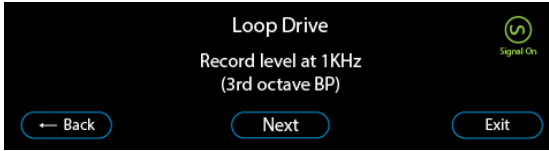


3. Note the hearing loop's field strength at 1KHz using the Contacta Field Strength Meter (IL-CONTACTA-FSM) set at the 3rd octave band pass setting. Once this value has been noted, select "Next" on the display to turn off the signal.

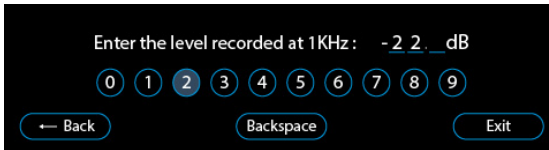

4. Enter the noted level into the hearing loop driver.
5. One of following three options will be displayed:
- 5a. If the driver has calculated the ideal peak current to achieve 0dB, the following screen will appear and this section is complete. Select "Apply this level":

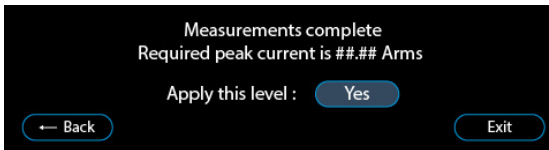


- 5b. If the driver cannot deliver the current required to achieve 0dB it will display the following screen:

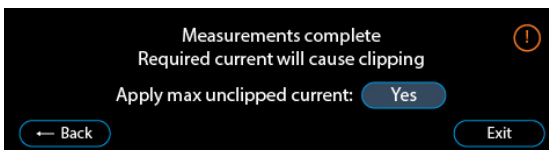

Select "Yes" when asked to apply the maximum unclipped current.


- 5c. If the ideal current is greater than is possible (due to the characteristics of the loop(s) connected being unsuitable to deliver maximum rated current without clipping at 1.6Kz), the maximum current will be attenuated and the maximum value will be displayed:

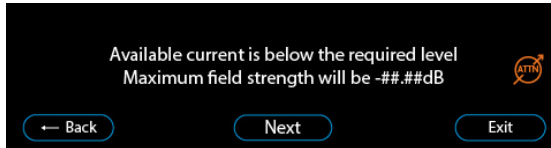

Select "Next". The driver will make adjustments to achieve the strongest maximum field strength possible.


Stage 3: Loop Uniformity

1. Select "Yes" when prompted by the following screen:

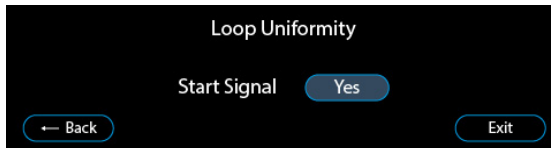

The driver will begin outputting a 1Arms at 1KHz sinewave signal at a level below the calculated current required to hit 0dB field strength.

2. The following screen will be displayed, with a symbol on the top right indicating "Signal On":

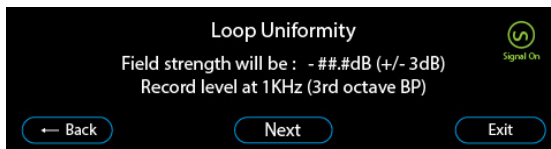


3. Record field strength at various locations in the hearing loop using the Contacta FSM set 1KHz 3rd octave band pass setting. These details will be required in Compliance Certificate documents. Then, select "Next".

Stage 4: Contacta Dashboard

The Contacta Dashboard is a platform that allows users to track the health of their V PRO drivers and manage setting remotely over the internet. To register a driver for use in this service, see page 38.

Stage 5: Completion

1. Select "Yes" when prompted by the following screen to complete the Guided Loop Setup to save settings:

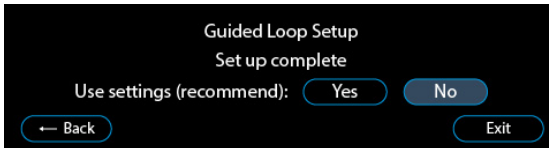


Manual Loop Setup

Note: Most users will obtain the best performance from a V-Pro driver using the Guided Loop Setup. Manual setup mode can render an installation non-compliant with standards if done incorrectly. Enter this menu only if you are competent and qualified to proceed with Manual Loop Setup.

Begin Manual Loop Setup by selecting the option from the driver's main menu.

Note: For large area hearing loop cable installation instructions, consult Contacta's Large Area Hearing Loop Installation Guide or design software suites.

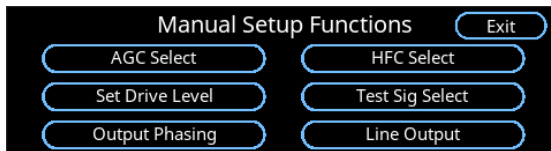


Manual setup allows the selection of the following functions:

- **AGC Select:** Enable or disable the Automatic Gain Control.
- **HFC Select:** Set High Frequency Compensation (metal correction).
- **Set Drive Level:** Set the Output Drive Level.
- **Test Sig Select:** Enable the internal Test Signal Generator.
- **Output Phasing:** Select non-standard output phasing (phased drivers only).
- **Line Output:** Set the level at the line output XLR jack.

AGC (Automatic Gain Control) Select

This screen allows automatic gain control to be disabled or enabled.

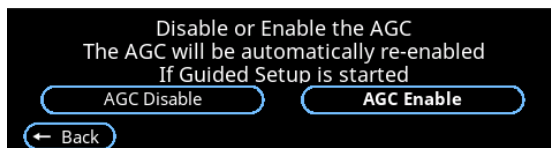

If the AGC is disabled the input gain may need to be adjusted on the Inputs setting screen. This is particularly the case if the input level is low in relation to the input gain and was previously being normalised by AGC.

Note: If Guided Setup is subsequently used after Manual Setup, AGC will be automatically re-enabled.

HFC Select


This screen allows high-frequency compensation to be adjusted from 1 (weak) to 7 (strong).



HFC is required when metal in the surrounding environment impacts the hearing loop's signal quality.

Set Drive Level

This screen allows the current in the primary loop to be adjusted.

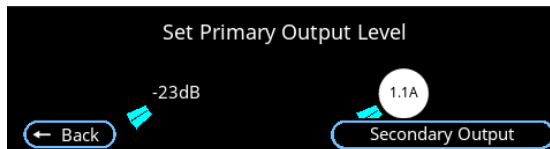


The maximum current will be limited to the specified level for the driver, and no attempt should be made to exceed this. If the driver is a phased unit, it will be possible set the secondary output (bottom right of the screen).

Note: Setting the driver to output currents in excess of the specified value will void the warranty.

If the driver is being set up from a remote device, increase the current gradually by clicking at the start of the level setting arc.

Phased Drivers Only: Secondary Output


This screen allows the current in the secondary loop in phased drivers to be adjusted.

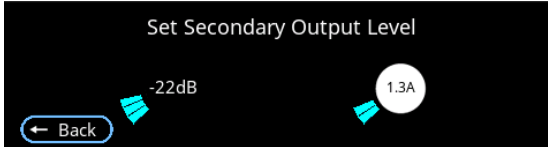

In phased drivers it is important to set primary and secondary currents to similar values or the advantages of a phased system will be lost.

Test Sig Select

This screen allows the internal test signal generator to drive output stages.

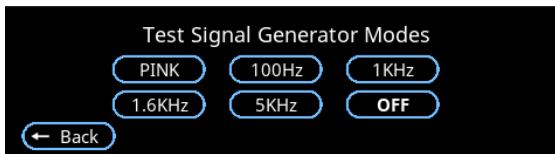

The internal signal chain is driven at relatively low level, meaning this function is not intended for setting final output levels. However, levels of the signals at different frequencies are well matched, making the function suitable for frequency response testing.

All selections other than "Off" will have the following additional effects on the driver:


- The internal cooling fans will run up to full speed.
- The normal input signal will be disconnected.
- The loop continuity test signal will be disabled to allow accurate current measurements.

Effects listed above will be cancelled when the TSG mode is set to "Off" or when Manual Setup mode is exited.

The TSG signal will remain on while within the Manual Setup functionality unless manually switched off. This is to allow manual adjustment of HF compensation.

Output Phasing

This screen determines the phase relationship between the primary and secondary outputs on phased drivers.

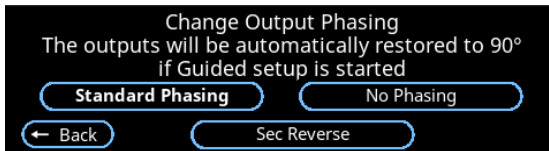

In phased systems it is vital that the output phase relationship remains set to Standard Phasing. The driver will not act as a proper phased device in any other mode.

There are two other phasing options:

- "No Phasing" causes the two outputs to operate in phase with each other. The driver is no longer phased in the manner required to produce uniform field coverage
- "Sec Reverse" inverts the phase of the secondary output. This is the same as reversing the electrical connections to one (but not both) of the driver outputs of an un-phased driver.

Line Output

This screen sets the output level of the balanced line output XLR jack on the rear of the driver.



Note: Line Output Level should usually remain at 1.00 and only be reduced if advised by an educated installer.


This output is not processed by the AGC to eliminate the possibility of “double AGC-ing” by devices further down the audio chain.

The signal level is the sum of the signal at inputs A and B. This means that the gains of the two inputs must be set to give an adequate output level at the line output connector.

The phase relationship between the Line output and the driver loop outputs is not guaranteed.

Diagnostics

Selecting Diagnostics from the main menu opens the following screen:

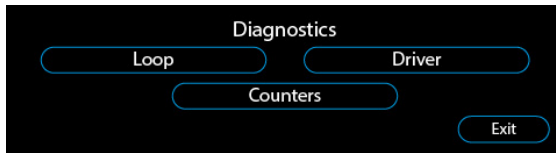

Loop


Selecting Loop from the Diagnostics menu opens the following screen:



- Loop inductance and resistance are values measured when the driver powers on.
- Hearing loop impedance at 1.6KHz ("z@1.6KHz") is calculated from the measured inductance and resistance.
- Maximum current is calculated from the driver voltage divided by the impedance at 1.6KHz.
- If impedance exceeds the limit the maximum current will be attenuated to prevent clipping.

Driver

Selecting Driver from the Diagnostics menu opens the following screen:

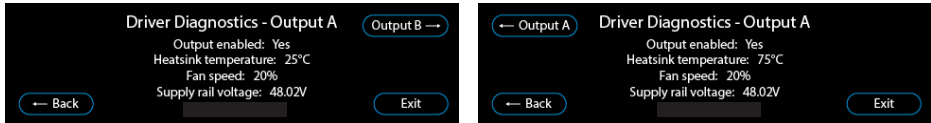

The following data in Driver is for information only:

- **Output enabled (Yes/No)**
- **Heatsink temperature**
- **Fan speed**
- **Supply rail voltage**

Counters

Selecting Counters from the Diagnostics menu opens the following screen:




Counters logs the number of times these events have occurred in the lifetime of the driver:

- **Power cycles** - Power has been recycled.
- **Clipping** - Voltage clipping has been detected.
- **Overtemp** - Internal temperature has exceeded limits.
- **Overcurrent** - Output current has exceeded limits.
- **Loop o/c** - Open circuit loop(s) have been detected.

Service

Selecting Service from the main menu opens the following screen:

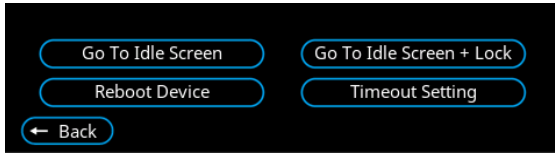

- **Go to Idle Screen** - The driver displays an idle screen. An unlock code will not be required to make adjustments/change settings.
- **Go to Idle Screen + Lock:** The driver displays an idle screen. An unlock code will be required to make adjustments/change to settings.
- **Time out setting:** Adjust the time before the driver displays an idle screen from between 0 (no return to idle screen) to 60 minutes. This is adjustable in 1-minute steps.
- **Reboot Device:** Restart the driver. Confirmation (Yes/No) is requested.

Save/Load Settings

Automatic Saving

The driver's internal save file is updated automatically at the file location of /etc/snapui/ whenever the driver is returned to the main menu screen.

Saved settings have the following naming convention when being loaded to or from a USB:

- <model>_settings.dat


Note: <model> refers to either V22a, V34 or the V34a (for example, V34a_settings.dat)

Settings changed in the Guided Setup or Manual Loop Setup are updated once the user completes the setup. Completing the setup will return to the main menu screen where all settings are saved locally.

USB Device - Saving and Loading

Note: When the driver automatically saves settings (i.e. if the driver returns to the main menu screen or guided loop setup is completed) and a USB device is connected, settings are saved to both the driver and the connected USB device.

1. If a USB is connected to the driver, the driver will scan for a valid save file. The save file name must match the driver's model (V22a, V34, or V34a).
2. If a save file is located on the USB, the driver will confirm that these settings should be loaded:

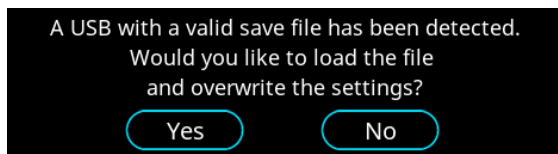

- Selecting "Yes" will load the file and overwrite settings saved on the driver, followed by a confirmation message:

Settings loaded successfully!

Menu

- Selecting “No” will overwrite the save file located on the USB with the driver’s newest save file.

System Updates

There are 2 types of system updates:

- **Software updates** (see page 35)
- **Disk image updates** (see page 36)

Software updates require the following 4 files to be placed in the root (top-level/default) directory of a USB connected to the driver:

- pn1001-image-imx6ul-var-dart.ubi
- pn1001-image-imx6ul-var-dart.ubi.sig
- update.sh
- update.sh.sig

Disk image updates requires the same 4 files as the software update and an 4 additional files (for a total of 8 files):

- SPL-nand
- SPL-nand.sig
- u-boot.img-nand
- u-boot.img-nand.sig

The average update (software or disk image) takes three minutes to both finish installation and restart the system.

Note: Update related screens do not timeout to idle screens.


Software Updates - USB

Note: The driver software should be updated prior to installation. Drivers already connected to a hearing loop should not be updated as this may cause settings to alter.


Software updates can be run from a connected USB without any risk to the driver. If a USB is removed midway, the device will restart while maintaining the previously installed version of the software.

Generic V PRO software updates work for all drivers in the range. When a USB has been connected, relevant updates will be automatically completed for any model (V22a, V32, V32a) in the range.


1. To install a software update, connect a USB device which contains the required files.
2. Select "Yes" when prompted by the following screen:

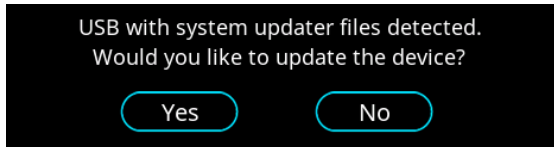

- 3a. If the USB's files are valid, the driver will begin install the update before automatically restarting. The following screen will appear:

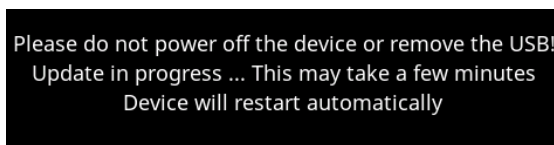


- 3b. If any of the USB's files are not valid, the driver will display the following screen:

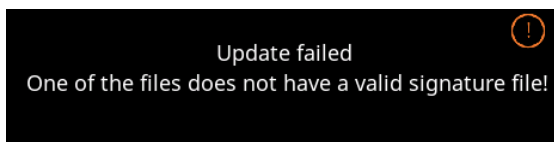

Disk Image Updates - USB


If the driver is low on memory, there will be a warning if a disk image update is attempted as the driver could be damaged if the USB is then removed mid-update. The user will be asked to confirm that they are aware of this risk.

1. To install a disk update, connect a USB device which contains the required files.
2. Select "Yes" when prompted.
3. The driver will scan the USB's files.
- 3a. If all files are valid, the driver will begin install the update and display this screen to the user before automatically restarting. The following screen will be displayed:

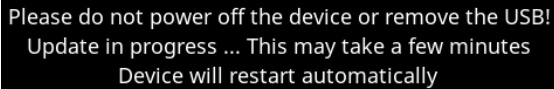

Please do not power off the device or remove the USB!
Update in progress ... This may take a few minutes
Device will restart automatically

- 3b. If any of the USB's files are not valid, the following screen will be displayed:

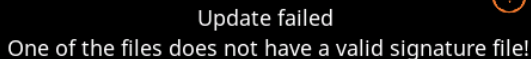


Update failed
One of the files does not have a valid signature file!

Remote Monitoring

The driver's user interface (display screen) can be accessed through a Local Area Network (LAN) when using a laptop or smartphone. This is to allow installers to minimize installation time by limiting the need to travel back and forth to a driver.

1. To access the Remote Monitoring function through an external device, select Remote Monitoring from the main menu to open the following screen:

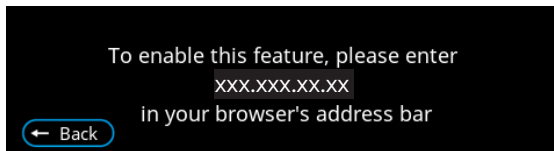

1. The driver's I.P. address will be displayed. Enter this string of numbers into the browser of your laptop or smartphone to externally access the driver's display.
2. Press "Connect" when prompted.
3. Enter "root" as the password when prompted.

Contacta Dashboard

The Contacta Dashboard is a platform that allows users to set up email alerts; these alerts will keep users informed about the status of their driver and inform them if any issues occur.

The Contacta Dashboard also allows users to track the health of their V PRO drivers over the internet. All data is logged into the Contacta Dashboard cloud system which can then be viewed on any device.

Settings of drivers can also be managed remotely; for example, where notification emails are sent to, and the recorded locations of the devices.

Getting Started

Using the system is a two-part process to get set up:

1. Register the device (once per device).
2. Register an installer account on the dashboard (one-time set up).

The first part is to register drivers on the logging platform. You do this once per device while you are installing the device on-site. Simply fill out a form which describes the client name, location, and contact details for notifications.

Then, register an account on the Contacta Dashboard platform. This is a one-time process to verify your installer email address and set up an account password.

After that, all new devices registered to that installer email will **automatically be managed in your Contacta Dashboard account.**

Device Registration

1. Register a device during the on-site device installation process. During the setup of the device you will be provided with:

- The mac address of the device
- A 4-digit access control pin number

2. Visit the Contacta Dashboard platform setup page:

<https://log.contactadashboard.com/login.php>

3. Log in with your mac / validation number:

REGISTRATION LOGOUT

Please enter MAC and Validation number to continue

INTERFACE MAC ADDRESS 00:00:00:00:00:00

INTERFACE VALIDATION NUMBER 0000

LOGIN / REGISTER

contacta

© Contacta Systems LTD 2020

4. After logging in, complete the following form. Ensure that you use the same installer email address for any device which is required to be managed as a part of a group:

REGISTRATION LOGOUT

Device Monitoring Registration

INTERFACE MAC ADDRESS aa:bb:cc:dd:ee:ff

DRIVER MODEL Please select

DRIVER SERIAL NUMBER

5. A confirmation email will be sent to all email addresses you listed (installer, plus any customer notification email addresses used).

Note: If a wrong email address is used, come back to this form at any time and re-register the device. This will overwrite the previously registered details.

7. Confirm with each recipient that the emails have been received and were not caught in spam filters.

Ask any relevant email management companies to ensure emails from the Contacta address are whitelisted. If you have opted to send notifications to clients, pass this information on to them so that they can whitelist it.

Account Registration

All registered drivers are managed at:

<https://www.contactadashboard.com/>


1. When accessing the Contacta Dashboard a login page will appear:

2. Click the “**Register here**” link below the login box.
3. Fill the form using the installer email address entered in the previous device registration form (see page 39).
4. Once this form is completed, verify your email address.
5. A verification link will be sent to the installer email address. Click the link to verify ownership of your email system.
6. Log in to the Contacta Dashboard platform.

Note: Your account will stay logged in until you log out. This makes it convenient for you to quickly get back into the dashboard and check on a device. To log out, use the button in the top right-hand corner of the dashboard.

Device Management

The following device summary page appears on the homepage of the Contacta Dashboard:

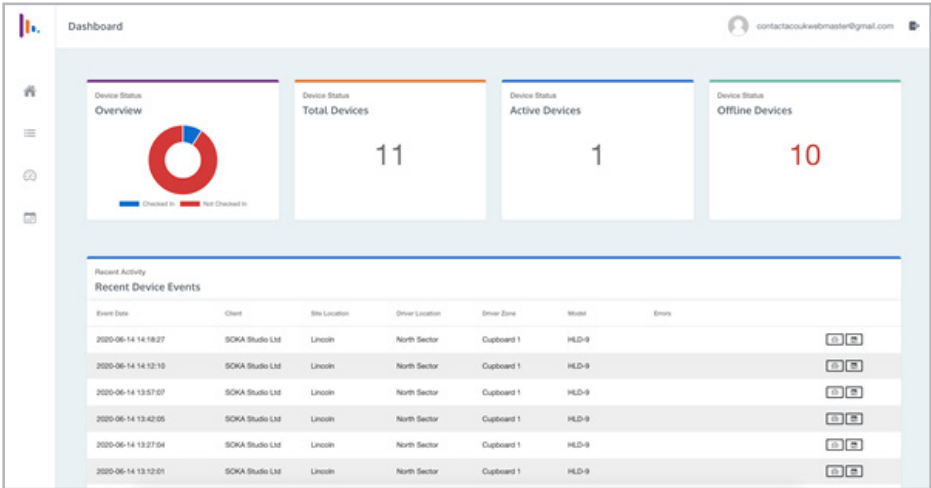

This page is divided into four sections:

- The navigation menu down the left-hand side.
- Four panels showing the device check in stats.
- A list of recent events generated by your devices.
- The account information in the top right.

The navigation menu lets you access all of the features of the site.

On small screens this may be hidden by default. Tap the menu button to expand it:

☰ **Dashboard**

The first option is the Device Summary page (the home page):



The second icon displays all **registered devices**:



The third icon allows fast navigation to **device settings** pages:




The fourth icon provides detailed **device history**, temperature and health information:



Device Check-In Stats


At the top of the main page is an overview of all devices registered on the system:

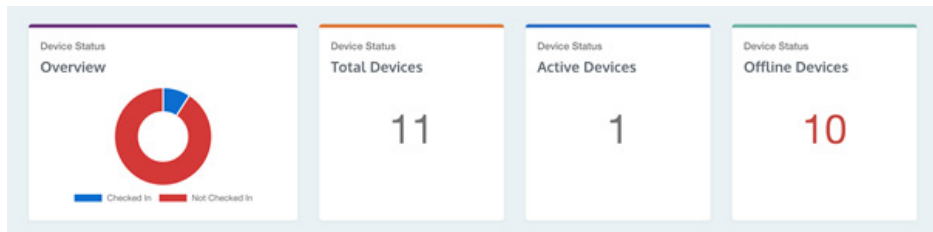







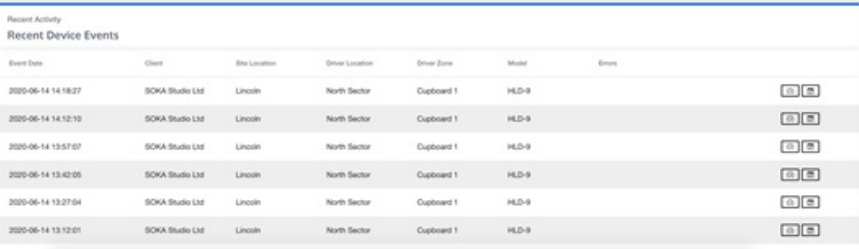





A device is classed as offline if it hasn't logged information into the cloud for more than 1 hour.

If you see red notices in the "Offline Devices" section noting drivers that should be online, any relevant hearing loop drivers must be assessed in person.

Recent device events




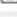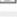







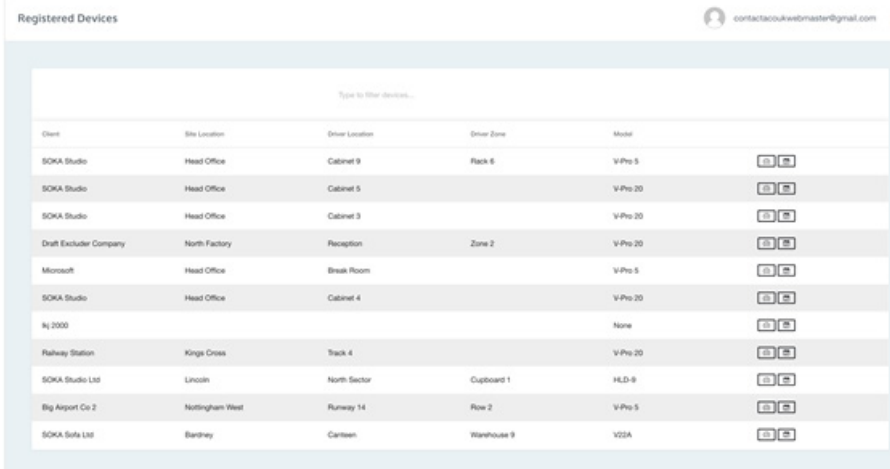













Event Date	Client	Site Location	Driver Location	Driver Zone	Model	Errors
2020-06-14 14:18:27	SOKA Studio Ltd	Lincoln	North Sector	Cupboard 1	HLD-9	 
2020-06-14 14:12:10	SOKA Studio Ltd	Lincoln	North Sector	Cupboard 1	HLD-9	 
2020-06-14 13:57:07	SOKA Studio Ltd	Lincoln	North Sector	Cupboard 1	HLD-9	 
2020-06-14 13:42:05	SOKA Studio Ltd	Lincoln	North Sector	Cupboard 1	HLD-9	 
2020-06-14 13:27:04	SOKA Studio Ltd	Lincoln	North Sector	Cupboard 1	HLD-9	 
2020-06-14 13:12:01	SOKA Studio Ltd	Lincoln	North Sector	Cupboard 1	HLD-9	 

Recent device events lists any recent activity of registered drivers.

Registered devices

The registered devices page lists all devices registered to the current installer email account.



Client	Site Location	Driver Location	Driver Zone	Model	
SOKA Studio	Head Office	Cabinet 9	Flak 6	V-Pro 5	 
SOKA Studio	Head Office	Cabinet 5		V-Pro 20	 
SOKA Studio	Head Office	Cabinet 3		V-Pro 20	 
Draft Excluder Company	North Factory	Reception	Zone 2	V-Pro 20	 
Microsoft	Head Office	Break Room		V-Pro 5	 
SOKA Studio	Head Office	Cabinet 4		V-Pro 20	 
Nj 2000				None	 
Railway Station	Kings Cross	Track 4		V-Pro 20	 
SOKA Studio Ltd	Lincoln	North Sector	Cupboard 1	HLD-9	 
Big Airport Co 2	Nottingham West	Runway 14	Flow 2	V-Pro 5	 
SOKA Soka Ltd	Barnby	Carten	Warehouse 9	V22A	 

Filter devices using the filter function in the header of the table.

Within the “type to filter devices...” text box, simply type any identifying characteristic of the device.

For example, based on the screenshot above, typing “soka” would filter to all devices registered to the client “SOKA Studio”; or instead,

filter a certain site by typing something like "head office". Data can also be matched from the driver location, driver zone and model columns.

If the device is currently in a fault or caution error state, then the row will be highlighted in red or amber.

The last column has two shortcut buttons which will navigate you to the pages described in the next section:



- The left icon takes you to the device settings page.
- The right icon takes you to the device history page.

Device Settings

The device settings page shows the device info in the top panel. These are fixed fields which were specified at the devices registration and do not change.

The second panel contains the device settings. Manage the client and device location details here, plus set up the email addresses that any alerts are sent to.

To add multiple emails into the email notifications field, type an email address followed by a space. To remove an email address click the grey x on the right of each email tag.



To make changes to this section simply type the new details into the page, then scroll to the bottom of the page, and press the Update Settings button:




Note: If you want to completely disable email alerts for a device you can do a combination removing all of the email tags in this screen and then setting the "Send Alerts To" field to "Client".

Device History


The device history page shows the entire history of that device.

This includes a panel at the top which shows the information that you have configured inside the device settings page:

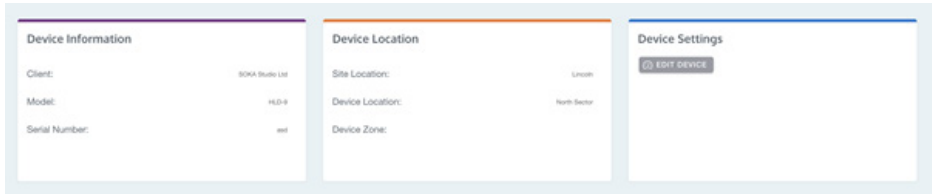

There is also a button to navigate back to the Device Settings page. Just click Edit Device to make changes to that device.

Further down a graph of its temperature if the device has been active in the last 24 hours:

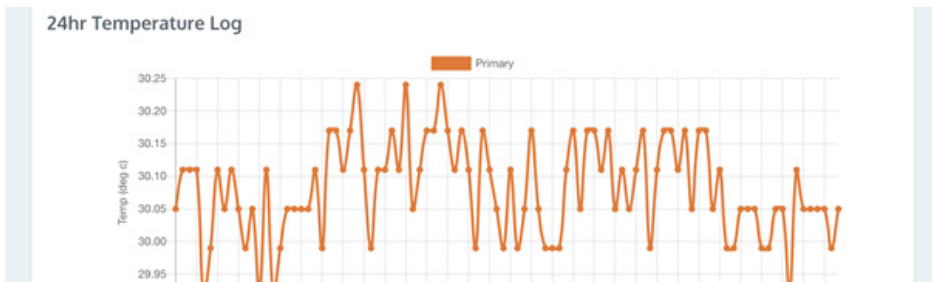

The next part of the page is the Device Health section. If there are any issues with the device such as it heating up past the recommended threshold temperatures, it losing contact with the loop, or the device resetting, you will see these events in this table:

Device Health		
Event Date	Type	Summary
2020-06-12 09:05:08	TEMP_A_GOOD	Temperature A has returned to the good range. It is now 30.11 °C, previously 90 °C. The caution threshold is 60 °C.
2020-06-12 09:04:41	TEMP_B_FAULT	Temperature B is in the fault range. It is now 75 °C, previously 0 °C. The fault threshold is 70 °C.
2020-06-12 09:04:41	PRR_LOOP_LATCH_FAULT	The primary loop has reset to recover automatically from a fatal error. Its count is now 10, previously 0.
2020-06-12 09:04:41	SEC_LOOP_LATCH_FAULT	The secondary loop has reset to recover automatically from a fatal error. Its count is now 100, previously 0.
2020-06-12 09:04:40	TEMP_A_FAULT	Temperature A is in the fault range. It is now 90 °C, previously 30.17 °C. The fault threshold is 70 °C.
2020-06-12 08:42:51	SEC_LOOP_LATCH_FAULT	The secondary loop has reset to recover automatically from a fatal error. Its count is now 101, previously 0.
2020-06-11 21:32:57	SEC_LOOP_LATCH_FAULT	The secondary loop has reset to recover automatically from a fatal error. Its count is now 100, previously 99.

The device health comprises of 3 columns. Event Date is when the device health event was logged. The type is the internal error code that was generated. This is a bit technical so next to it you will also find a Summary column which explains what the issue is and gives some more information about the parameters which triggered it.

The last table on this page is the Activity Log. The device sends a full diagnostic log to the cloud multiple times per hour. Each logged activity entry for devices can be found here.


Activity Logs									
Event Date	Errors	Power Cycle Count	Power (JGJ)	OPV (VDC)	Temp (°C)	Loop Open Count	Loop Dip	Loop Output Fault	Details
2020-06-12 16:06:04		12	48.16 / 48.01	24.66 / 24.24	29.92	0	0	0	
2020-06-12 15:51:02		12	48.16 / 48.01	24.56 / 24.02	30.05	0	0	0	
2020-06-12 15:36:00		12	48.23 / 48.08	23.75 / 23.59	29.99	0	0	0	
2020-06-12 15:20:58		12	48.23 / 48.01	24.61 / 24.08	30.05	0	0	0	
2020-06-12 15:05:56		12	48.16 / 48.01	24.02 / 24.56	30.05	0	0	0	
2020-06-12 14:50:54		12	48.16 / 48.01	24.13 / 24.45	29.92	0	0	0	

A selection of the most useful fields have been added as columns along the table.

If a column with two values is separated by a slash, this is a phased device. The left is the primary and the right is the secondary values.:

Power (VDC)	OPV (VDC)
48.16 / 48.01	24.66 / 24.24
48.16 / 48.01	24.56 / 24.02

On the right hand side there is a details button:

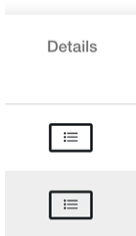

Because the device logs a large amount of diagnostic data per-event, it would not all fit in on this summary table.


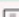



Click this button to see a detailed table of every item which has been submitted:

Property	Value
Event Date	2020-06-12 16:06:04
Firmware Version	5.5
IP	169.254.5.160
Gateway	172.16.23.1
Subnet Mask	172.16.23.170/24
DNS	172.16.23.1
RTC Time	20:41:42
Power Cycle Count	12

Scroll this window down to see more entries on the table.

Use the X in the top right-hand corner to close this dialogue box or simply click outside of the dialogue box.

If one of these activity log events has report device health issues then the row will be highlighted, and the details will be listed in the error column:

2020-06-12 09:20:11		12	48.23 / 48.08	24.72 / 23.75	30.17	0	0	0	
2020-06-12 09:05:08	TEMP_A_GOOD	12	48.58 / 47.93	24.66 / 23.59	30.11	0	0	0	
2020-06-12 09:04:40	PRF_LOOP_LATCH_FAULT, SEC_LOOP_LATCH_FAULT, TEMP_A_FAULT,TEMP_B_FAULT	12	48.23 / 48.08	24.72 / 23.81	90.00 / 75.00	0	0	10 / 102	
2020-06-12 08:50:06		12	48.16 / 48.01	24.34 / 23.75	30.17	0	0	0	
2020-06-12 08:42:51	SEC_LOOP_LATCH_FAULT	12	48.23 / 48.08	24.72 / 23.81	29.99	0	0	0 / 101	
2020-06-12 08:35:04		12	48.23 / 48.01	23.65 / 24.18	30.11	0	0	0	

Troubleshooting

Symptom	Possible Fault	Action
Driver does not turn on.	1) Mains power is absent. 2) Internal issue.	1) Check mains power. 2) Seek assistance.
Interference (buzzing/whistling/hissing) is heard through induction loop.	1) Poor input signals. 2) Internal issue.	1) Power off the hearing loop driver and confirm that interference isn't from external origin. 2) Disconnect input signals. If sound disappears, check inputs.
Driver is excessively hot to touch.	1) Large amount of mains hum present on input. 2) Internal issue.	1) Check input signal source. 2) Incorrect hearing loop driver being used.
Loop output level indicates current is flowing but I hear nothing in the loop.	1) Shorted feeder cable. 2) Loop listener is not working or being used too far from loop.	1) Check feeder cable, although the hearing loop driver will usually refuse to tune to shorted feeder. 2) Check listener and location.
Sound is distorted.	1) Input level has been turned up too high for signal level at input. 2) Input signal is distorted. 3) Output signal is clipping.	1) Reduce input level setting. 2) Check signal source. 3) Refer to "The Clipping Status Lights are lit" below.
Audio from the hearing loop driver is clipping.	The connected hearing loop cable is too long.	1) Reduce the length of the hearing loop cable. 2) Use a larger diameter cable. 3) Create a two-turn loop. 4) Use a higher voltage driver.

Please contact your distributor (or Contacta if appropriate) if you are experiencing technical difficulties with the product.

Notification Guide



Attention



Phantom Power Inputs A + B are on



Phantom Power Input A is on



Phantom Power Input B is on



Low Cut Filter is on



Loop is being attenuated



Signal on

Signal On

Technical Specification

V22a:

Technical Data		
Audio Inputs	2 X line/microphone inputs (switchable) XLR or Euroblock	Line (optimised for -10dBV to 0dBV)
		Microphone (12V phantom power via 680Ω optimised for levels above -45dBV)
Loop Outputs	Outputs Voltage	2 x 22.66Vrms (64.09V pk-pk)
	Output Current	2 x 8Arms @ 1KHz (22.62A pk-pk) >1200 seconds (20 minutes)
	Loop Connector	2 x NL4
Audio System	Frequency Response	100Hz to 5KHz
	Distortion	THD<1% (-40dB) full current both channels driven
	Automatic Gain Control	DSP controlled, peak detecting
	High Frequency Compensation	7 DSP controlled, optimised stages
	Audio Signal Delay	10ms to 40ms
Display	Backlit TFT 480 x 128 pixels (95mm x 25mm)	
Control	Single Rotary Push Control	
Mains Input	Voltage	100V-120V /200V-240V AC (universal auto switching with PFC)
	Frequency	50Hz/60Hz
	Connection	IEC
Cooling	Custom heatsink with temperature-controlled fan	

Technical Specification

V34:

Technical Data		
Audio Inputs	2 X line/microphone inputs (switchable) XLR or Euroblock	Line (optimised for -10dBV to 0dBV)
		Microphone (12V phantom power via 680Ω optimised for levels above -45dBV)
Loop Outputs	Outputs Voltage	34Vrms (96.1V pk-pk)
	Output Current	12Arms @ 1KHz (33.94A) pk-pk >1200 seconds (20 minutes)
	Loop Connector	NL4
Audio System	Frequency Response	100Hz to 5KHz
	Distortion	THD<1% (-40dB) full current both channels driven
	Automatic Gain Control	DSP controlled, peak detecting
	High Frequency Compensation	7 DSP controlled, optimised stages
	Audio Signal Delay	10ms to 40ms
Display	Backlit TFT 480 x 128 pixels (95mm x 25mm)	
Control	Single Rotary Push Control	
Mains Input	Voltage	100V-120V /200V-240V AC (universal auto switching with PFC)
	Frequency	50Hz/60Hz
	Connection	IEC
Cooling	Custom heatsink with temperature-controlled fan	

Technical Specification

V34a:

Technical Data		
Audio Inputs	2 X line/microphone inputs (switchable) XLR or Euroblock	Line (optimised for -10dBV to 0dBV)
		Microphone (12V phantom power via 680Ω optimised for levels above -45dBV)
Loop Outputs	Outputs Voltage	2 x 34Vrms (96.1V pk-pk)
	Output Current	2 x 12Arms @ 1KHz (33.94A) pk-pk >1200 seconds (20 minutes)
	Loop Connector	2 x NL4
Audio System	Frequency Response	100Hz to 5KHz
	Distortion	THD<1% (-40dB) full current both channels driven
	Automatic Gain Control	DSP controlled, peak detecting
	High Frequency Compensation	7 DSP controlled, optimised stages
	Audio Signal Delay	10ms to 40ms
Display	Backlit TFT 480 x 128 pixels (95mm x 25mm)	
Control	Single Rotary Push Control	
Mains Input	Voltage	100V-120V /200V-240V AC (universal auto switching with PFC)
	Frequency	50Hz/60Hz
	Connection	IEC
Cooling	Custom heatsink with temperature-controlled fan	

Standards

EMC

- BS EN 55103-1: 2009 (EMC emissions)
- BS EN 55103-2: 2009 (EMC immunity)

This product has been designed and tested to comply with the following North American and Canadian standards:

- FCC class "B" EMC (emissions)
- ICES-003



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by Contacta Systems LTD or an authorised partner could void the user's authority to operate the equipment.



Correct disposal of this product

This marking indicates that this product should not be disposed with other household waste throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal and to conserve material resources, this product should be recycled responsibly. To dispose of your product, please use your local return and collection systems or contact the retailer where the product was purchased.



Local dealer:

UK & ROW
+44 (0) 1732 223900
sales@contacta.co.uk

www.contacta.co.uk

US & Canada
+1 616 392 3400
info@contactainc.com

www.contactainc.com