3540 LA Max. 294W

Charger for Lead Acid batteries

- 3-step charge control with current detection
- XLR output plug for wheelchairs and scooters available
- Input voltage 198-264 VAC
- Wake up and low current start-up of deeply discharged batteries
- Error indication for reverse polarity, charging of wrong lower voltage battery pack, defect battery and safety timer run-out
- Fixed mains cable,
 2-pin IEC 60320 available
- Mounting bracket included
- ECO-design compliance:
 DoE and CEC
- · Custom specifications on request
- · Approvals:
 - Home healthcare EN 60601-1-11 (fixed cord versions only)
 - Medically certified:
 Safety: EN 60601-1 ed. 3.1
 EMC: EN 60601-1-2 ed. 4 (24V)
 - UL approved

For updates: see <u>www.mascot.no</u>



TECHNICAL SPECIFICATIONS

GENERAL INPUT/OUTPUT

Input voltage:198-264 VACLine Frequency:47 - 50HzSwitch frequency, approx.:65 kHz

Leakage current from batt.

with mains switched off: $$<130\mu A\ @\ 24V$

Temperature range

• Operating: -25 °C - +40 °C • Storage: -25 °C - +65 °C

Temp. compensation

of charge voltage -3 to -4mV/°C pr. cell

(w. batt. clips only) < 100 mV p-p

Ripple: < 100 mV p-p **Dimensions (L×W×H):** $210 \times 113 \times 53 \text{ mm}$ **Weight:** With mains cable 1400g

With IEC60320 1150g

SAFETY PROTECTION EMC

Protection: Protected against reversed

polarity, short circuit proof and thermal run-off. Prevents sparking. Charge timer: 4h

Safety timer: 72h

Insulation class: Class II (Double insulated)

Insulation voltage

Output terminals:

Primary – secondary: 4000VAC / 5700VDC Electrical safety std: EN/IEC/ANSI 60601

EMC standards EN 60601-1-2: 2015 (Edition 4)

Input terminal: Fixed mains cable,

2-pin IEC 60320 available XLR plug or cord with insulated

battery clips and temp. sensor


IP-code: IP44 (IP40 w IEC 60320)

VERSIONS

Charge control (LED indication)							
	Step 0 < 30 min	Step 0 > 30 min	Step 1	Step 2	Step 3	Float charge	Restart
	(Yellow)	(Red=error)	(Yellow)	(Flash Yellow)	(Green)		
12V	2,4A ± 0,5A (batt. volt< 10,5A)	< 0A	20A ± 0,3A (batt. volt >10,5V) (to Vbat = 14,7V)	14,7V ± 0,1V (until I charge <2,4A or >4hr) tapering charge current	13,7V +- 0,1V (until I charge > 18A) supply current up to max 20A for possible parallel load	20V ± 0,1V Pulsing curr. at safe float volt level for max. topping of batt. capacity	>18A or <13V in 10 sec
24V	1,4A ± 0,5A (batt. volt< 21V)		10A ± 0,3A (batt. volt >21V) (to Vbat = 29,4V)	29,4V ± 0,2V (until I charge <1,4A or >4hr) tapering charge current	27,4V ± 0,1V (until I charge > 8,5A) supply current up to max 10A for possible parallel load	$27,4V \pm 0,1V$ Pulsing curr. at safe float volt level for max. topping of batt. capacity	>8,5A or <26V in 10 sec



Charging characteristics and LED indication

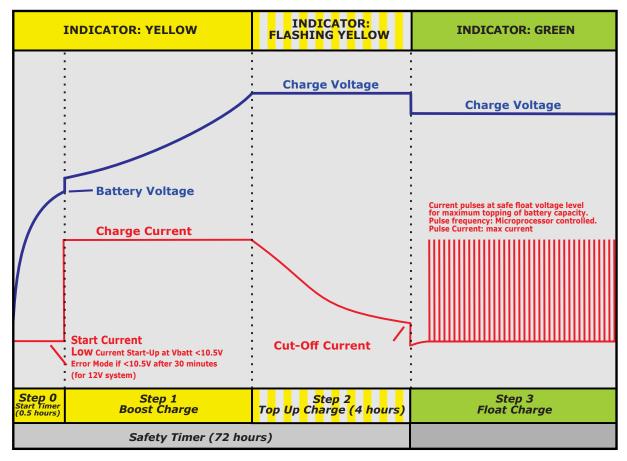

STEP 1 - BOOST CHARGE LED-indicator: YELLOW

The charger is in constant current mode (CC), charging with the maximum current until battery voltage reach Top-Up level.



STEP 2 – TOP-UP CHARGE

The charger is in constant voltage mode. The LED-indication will be FLASHING YELLOW during Top-up charge. The charger stays in this mode until the charge current decreases to charge termination level or the Top-Up Charge Timer runs out. The battery is charged to its full capacity at the end of this step



STEP 3 - FLOAT CHARGE

The LED-indication on the charger is GREEN and the battery is fully charged. The charger is in standby mode. The charge voltage is at standby level and the charger may remain connected to the battery. The charger will return to boost charge if the battery is used. A load larger than the cut-off current will initiate a new charge cycle.



BATTERY NOT CONNECTED

Battery not connected is indicated by FLASHING GREEN. In this mode charger will apply short pulses attempting to wake up deeply discharged batteries.

ERROR INDICATIONS

2 red blinks: Battery is connected to charger with wrong polarity! 4 red blinks: Charging of wrong lower voltage battery pack (e.g. 12V)


will be limited to 1.4A and terminated after 30min

5 red blinks: Safety timer has run out. Check battery status or capacity.

6 red blinks: Defect battery

LED off: Battery voltage is too high (>32V). Check battery voltage.



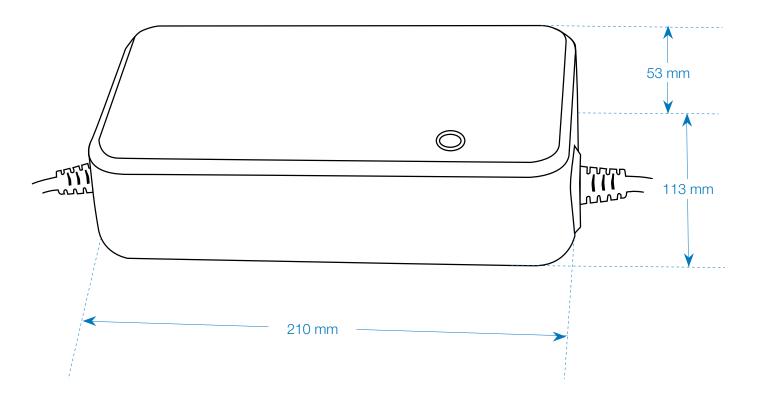

Mounting bracket, part no. 205800

