Ultra-stable, high precision (ppm class) fluxgate technology DS Series current transducer for non-intrusive, isolated DC and AC current measurement up to 330A







Features

Linearity error maximum ±15 ppm

10V BNC output connection

Fluxgate, closed loop compensated technology with fixed excitation frequency and second harmonic zero flux detection for best in class accuracy and stability

Green diode for normal operation indication

Full aluminum body for superior EMI shielding and extended operating temperature range

Large aperture \$\phi 27.6mm for cables and bus bars

Applications:

MPS for particles accelerators

Gradient amplifiers for MRI devices

Stable power supplies

Precision drives

Batteries testing and evaluation systems

Power measurement and power analysis

Current calibration purposes

Specification highlights	Symbol	Unit	Min	Тур.	Max
Nominal primary AC current	I _{PN} AC	Arms			210
Nominal primary DC current	I _{PN} DC	Α			300
Nominal output voltage	V _{out}	V	-10		10
Measuring range	I _{PM}	Α	-330		330
Primary / secondary ratio		V/kA	33,3333		33,3333
Linearity error (Best fit)	E _L	ppm	-15		15
Offset Voltage (including earth field)	V _{OE}	ppm	-20		20
Ratio error	ε _c	ppm	-10		10
DC-10Hz Overall accuracy @25°C (= V_{OE} + E_L + I_{OE})	3ээ а	ppm	-45		45
AC Maximum gain error 10Hz to 1kHz					0.01%
Bandwidth (3dB)	f _{3dB}	kHz	500		
Operating temperature range	Та	°C	-40		65
Power supply voltages	Uc	V	±14.25		±15.75

All ppm (or %) values refer to nominal current



Electrical specifications at Ta=23°C, supply voltage = ± 15V unless otherwise stated

Parameter	rameter		Unit	Min	Тур.	Max	Comment
Nominal primary A	AC current	I _{PN} AC	Arms			210	Refer to fig. 1 & 2 for derating
Nominal primary D	OC current	I _{PN} DC	Α	-300		300	Refer to fig. 1 for derating
Measuring range		I _{PM}	Α	-330		330	Refer to fig. 1 & 2 for derating
Overload capacity		Î _{OL}	Α			1500	Non-measured, 100ms
Nominal voltage o	utput	Vo	V	-10		10	At nominal primary DC current
Primary / seconda	ry ratio		V/kA	33,3333		33,3333	
Linearity error		$\epsilon_{\scriptscriptstyle L}$	ppm	-15		15	ppm refers to nominal current
Bandwidth (3dB)		f _{3dB}	kHz	500			Small signal, graphs figure 3
Response time to IPN	a step current	tr@90%	μs		1		di/dt = 100A/μs
Amplitude error	10Hz-1kHz					0,03	
	1kHz-10kHz	εG	%			0,25	% refers to nominal current
	10kHz-100kHz					1,30	
Phase shift	10Hz-1kHz					0,01	
	1kHz-10kHz	θ	0			0,05	
	10kHz-100kHz					0,70	
Noise	0 - 100Hz					0,02	Measured on secondary current
	0 - 1kHz	noise	ppm rms			0,04	
	0 - 10kHz	110136	рринииз			0,40	
	0 - 100kHz					1,50	
Fluxgate excitation	frequency	f_{Exc}	kHz		32,5		
Power supply volta	ages	Uc	V	±14.25		±15.75	
Positive current co	nsumption	lps	mA			104	Add Vo/30 (A)
Negative current c	onsumption	Ins	mA			96	Add Vo/30 (A)
Operating tempera	ature range	Та	°C	-40		65	
Offset error							
Initial		V_{OE}	ppm	-20		20	ppm refers to nominal DC current
Versus temperatu	re	TC_{VOE}	ppm/K	-1		1	ppm refers to nominal DC current
Versus time		V _{OE} /time	ppm/ month	-0,3		0,3	ppm refers to nominal DC current
Versus supply volt	age		ppm/V	-0,1		0,1	ppm refers to nominal DC current
Ratio Error							
Initial @23°C		$\epsilon_{\rm c}$	ppm	-10		10	ppm refers to nominal DC current
Versus temperatu	re	TC _C	ppm/K	-2		2	ppm refers to nominal DC current
Versus time		ε _C /time	ppm/ month	-3		3	ppm refers to nominal DC current




Indicate that caution is necessary when operating the device




Caution: Intended use is to measure current, and the product should only be used for intended use.



Frequency and ambient temperature derating (Fig. 2)

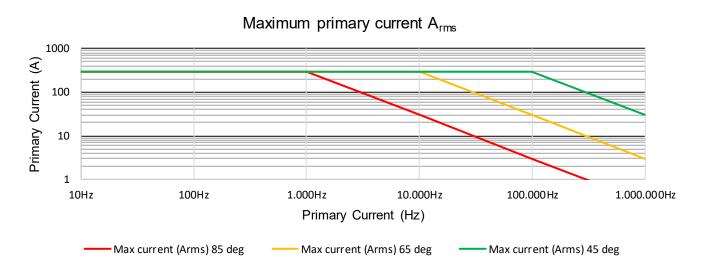

Frequency characteristics (Fig. 3)

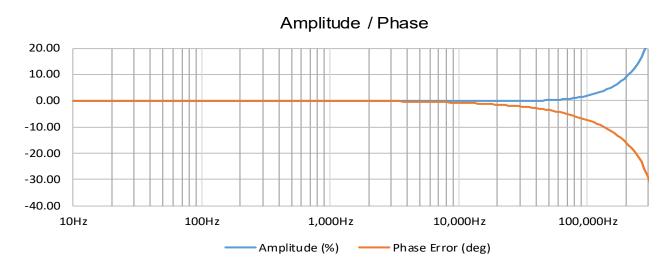

Isolation specifications

Parameter	Unit	Value		
Clearance	mm	9.5		
Creepage distance	mm	10.5		
Comparative tracking index (CTI)	> 600			
Rms voltage for AC isolation test, 50/60 Hz, 1 min - Between primary and (secondary and shield) - Between secondary and shield	and (secondary and shield) kV			
Impulse withstand voltage (1.2/50µs)	hstand voltage (1.2/50µs) kV 10.4			
Continous working voltage with Uninsulated wire Non mains CAT II (DC and rms) CAT III (DC and rms) Insulated wire Non mains CAT II (DC and rms) CAT III (DC and rms) CAT III (DC and rms)	V	1000 600 300 2000 1000 1000		
Transient voltage with Uninsulated wire Non mains CAT II CAT III Insulated wire Non mains CAT II CAT II	V	4500 6000 6000 6000 6000 8000		



Caution: Do not connect the transducer to signals or use for measurements within Measurement Category IV, or for measurements on MAINs circuits or on circuits derived from Overvoltage Category IV which may have transient overvoltages above what the product can withstand. The product must not be connected to circuits that have a maximum voltage above the continuous working voltage, relative to earth or to other channels, or this could damage and defeat the insulation. The product can only withstand transients up to the transient overvoltage rating without breakdown or damage to the insulation. An analysis of the working voltages, loop impedances, temporary overvoltages, and transient overvoltages in the system must be conducted prior to making measurements.



Caution: When using insulated wires all wiring must be insulated for the highest voltage used.

Absolute maximum ratings

Parameter	Unit	Max	Comment
Primary	kA	4.5	Maximum 100ms
Power supply	V	±16.5	

Environmental, safety and mechanical specifications

Parameter	Unit	Min	Тур	Max	Comment
Altitude	m			2000	
Usage					Designed for indoor use
Transient voltages					Up to overvoltage category III
Poution Degree				2	
Ambient operating temperature range	°C	-40		65	
Storage temperature range	°C	-40		85	
Relative humidity	%	20		80	Non-condensing
Mass	kg		0.6		
Connections	DSUB9 male and BNC connector				
Standards	IEC61010-2-30 IEC61326-1 EMC IEC61010-1:2010 3rd Edition				
External devices	External devices connected to current transducers must comply with the standards IEC61010-1, IEC60950 or IEC62368-1 and be energy-limited circuitry				
Cleaning	The transducer should only be cleaned with a damp cloth. No detergent or chemicals should be used.				
Temperature	When multiple primary turns are used or high primary currents are applied the temperature around the transducer will increase, please monitor to ensure that the maximum ratisngs are not exceeded. It is recommended to have minimum 1mm² per ampere in the primary busbar.				

Advanced Sensor Protection Circuits "ASPC"

Developed to protect the current transducer from typical fault conditions:

- Unit is un-powered and secondary circuit is open or closed
- Unit is powered and secondary circuit is open or interrupted

Both DC and AC primary current up to 100% of nominal value can be applied to the current transducers in the above situations without damage to the electronics.

Please notice that the transducer core can be magnetized in all above cases, leading to a small change in output offset current (less than 10ppm)

Status pins

When transducer is operating in normal condition, the status pins (3 and 8) are shorted.

Status pins properties: - forward direction pin 8 to pin 3, maximum forward current 10mA

- maximum forward voltage 60V, maximum reverse voltage 5V


Accessories

4-channel power supplies unit for connection up to 4 x DL2000 : DSSIU-4-1U
 6-channel power supplies for connection of up to 6 x DL2000: DSSIU-6-1U

Transducer cables in 4 lengths (2m - 5m - 10m - 15m - 20m):
 DSUB2 - DSUB5 - DSUB10 -

DSUB15 - DSUB20

Please visit the Danisense homepage for relevant datasheets.

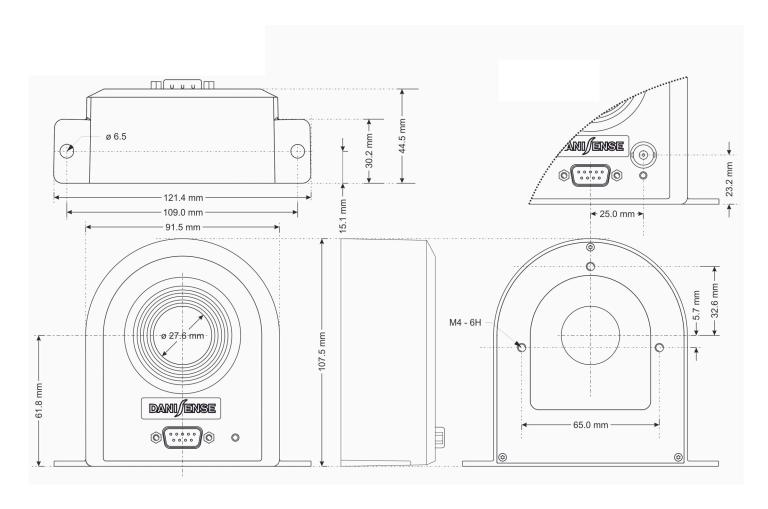

(general tolerance 0.3mm unless otherwise stat-

DSUB pin layout


DSUB-9 pinout & BNC connection




When sensor is operating in normal condition the status pins are shorted.

Status pin properties.

- Forward direction pin 8 to pin 3
- Maximum forward current 10mA
- Maximum forward voltage 60V
- Maximum reverse voltage 5V

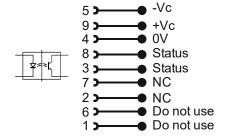

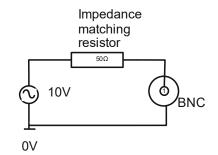

Positive current direction

Is identified by an arrow on the transducer body

Mounting instructions

- Base plate mounting
- Back side panel mounting

2 holes φ6.5 2 x M5 steel screws / 6N.m 3 holes φ4.0 x 6H 3 x M4 steel screw / 4N.m

DANI/ENSE

DS300UB-10V

Intended use:

The DS300UB-10V is designed to measure current up to 300A, and be powered by a DSSIU-4-1U or DSSIU-6-1U.

Instruction for use:

- 1. Do not power up the device before all cables are connected.
- 2. Only use cables supplied by Danisense
- 3. Place the primary conductor through the apperture of the transducer
- 4. If the DSSIU-4(6)-1U is intended for desk use, mount the rubber feet which are part of the package.
- 5. If the DSSIU-4(6)-1U is intended for Rack mounting, use the screw kit for mounting and do not mount the rubber feet.
- Connect a DSUB cable between DSSIU-4(6)-1U and each sensor
- 7. Connect a Voltmeter, DMM or other sort of analyzer with a voltage input to the transducer BNC connector.
- 8. Ensure that no calibration connectors are attached when measuring primary current. Always avoid to create a calibration short circuit, between + and calibration connection.
- 9. There is a risk of electrical shock if an uninsulated busbar with high voltages is touching the metal enclosure of the transducer. Please ensure before powering up the system that no primary busbar can touch the metal enclosure.
- 10. When all connection are secured connect mains power
- 11. Apply primary current

Safety Instructions:

DO NOT TRY TO DISASSEMBLE THE UNIT.

If the green transducer diode is not operating when the system is powered up, disconnect power and contact Danisense for further instruction.

If the equipment is used in a manner not specified by the manufacturer, the protection provided by the