















Click to expand














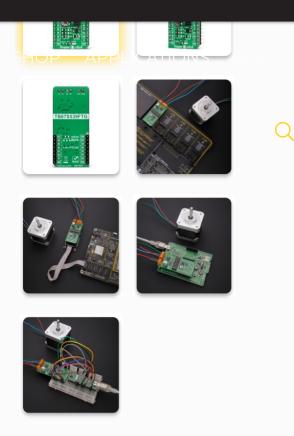

STEPPER 17 CLICK

PID: MIKROE-4547

Weight: 23 g

Stepper 17 Click is a compact add-on board that contains a bipolar stepper motor driver. This board features the TB67S539FTG, a two-phase bipolar stepping motor driver using a PWM chopper from Toshiba Semiconductor. It supports a PWM constant-current control drive without a current sense resistor for motor-current detection and full-step to 1/32 steps resolution for less motor noise and smoother control. It has a wide operating voltage range of 4.5V to 34V with an output current capacity of 1.8A maximum in addition to several anomaly detection indicators. This Click board™ makes the perfect solution for small stepping motors in a wide range of applications such as office automation, commercial and industrial equipment.














phase bipolar stepping motor driver with resistorless current sensing from Toshiba Semiconductor. The TB67S539FTG incorporates low on-resistance DMOS FETs, which can deliver a 1.8A maximum current with a motor output voltage rating of 40V, in addition to integrated protection mechanisms such as over-current and over-temperature detection (ISD and TSD LED indicators). It supports full-step to 1/32 steps resolution for less motor noise and smoother control, with a built-in mixed decay mode which helps to stabilize the current waveforms.

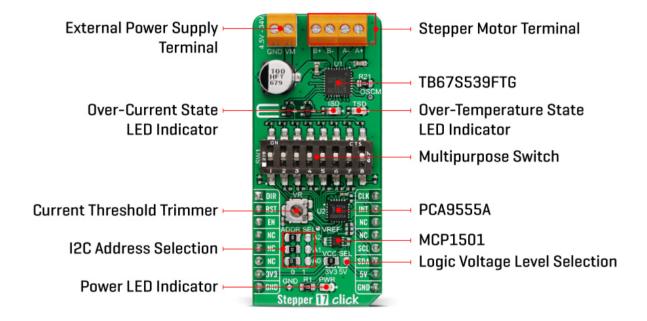

Thanks to the many steps that TB67S539FTG supports, motor noise can be significantly reduced with smoother operation and more precise control. It is suited to a wide range of applications such as office automation, commercial, and industrial equipment using stepping motors supporting an operational temperature range covering -20°C to +85°C. The current value is set by the reference



In addition to the I2C communication, several GPIO pins connected to the mikroBUS™ socket pins are also used to forward the information to the MCU, associated with the PCA9555A port expander. The PCA9555A also allows choosing the least significant bit (LSB) of its I2C slave address by positioning SMD jumpers labeled as ADDR SEL to an appropriate position marked as 0 and 1, alongside its interrupt feature routed to the INT pin of the mikroBUS™ socket.

The CLK clock signal, routed to the PWM pin of the mikroBUS™ socket, shifts the current step and electrical angle of the motor with its every up-edge, while the Enable pin, labeled as EN and routed to the CS pin of the mikroBUS™ socket, optimizes power consumption used for power ON/OFF purposes. All circuits, including the interface pins, are inactive in this state, and the TB67S539FTG is in the form of minimum power consumption. A simple DIR pin routed to the AN pin on the mikroBUS™ socket allows MCU to manage the direction of the stepper motor (clockwise or counterclockwise), while the RST pin of the mikroBUS™ socket initializes an electrical angle in the internal counter to set an initial position.

A specific addition to this Click board™ is a multifunctional switch that allows the user, by selecting a particular switch, to set appropriate features such as:

- 1 Sleep Mode Activation
- 2,3 Motor Torque Setting
- 4,5-Mixed Decay Control













as VM and should be within the range of 4.5V to 34V, while the stepper motor coils can be connected to the terminals labeled as B+, B-, A-, and A+.

This Click board[™] can operate with both 3.3 Vand 5 V logic voltage levels selected via the VCC SEL jumper. This way, it is allowed for both 3.3 V and 5 V capable MCUs to use communication lines properly. However, the Click board[™] comes equipped with a library containing easy-to-use functions and an example code that can be used, as a reference, for further development.

SPECIFICATIONS

#

Туре	Stepper
Applications	Can be used for small stepping motors in a wide range of applications such as office automation, commercial and industrial equipment
On-board modules	TB67S539FTG - two-phase bipolar stepping motor driver with resistorless current sensing from Toshiba Semiconductor
Key Features	Low power consumption, capable of controlling bipolar stepping motor, PWM controlled constant-current drive, operational in full, half, quarter, 1/8, 1/16, and



Interface SHOP	GPIO,I2C APPLICATIONS SUPPORT SERVICES NEWS
Compatibility	mikroBUS
Click board size	L (57.15 x 25.4 mm)
Input Voltage	3.3V or 5V,External

PINOUT DIAGRAM

This table shows how the pinout on Stepper 17 Click corresponds to the pinout on the mikroBUS TM socket (the latter shown in the two middle columns).

Notes	Pin	♥ ♥ mikro™ • • BUS				Pin	Notes
Rotation Direction	DIR	1	AN	PWM	16	CLK	Step Clock
Electrical Angle Intilizing	RST	2	RST	INT	15	INT	Interrupt
Enable	EN	3	CS	RX	14	NC	
	NC	4	SCK	TX	13	NC	
	NC	5	MISO	SCL	12	SCL	I2C Clock
	NC	6	MOSI	SDA	11	SDA	I2C Data

Q











Ground GN	ND 8- GND	ISGND P (92)	GNID	Ground
-----------	-----------	--------------	------	--------

Q

ONBOARD SETTINGS AND INDICATORS

Label	Name	Default	Description
LD1	PWR	-	Power LED Indicator
LD2	ISD	-	Over-Current State LED Indicator
LD3	TSD	-	Over-Temperature State LED Indicator
JP1- JP3	ADDR SEL	-	I2C Address Selection 0/1: Left position 0, Right position 1
JP4	VCC SEL	-	Logic Level Voltage Selection 3V3/5V: Left position 3V3, Right position 5V
SW1	POS 1	-	Sleep Mode Activation Switch
SW1	POS 2-3	-	Motor Torque Setting Switch
SW1	POS 4-5	-	Mixed Decay Control Switch
SW1	POS 6-7-8	-	Step Resolution Setting Switch
VR	VR	-	Current Threshold Trimmer

9

H



Description	Min	Тур	Max	Unit
Supply Voltage VCC	3.3	_	5	V
External Supply Voltage VM	4.5	Q	34	2
Maximum Output Current	-	-	1.8	А
Maximum Step Clock Frequency	-	-	250	kHz
Operating Temperature Range	-20	+25	+85	°C

SOFTWARE SUPPORT

We provide a library for the Stepper 17 Click as well as a demo application (example), developed using MikroElektronika compilers. The demo can run on all the main MikroElektronika development boards.

Package can be downloaded/installed directly from NECTO Studio Package Manager(recommended way), downloaded from our LibStock™ or found on mikroE github account.

Library Description

This library contains API for Stepper 17 Click driver.

Key functions:

- stepper17_cfg_setup Config Object Initialization function.
- stepper17_init Initialization function.













control motor. First, it sets default configuration, then runs motor on every turn it stops when makes a full circle and it changes direction on every iteration and on every CW movement changes step resolution.

```
void application_task ( void )
    static uint32 t counter = 0;
    static uint8_t run = 1;
    static uint8_t dir = 1;
    static uint8 t turns = 1;
    static uint8_t step = 2;
    if ( ( 0 == stepper17_get_int_state( &stepper17 ) ) && run )
        counter++;
        if ( counter == ( FULL CIRCLE * turns ) )
        {
            //Stop motor
            stepper17_set_en_state( &stepper17, 0 );
            run = 0;
            log_info( &logger, " Stop motor." );
            Delay_ms( 2000 );
            //Change direction
            if (dir)
                log_info( &logger, " Move motor CCW." );
                dir = 0;
                stepper17_set_dir_state( &stepper17, dir );
            }
            else
            {
                log_info( &logger, " Move motor CW." );
                dir = 1;
                stepper17_set_dir_state( &stepper17, dir );
```













```
step *= 2;
PRODUCTS} SHOP APPLICATIONS SUPPORT SERVICES NEWS
set_step_resolution( step );
}

//Move motor
stepper17_set_en_state( &stepper17, 1 );
counter = 0;
run = 1;
}
else
{
    while ( 0 == stepper17_get_int_state( &stepper17 ) );
}
}
```

The full application code, and ready to use projects can be installed directly from NECTO Studio Package Manager(recommended way), downloaded from our LibStock™ or found on mikroE github account.

Other mikroE Libraries used in the example:

- MikroSDK.Board
- MikroSDK.Log
- Click.Stepper17

Additional notes and informations

Depending on the development board you are using, you may need USB UART click, USB UART 2 click or RS232 click to connect to your













MIKROSDK

This Click board™ is supported with mikroSDK - MikroElektronika Software Development Kit. To ensure proper operation of mikroSDK compliant Click board™ demo applications, mikroSDK should be downloaded from the LibStock and installed for the compiler you are using.

For more information about mikroSDK, visit the official page.

RESOURCES









DOWNLOADS

Stepper 17 click example on Libstock

Stepper 17 click 2D and 3D files











