

The Experts in Small Printer Solutions

Ap1300 Thermal Printer



ap1300usg13.doc

Able Systems Limited Denton Drive, Northwich, Cheshire CW9 7TU England Tel: +44 (0) 1606 48621 Fax: +44 (0) 1606 44903 Web: www.able-systems.com INVESTORS Gold



Jan 2016

1 TABLE OF CONTENTS

1	Table Of Contents	.2
2	Introduction	. 3
2.1	Notes on Printer Firmware Revisions (Including Flash)	. 3
2.2	Copyright Notice And Disclaimer	. 3
2.3	Documentation Revision History	.3
2.4	Ordering Part Codes. Options and Accessories	.4
2.5	Software support	.4
3	Modes Of Operation	.5
3.1	Idle Mode	.5
3.2	Sleep Mode	.5
3.3	Spool Mode	5
4	Battery Packs	.6
4.1	Overview of Battery Operation	.6
4.2	Fitting and Connecting the Battery Pack	.6
4.3	Charging the Battery	6
44	Battery Pack Handling Precautions	7
4.5	Battery Pack Capacity	7
4.6	Primary Cell Cradle	7
47	Alternative Power Arrangements	8
5	Paper	9
51	Loading Paper	9
52	Paper Out and Head Up Sensors	9
6	l ed Indications	0
7	Printer Operation and Programming	11
71	Data Buffer	11
72	Spool Mode	11
7.3	Character Printing and Fonts	11
74	Graphics Printing and Other Programming Modes	11
8	Interface Details	12
81	RS-232 Serial Interface	12
82	IrDA Interface (Applies to Ap1300-IR only)	12
8.3	Bluetooth Interface (Applies to Ap1300-BT and Ap1300-BTi only)	12
9	Connections and EMC Precautions	13
91	Connector Details	13
92	Connector Pinouts	13
9.3	Battery Charger Details	13
94	Combined Data/Charger Adaptor Cable	14
9.5	FMC Statement	4
9.6	FMC Caution	4
10	Wall and Belt Mounting Instructions	15
11	Technical Support	16
		0

2 INTRODUCTION

This document is a User Guide, written for the person connecting and using the Able Systems Ap1300 thermal printer. Please read this Guide carefully before making any connection.

A separate Programmer Guide provides details of the control codes, and describes the internal operation of this product.

2.1 NOTES ON PRINTER FIRMWARE REVISIONS (INCLUDING FLASH)

Able Systems reserves the right to modify and improve the firmware in its printer products at any time. Whilst every effort is made to ensure backward compatibility, no guarantee in this respect is given or implied.

The Ap1300 includes a flash-reprogramable microcontroller. This allows firmware upgrades under customer control. Refer to the factory for more information.

2.2 COPYRIGHT NOTICE AND DISCLAIMER

Copyright subsists in all Able Systems intellectual property, including controller firmware (embedded software) and circuit diagrams, pin connection lists and application data. No warranty in respect of patent rights of Able Systems Limited or of third parties is given. Unauthorised reproduction or amendment of controller firmware may result in prosecution.

Design Registration of the Ap1300 printer has been applied for.

Fujitsu is a registered mark of its owner Fujitsu Limited. References to this or other owners' marks in this document are for illustrative purposes only.

Able Systems do not assume responsibility for interchangeable functionality of other parties' command sets.

2.3 DOCUMENTATION REVISION HISTORY

Title (and Revision Number)	Issue Date	Comments	
User Guide to the Ap1300 Rev 1.0	11 Mar 2004	This document is the original release	
User Guide to the Ap1300 Rev 1.1	23 Nov 2005	Product code prefixes removed throughout.	
		Note added regarding prohibited printing during fast	
		charge in Section 4.3	
		Minor changes to Section 8.2	
		Added to Ap1300-BT information in Section 8.3	
		Added reference to PDA's in Section 11.2	
User Guide to the Ap1300 Rev 1.2	12 Aug 2013	Addition of the Ap1300-BTi variant	
		Formatting changes to bring the style in line with the	
		Ap1400 documentation	
User Guide to the Ap1300 Rev 1.3	12 Jan 2016	Addition of battery usage and storage guidelines in	
		Section 4.5	
		Minor changes to Sections 4.1, 4.7, 8.3, 9.3	

2.4 ORDERING PART CODES, OPTIONS AND ACCESSORIES

The following table details full Able Systems part codes for products related to the Ap1300 printer:

ASL PRODUCT CODE	DESCRIPTION			
PRINTERS	PRINTERS			
AP1300	Standard RS-232 printer (includes 1800mAH NiMH Battery Pack)			
AP1300-IR	As standard printer, with additional IrDA interface			
AP1300-BT	As standard printer, with additional Bluetooth interface			
AP1300-BTi	As standard printer, with additional Bluetooth interface suitable for			
	connection to Apple products			
EVALUATION KITS				
Ap1300-KIT1	Complete kit suitable for evaluation of AP1300 printer			
Ap1300-IR-KIT1	Complete kit suitable for evaluation of AP1300-IR printer			
Ap1300-BT-KIT1	Complete kit suitable for evaluation of AP1300-BT printer			
Ap1300-BTi-KIT1	Complete kit suitable for evaluation of AP1300-BTi printer			
Each kit contains th	e following items:			
Ap1300 Pri	nter (Standard, IrDA or Bluetooth version, including battery pack)			
'Universal' i	nput trickle charger			
D-9 data ca	ble for PC			
2 standard	paper rolls			
Wall / Belt I	Mounting bracket and fixing kit			
Primary Ce	li Cradie			
	guide			
N.B. Alleria	auve liems may be substituted il stock is unavaliable.			
	There all Denon Dall (20 mm die 1445 m lang angew)			
A058361PR1	Thermal Paper Roll (36 mm dia, 14.5 m long approx)			
POWER PACKS	POWER PACKS			
AP1300BP-01	Battery Pack (1800 mAH NiMH)			
CHARGERS				
BC1300V4	'Universal' input trickle charger			
BC1300CLAHL	Cigar lighter charger			
CABLES AND ADAPTORS				
AP1300-D9	Data cable with D-9 for direct PC connection			
AP1300BR-01	Combined wall-mounting bracket and Belt-clip			
AP1300-PCC	Primary Cell Cradle (Fits 4 x AAA primary non-rechargable cells)			
AP1300-USBC	USB to RS232 D9 converter			

N.B. The list of options and accessories available is likely to change over time. Please check our web site (<u>http://www.able-systems.com</u>) for the most up-to-date information.

2.5 SOFTWARE SUPPORT

Support for a number of different platforms can be provided on request. At the time of release, the following software was available:

Operating System	Software
Windows	Drivers
	Setup utilities
	Flash Upgrade Utility
	Font Editor Utility
Linux	Cups drivers
Blackberry	Printing software
	SDK
Windows CE	Printing software
	SDK
Android	Android app available on the Google Play store
	SDK
iOS	iOS app available on the iTunes app store
	SDK

Please request the software you require by e-mailing DriverRequest@Able-Systems.com.

3 MODES OF OPERATION

The Ap1300 has three operating modes, when not actually printing:

- "Idle Mode": ready to accept data, but no data are in the buffer awaiting printing, and the printer motor is not running;
- "Sleep Mode": effectively switched off;
- "Spool Mode": active, but storing data for later printing.

Modes are indicated by different colour combinations on the front-panel LED (see section 6). No light is emitted in sleep mode.

No hardware power switch is fitted, as power control is either automatic or by command from the host computer. To save power, the printer enters sleep mode after a period of inactivity. It can also be programmed to stay idle indefinitely or to go to sleep on command.

3.1 IDLE MODE

In idle mode, the printer is ready to receive data, which will be printed as soon as complete lines or graphics patterns are decoded. It responds to the paper feed button in the normal way, and can also produce a demonstration print (see below). Power consumption is such that a fully-charged battery pack would last up to 10 hours, but the printer will normally switch from idle mode into sleep mode when there is no activity, extending battery life.

3.2 SLEEP MODE

The printer enters sleep mode after a period of inactivity. This period is factory-set to 30 seconds (except the Ap1300-BT and Ap1300-BTi which are factory-set to 4 minutes), but is programmable from the host.

In sleep mode, power consumption is negligible, but data stored in the buffer are lost. Special routines allow for data to be printed out automatically before going to sleep. User programmable settings such as Baud rate and operational preferences are, however, retained during sleep mode or battery replacement. The system designer can maximise battery life by arranging that the printer is generally in sleep mode, except when printing.

The printer enters sleep mode as follows:

- by command from the host;
- at the end of the (programmable) period of inactivity (This period is extended in spool mode);
- the battery voltage falls below a pre-set lower limit.

But, the Ap1300 will never enter sleep mode when:

- a charger is connected;
- data is being received;
- the RS-232 "Wake-up" control line is 'active';
- an IrDA connection is present ("Ap1300-IR" only).

The printer is woken up from sleep mode as follows:

- by pressing the paper feed button;
- by connecting the external battery charger;
- by an RS-232 data stream from the host: a certain period of logical '0' bits is required, typically a string of 50 NUL characters at 9,600 Baud. These data will be lost. There is a delay of up to 100 ms before the serial output lines are established and the printer is ready to accept data;
- by the RS-232 "Wake-up" control line becoming 'active';
- by Infra-Red activity ("Ap1300-IR" only).

3.3 SPOOL MODE

In spool mode, data is received and stored, but not printed. This is useful when printing needs to be suppressed during data transfer (for example in mobile radio systems); or when the printer is unable to print because the paper has run out or the lid is open.

The Ap1300 will automatically enter spool mode when the paper is out, when the head is up, or if some other error condition occurs, or alternatively by command from the host. Spool mode may be cleared by host command, automatically when the condition is cleared, or by "double-clicking" the feed button. Power consumption in spool mode is similar to that in idle mode.

Ap1300 User Guide Page 5 of 16

4 BATTERY PACKS

4.1 OVERVIEW OF BATTERY OPERATION

The Ap1300 is normally supplied with a standard 1.8Ah NiMH battery pack. The primary power for the printer comes from the battery pack.

The printer can operate with or without a charger connected. If required, the charger can be operated continuously to keep the battery fully charged, although a high printing duty cycle may reduce the charge in the battery. Operation from the charger alone is not possible: a battery pack must always be fitted.

N.B. For safety the battery pack is shipped fitted into the battery compartment, but discharged and disconnected. The batteries should be connected and fully charged upon receipt of a new printer or battery pack (see below).

4.2 FITTING AND CONNECTING THE BATTERY PACK

The procedure for connecting the battery pack is as follows:

- 1. Remove the screw from the battery compartment door (if fitted),
- 2. Push down, and slide back the battery compartment door,
- 3. Fit the battery pack connector taking care to insert it correctly,
- 4. Fit the battery pack ensuring wires are correctly routed and not trapped.



4.3 CHARGING THE BATTERY

Plug the battery charger into a suitable mains outlet socket and insert the jack plug into the power connector at the rear of the printer. The LED will flash orange to show that the printer is on charge.

There is also the option of charging the printer via the jack socket in the D9 data connector.



N.B. Please note that while the printer may be used as normal when trickle charging, printing is disabled during a fast charge cycle.

Ap1300 User Guide Page 6 of 16

4.4 BATTERY PACK HANDLING PRECAUTIONS

WARNING! Battery Handling Precautions The battery pack is fitted with an internal safety fuse, but the user must take care to avoid short-circuiting the contacts by preventing them from touching any metallic object. For example, the battery pack should never be carried loose in a pocket where it could rub against coins, keys or other metallic objects.

Short-circuiting the contacts of the battery pack will cause a heavy current to flow, which may lead to excessive heating of the battery pack or any metallic objects connected to it. This could cause burns, or start a fire.



WARNING! Do Not Try To Open The Battery Pack

The standard battery pack contains five Nickel-Metal-Hydride Cells. Exposing the cells increases the risk of leakage or short-circuiting.

CAUTION: It is strongly recommended that the external charger is disconnected whenever the battery pack is removed or replaced.

Please observe local standards for the handling, transport and disposal of Nickel-Metal-Hydride Cells.

4.5 BATTERY PACK CAPACITY

The Ap1300 is supplied with a 1.8Ah NiMH battery pack. This battery pack should be recharged while installed in the printer. This takes about 15 hours with the Trickle Charger, or about 3 hours with the Fast Charger. The capacity of the battery pack when fully charged will normally be sufficient to print normal text along about four full rolls of paper. However, the amount of printing which can be achieved depends greatly on the printing density, idle time and other factors such as the ambient temperature and the history of the battery pack.

With the printer awake but idle, a fully charged battery would last for up to 10 hours, but the built-in sleep mode shuts down the printer completely, reducing energy consumption to a negligible rate.

In the event of the battery becoming exhausted, the printer will automatically protect its own control circuitry by entering sleep mode if the instantaneous battery voltage drops below a threshold (e.g. during a particularly heavy section of print). In this case data stored in the buffer is lost.

The battery pack should be capable of up to 500 complete charge and discharge cycles, though this may be reduced in very repetitive applications. If a particular battery pack appears not to be holding charge as well as expected, it may be worn out and should be replaced by a new one. Please consult the factory for further details and recommended battery treatment.

Certain precautions should be taken to protect against over discharge of the batteries, which is a state from which they may never recover. We recommend that the batteries go through a recharge cycle at least once every 4 months. Where the printer is being used infrequently we recommend recharging the batteries after each use. If the printer will be inactive for long periods we recommend disconnecting the battery during these times.

During battery charging, especially fast charging, the printer may become quite warm. This can crease the paper within the mechanism. The system designer may wish to feed out some paper before printing begins, either controlled from the host, or by the user pressing the paper feed button.

4.6 PRIMARY CELL CRADLE

Also available, as an accessory, is a battery cradle suitable for 4 x AAA primary (non-rechargable) cells. If the standard rechargable NiMH battery pack becomes discharged and there is no time, or no available mains charger, to recharge it, then the AAA battery cradle may be used to power the printer for short periods.

N.B. The cradle is suitable for four AAA 1.5V primary (non-rechargable) cells only.

4.7 ALTERNATIVE POWER ARRANGEMENTS

Alternative arrangements, such as direct power from a vehicle 12V or 24V starter battery, or direct power from a high capacity voltage source are also available. If this is a requirement please see our website, or contact the factory, for information on these alternative models.

5 PAPER

Pressing the paper feed button when the printer is idle advances paper at typically 50 mm per second, depending on the battery voltage. However, the feed button has several additional functions:

A single press and release of the button:

- in idle or spool mode, advances paper (in steps of 1/16 mm);
- in sleep mode, wakes up the printer into idle mode;

"Double-clicking" the button: (i.e. pressing and releasing twice in quick succession just like a PC mouse)

- in idle mode, prints a demo/test message including the firmware version, encoded calibration data, and the full character set;
- in spool mode, or having been out of paper, prints any stored data and enters idle mode.

Some of the functions of the paper feed button can be invoked or disabled under control of the host.

5.1 LOADING PAPER

Paper rolls must be 57.5 ± 0.5 mm wide, 36 mm maximum diameter, and have the thermally sensitive coating on the outside. The printer can accept rolls which are coreless or wound on a core.

Suitable rolls are available as ASL Product Code:

A05836TPR1 Thermal Paper Roll (36 mm dia, 14.5 m long approx)

The procedure for loading paper is as follows:

- 1. Slide the Lid Release Button forwards until the Lid springs open.
- 2. Unwind a small amount of paper from the roll and Insert the Paper Roll into the Printer.
- 3. Close the Lid down, and the paper is loaded.



After loading, check that the paper advances properly, and tear off any excess by pulling the paper sharply towards you across the serrated tear bar. In the event of a jam or other paper loading problem, release the lid and straighten the paper before closing again.

5.2 PAPER OUT AND HEAD UP SENSORS

A reflective optical Paper Out sensor within the mechanism detects an out-of-paper condition, and/or senses black marks to register with pre-printed forms. A mechanical Head Up sensor detects when the lid is open.

By default, the printer enters Spool mode automatically if either sensor becomes active. Spool mode is automatically exited, and any stored data printed, when new paper is loaded and the lid closed. This behaviour may be modified. Please refer to the Programmers' Guide for details of how to configure these functions.

6 LED INDICATIONS

The LED indicator at the front of the Ap1300 has a number of colour combinations, which repeat in up to a 4-phase pattern to provide status information (see table below).

In summary, if the LED is constant green it indicates that the printer is operating normally from its battery pack. Flashing on and off indicates that Spool mode is active and no printing can take place. Orange advises the battery is being charged. Red warns of a low battery or other problem.

No light indicates that the unit is in sleep mode, has a flat battery, or the battery is not connected.

LED Pattern Table

Pattern	Battery	Buffer Mode
Constant Green	Running	Normal
Fast Flashing Green	Running	Spool *
Long Green - Short Red	Battery Low	Normal
Short Green - Short Red	Battery Low	Spool *
Short Green - Long Orange	Trickle Charging	Normal
Long Orange Flashing	Trickle Charging	Spool *
Fast Flashing Orange	Fast Charging	Spool (Printing prohibited)
Fast Flashing Red	Error Condition	Spool (Printing prohibited)
No light	Flat, or in sleep mode	

* (Spool may have resulted from Paper Out or Head Up conditions)

The Ap1300-BTi LED patterns will change when connected to another device via Bluetooth. All green will be replaced by blue. All orange will be replaced by purple. When the connection is dropped, the LED patterns will return to standard as shown above.

Although these tables may seem complicated, few applications will produce many of the combinations.

Other LED Patterns

Other LED patterns may be programmed into the Ap1300 on request or by the system designer. Please refer to the Programmers' Guide for details of how to configure these functions.

7 PRINTER OPERATION AND PROGRAMMING

The Ap1300 utilises a Fujitsu FTP-628MCL103 printer mechanism, with a fixed (parallel) print head with 384 horizontally-arranged thermal elements. The paper is advanced by a stepper motor, and printing takes place in a single dot row for each step of the paper. Each printed dot is approximately 1/8 mm square. The printing speed and dot density are controlled according to the battery voltage and the head temperature.

Various printing modes, including graphics, are invoked by 'Escape' sequences. Control codes and status report protocols are described in detail in the Programmers' Guide, available separately.

7.1 DATA BUFFER

The Ap1300 has a nominal 20k byte buffer to optimise throughput: this enables data to be received into the buffer while previous lines are being printed. Printing will be initiated on receipt of a valid logical line of data or a complete graphics pattern.

The buffer may be cleared by data command or by a hardware reset. A partially full line will be printed on receipt of an appropriate control code, or after a programmable timeout delay.

7.2 SPOOL MODE

Spool mode can be entered by:

- a command from the host;
- Paper Out condition or Head Up condition being sensed;
- fast charging detected;
- an error condition (e.g. head over temperature, battery over voltage, etc).

In spool mode, the buffered data are stored without being printed until the mode is exited by:

- a command from the host;
- the 'causing condition' (e.g. Paper Out or Head Up) being cleared;
- the paper feed button being double-clicked.

7.3 CHARACTER PRINTING AND FONTS

The default 32-column character set is formed from a 24x10 dot matrix, and is based on the industry standard IBM® character set Code Page 437. This character set has been modified to include the Euro symbol (' ϵ ') at position 80H (128 Decimal), in place of the usual capital C with cedilla (' ζ ').

Various combinations of single or double width, single or double height, inverted, underlined, and other attributes may be mixed within a line.

Codepage 1252 is selectable on printers running firmware V8.3 or higher. Please refer to the programmers guide for more information.

Customised fonts may be created using the Able Systems Font Editor Utility, and downloaded to the Ap1300. Only a single custom font may be loaded in the printer at one time.

7.4 GRAPHICS PRINTING AND OTHER PROGRAMMING MODES

Various dot-addressable graphics modes are supported, at up to 384 dots per line. The Windows driver operates in the graphics mode. Refer to the Programmer's Guide for full details of this and other advanced programming modes.

8 INTERFACE DETAILS

8.1 RS-232 SERIAL INTERFACE

All models of Ap1300 printer have an industry standard RS-232 interface. The default parameters are 9600 baud, 8 data bits, 1 stop bit and no parity. Other baud rates can be programmed by control codes, or by using a setup utility available from the factory.

Serial data is expected in standard RS-232C format with -12V meaning 'mark' or '1' and +12V a logical '0', with reference to the common ground. The serial data output line, TxD, transmits XON/XOFF and status information to the host at the same Baud rate and in the same format as the serial data input. The hardware busy line is true (nominal -12V) when busy. Both serial output lines will relax to approximately 0V when the Ap1300 is in sleep mode, and the user must allow a short period after awakening before relying on the values of these signals.

Some host equipment use a constant space condition (+12V) to indicate a reset condition or wait state. Some battery powered host equipment present the same output signal when they go to sleep. The Ap1300 can be set to ignore this condition as detailed in the Programmer's Guide, but even then this type of host behaviour may result in one or more spurious characters being received and printed by the Ap1300, or the Ap1300 may be prevented from going to sleep.

8.2 IrDA INTERFACE (APPLIES TO AP1300-IR ONLY)

The Ap1300-IR features an Infra-Red window on the front of the body. It includes special hardware which wakes the printer when any Infra-Red activity is detected. In order to reduce the occurence of 'false triggers', the sensitivity of this wake-up sensor is reduced. It may be necessary to bring the host IrDA device fairly close to the Ap1300-IR before it will wake up.

Once awake, the printer will respond to communications from an IrDA compliant primary device. The printer supports 'point-to-point' applications (i.e. one primary device and one secondary device). It operates only as a secondary device, and cannot initiate a link between devices.

Once a link is established then the printer shows a red LED through the IR window on the front. The link will continue as long as the devices are maintained in line-of-sight and within operating range. While a link is maintained, data may be exchanged freely between the two devices.

The protocols supported by the Ap1300-IR are as follows: IrPHY V1.0, IrLAP, IrLMP, IAS, TinyTP and IrCOMM 9-wire. Please contact the factory if further details or alternative protocols are required.

8.3 BLUETOOTH INTERFACE (APPLIES TO AP1300-BT AND AP1300-BTi ONLY)

The Ap1300-BT and Ap1300-BT include a class 2 implementation of the Bluegiga WT12 module, which is bluetooth 2.1 compliant, and is certified to CE, FCC and IC standards. The protocols and profiles supported by the Ap1300-BT are SPP (Serial Port Profile) and iAP. The Ap1300-BT is supports only iAP for compatibility with Apple products. Please contact the factory if further details or alternative profiles are required.

The detail of how to establish a bluetooth link and transfer data will vary greatly depending on the primary host device. However, the process will generally involve the following stages:

- i. Discovery of bluetooth devices;
- ii. Discovery of the printer's services;
- iii. Selection of the Serial Port Profile;
- iv. It may be necessary to Pair with the printer;
- v. Connecting to the printer.

N.B. The PIN for making a secure connection to the Ap1300-BT or Ap1300-BTi is pre-set to "1234".

Usually the bluetooth link is maintained for as long as the devices are within operating range. While the link is active, data may be exchanged freely between the two devices. Occasionally the link may be lost, in which case the user should re-initiate the link from the primary host as described above.

There is no facility to wake the printer over the bluetooth link (If such a facility is required, please contact the factory). The printer must be awake before a bluetooth link may be established and any data can be transferred to it via the bluetooth interface. Because of this the default Sleep Periods for the Ap1300-BT and Ap1300-BTi are extended to 4 minutes.

Ap1300 User Guide Page 12 of 16

9 CONNECTIONS AND EMC PRECAUTIONS

9.1 CONNECTOR DETAILS

The Ap1300 has two user connectors shown below:



9.2 CONNECTOR PINOUTS

Charger Input Jack Socket Detail

Pin	Dimension (mm)	Function	
Inner	Inside Ø 2.5	Positive / Charger Input	
Outer	Outside Ø 5.5	Negative / 0V Common	

The maximum insertion length is 12 mm.

RJ12 Combined Data Socket Detail

RJ12 Pin	Input / Output (Ap1300)	Ap1300 Function	
1	i/p	Optional Charger Input	
2	i/p	Wake-up Input	
3	i/p	RS-232 Rx data	
4	o/p	RS-232 Tx data	
5	o/p	RS-232 Busy	
6		0V Common (RS-232 signal return and Charger return)	

9.3 BATTERY CHARGER DETAILS

The Ap1300 monitors charge current into the printer, but does not regulate it in anyway. In order to fully and safely charge the batteries a suitable current-regulated charger must be connected. This may be a simple current source for trickle charging, or a more complex intelligent fast charger with automatic fast charge termination.

The following battery chargers are available:

- 'Universal' trickle charger
- Cigar lighter charger

(ASL Product Code BC1300V4) (ASL Product Code BC1300CLAHL)

Alternatively, the user may make their own charger arrangements. The recommended battery trickle charge supply current is 270mA +/- 20mA, at between 6V and 8V. An external charger supply must have an output current which remains within this range between these voltage extremes.

N.B. This connection is for a current-regulated battery charger only. Do not connect a standard voltage power supply. Serious damage may result from inappropriate connections. (Please contact the factory if you are unsure about this).

9.4 COMBINED DATA/CHARGER ADAPTOR CABLE

A data cable suitable for connecting the Ap1300 to a standard PC is available (ASL Product Code AP1300-D9). This cable features an integrated charger jack socket in the housing of the D-9 plug. For trickle charging, the charger may optionally be connected directly into the Ap1300 charger Jack Socket, or indirectly into the Jack Socket in the data cable, thus giving the maximum system wiring flexibility. It is recommended to use the internal socket when fast charging. The details for the charger jack socket in the D-9 plug are the same as for the internal socket in the printer.

D-9 Pin	Name	Function (refers to PC)	Ap1300 Pin
3	TxD	Serial Data Output	3
2	RxD	Serial Data Input	4
4	DTR	Handshaking Output	2
6&8	CTS & DSR	Busy Input	5
5	SGND	Signal Common 0V	6

The connections to a standard PC COM port are as follows:

The wake-up input (pin 2 of the RJ-12) can be driven by a normal RS-232 handshaking output and activates the printer when a positive voltage ('space' condition) is asserted. Connecting it to the PC DTR signal wakes the printer when the COM port is 'opened'. It may alternatively be tied to a positive voltage in the range $+3V \rightarrow +12V$ to keep the printer awake permanently. In this case, the printer will 'attempt' to go to sleep if the normal inactivity time-out elapses, but will merely reset and then re-start. This behaviour may be avoided by switching off the sleep period timeout.

9.5 EMC STATEMENT

The Ap1300 is fully EMC (Electro-Magnetic Compatibility) compliant and is CE marked accordingly. A Declaration of Conformity, in accordance with the EMC Directive 89/336/EEC (and as amended) is available from Able Systems on request.

9.6 EMC Caution

System EMC compliance remains the responsibility of the system designer. It is recommended that screened cables are used; earthing arrangements will depend on the application. Further advice is available from Able Systems on request.

10 WALL AND BELT MOUNTING INSTRUCTIONS

A combined bracket/clip suitable for fixing the Ap1300 to a wall or belt is available (ASL Product Code AP1300BR-01). The bracket is included in the evaluation kits, and is supplied complete with wall plugs and screws.

The bracket snaps into the bottom of the printer, and when used to clip to a belt, it may be secured by using the supplied extended screw. Prior to use, two small 'break-outs' must be removed from the battery cover of the Ap1300 as shown below:



Remove the two 'break-outs' using a small screwdriver.

When fitting to a belt, the bracket should be slotted onto the printer first, and then the entire assembly clipped over the belt as shown:



The securing screw may be fitted if required.

When fitting to a wall, the bracket must be located on the wall using screws and wall plugs as shown. The printer may then be clipped into place and removed as required.



Use a finger or small screwdriver to release the clip and then gently lift the printer to remove from the wall bracket.

11 TECHNICAL SUPPORT

In the meantime, if more information is required, please contact;

Technical Support: (<u>Support@Able-Systems.com</u>) Or call +44 (0) 1606 48621 and select option 4 for Technical Support.

[End]

Copyright © Able Systems Limited 2016. All Rights Reserved