

# NEBO<sup>®</sup>

## DAVINCI<sup>®</sup> 3200L

Before operating or charging, open the battery compartment and remove the round battery spacer disc.



### RECHARGEABLE

Use the included charging cable to recharge the unit. Power button will indicate battery level.

### POWER INDICATOR

**Steady Orange:** Battery more than 25%

**Flashing Orange:** Battery less than 25%

### CHARGING INDICATOR

**Pulsing Green:** Battery charging

**Steady Green:** Battery fully charged



### OPERATION

Press & release power button to turn the unit off and on and cycle through light modes:

**High > Medium > Low > Off**

When light is ON for 8 seconds or longer, the next button press will turn the unit off.

**Strobe:** Double-tap button


**Direct-to-Low:** From OFF, press and hold power button

**Smart Power Control™ (SPC)** seamlessly transitions through light modes.



### 4X ZOOM

Twist the head to narrow or widen the light beam.

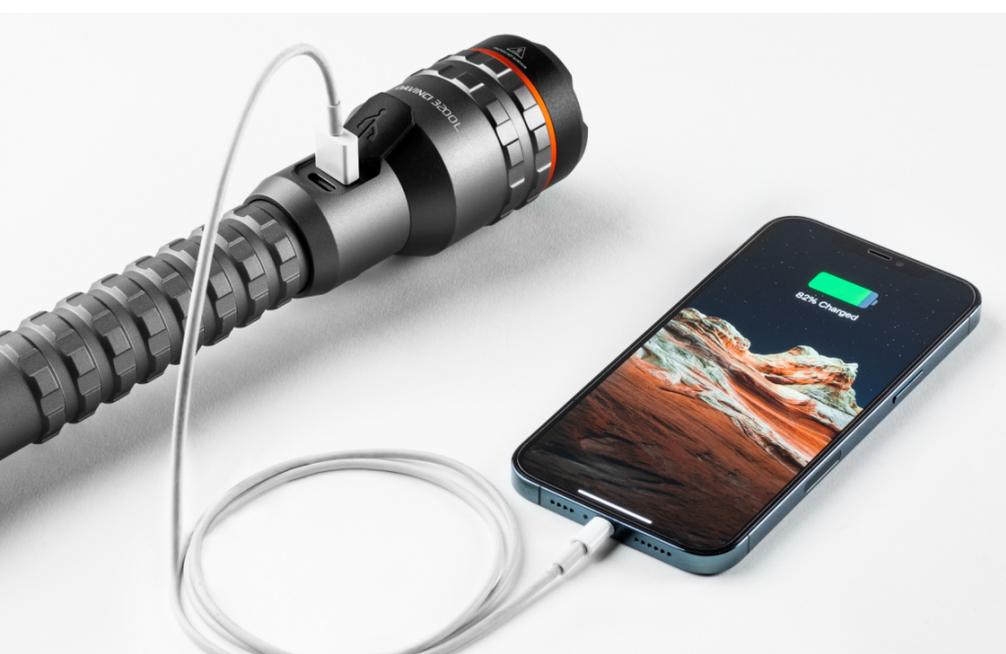

### POWER BANK

To charge your phone or other USB device, simply plug the device into the USB port.

### BATTERY

This unit is powered by a Li-Ion battery.

### WARNING!

Unit can become hot while in use. Keep the crown away from surfaces until the unit cools.

**Smart Power Control™ (SPC)** seamlessly transitions through light modes.

### PRODUCT GUARANTEE



If you experience a problem, please do not return to your local store. Contact our Customer Service team at **800-255-6061** or [www.nebolights.com/contact](http://www.nebolights.com/contact)

For more information, detailed video instructions, and warranty registration, visit [NEBOLIGHTS.com](http://NEBOLIGHTS.com)