

TSL2522 EVM

Quick Start Guide

Highly sensitive ambient light sensor

Published by **ams-OSRAM AG**

Tobelbader Strasse 30, 8141 Premstaetten, Austria

Phone +43 3136 500-0

ams-osram.com

© All rights reserved



Table of contents

1	Out of the box.....	3
2	Software installation	4
3	Hardware connection	4
4	Start the application	4
5	Uninstall application	5
6	Revision information	6
7	Legal information	7

1 Out of the box




Referring documents:

For a detailed description of the TSL2522 EVM, please refer to User Guide:

- UG001007

Each TSL2522 Evaluation Kit comes with the following components:

Figure 1: Evaluation kit contents

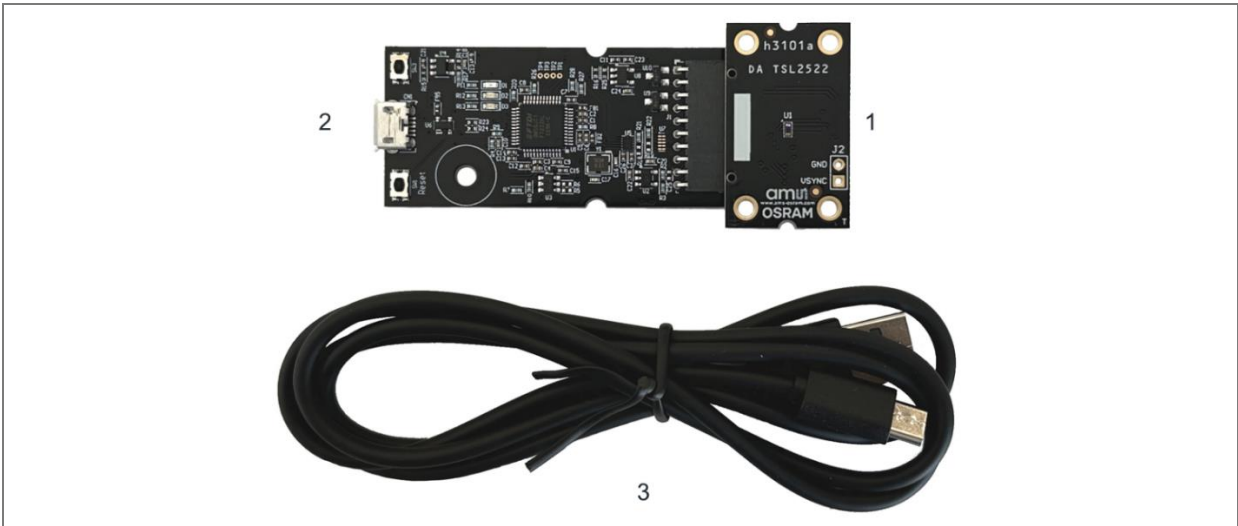

No.	Item	Description
1	TSL2522 Daughter Card	PCB with TSL2522 sensor installed
2	EVM Controller Board	Used to communicate USB to I ² C
3	USB Cable (A to Micro-B)	Connects EVM controller to PC

2 Software installation

1. Download the GUI software installer from the ams OSRAM website.
2. Run the **Setup.exe** file from the downloaded media.
3. The Setup Wizard will open and guide you through the installation of the TSL2522 host software. For most cases, all the default settings are appropriate.
4. The EVM Controller board requires the installation of FTDI CDM drivers. If these drivers are not installed on your machine, this setup will automatically launch the installer for the FTDI drivers.
5. At the end of the installation, click Finish to exit the setup.

3 Hardware connection

1. Plug the TSL2522 Daughterboard into the Controller board (Figure 1). Always use ESD procedures when handling the EVM.
2. Using the enclosed USB cable, plug the micro-B connector into the EVM module. With the other end of the cable, plug the USB A-connector into a USB port on the computer.
3. When the USB cable is connected, the green LED should light up, indicating that the USB interface is receiving power and the controller board processor is running. If the green LED does not light up, check the USB cable connections - unplug the USB cable and try again. If the green LED still does not light up, check the PC for USB error messages.

4 Start the application

To start the application, select “ams-OSRAM > TSL2522 EVM” on the All Programs menu. The default installation directory, depending on the device and the operating system you are using, is:

- C:\Program Files\ams-OSRAM\TSL2522_EVM (Windows 32-bit operating systems)
- C:\Program Files (x86)\ams-OSRAM\TSL2522_EVM (Windows 64-bit operating systems)

The user can select a different install path during installation. When the application starts, the TSL2522 window will open on the PC and automatically connect to the hardware.

5 Uninstall application

To remove the software from your computer, right-click “ams-OSRAM > TSL2522 EVM” and select Uninstall or use the Windows Control Panel.

6 Revision information

Definitions

Draft / Preliminary:

The draft / preliminary status of a document indicates that the content is still under internal review and subject to change without notice. ams-OSRAM AG does not give any warranties as to the accuracy or completeness of information included in a draft / preliminary version of a document and shall have no liability for the consequences of use of such information.

Changes from previous released version to current revision v2-00	Page
Document contents transferred to new ams OSRAM template	
Update of Figure 1	3
Removal of the Flash drive from the evaluation kit	3
Update and simplification of software installation steps (chapter 2)	4
Removal of software installation figures.	4
Removal of application uninstallation figure.	5

- Page and figure numbers for the previous version may differ from page and figure numbers in the current revision.
- Correction of typographical errors is not explicitly mentioned.

7 Legal information

Copyright & disclaimer

Copyright ams-OSRAM AG, Tobelbader Strasse 30, 8141 Premstaetten, Austria-Europe. Trademarks Registered. All rights reserved. The material herein may not be reproduced, adapted, merged, translated, stored, or used without the prior written consent of the copyright owner.

Demo Kits, Evaluation Kits and Reference Designs are provided to recipient on an “as is” basis for demonstration and evaluation purposes only and are not considered to be finished end-products intended and fit for general consumer use, commercial applications and applications with special requirements such as but not limited to medical equipment or automotive applications. Demo Kits, Evaluation Kits and Reference Designs have not been tested for compliance with electromagnetic compatibility (EMC) standards and directives, unless otherwise specified. Demo Kits, Evaluation Kits and Reference Designs shall be used by qualified personnel only.

ams-OSRAM AG reserves the right to change functionality and price of Demo Kits, Evaluation Kits and Reference Designs at any time and without notice.

Any express or implied warranties, including, but not limited to the implied warranties of merchantability and fitness for a particular purpose are disclaimed. Any claims and demands and any direct, indirect, incidental, special, exemplary or consequential damages arising from the inadequacy of the provided Demo Kits, Evaluation Kits and Reference Designs or incurred losses of any kind (e.g. loss of use, data or profits or business interruption however caused) as a consequence of their use are excluded.

ams-OSRAM AG shall not be liable to recipient or any third party for any damages, including but not limited to personal injury, property damage, loss of profits, loss of use, interruption of business or indirect, special, incidental or consequential damages, of any kind, in connection with or arising out of the furnishing, performance or use of the technical data herein. No obligation or liability to recipient or any third party shall arise or flow out of ams-OSRAM AG rendering of technical or other services.

Headquarters

ams-OSRAM AG

Tobelbader Strasse 30

8141 Premstaetten

Austria, Europe

Tel: +43 (0) 3136 500 0

Please visit our website at ams-osram.com

For information about our products go to [Products](#)

For technical support use our [Technical Support Form](#)

For feedback about this document use [Document Feedback](#)

For sales offices and branches go to [Sales Offices / Branches](#)

For distributors and sales representatives go to [Channel Partners](#)