

S204365  
(CH97338)

No: \_\_\_\_\_

**1. To open the safe**

- a. Input the code (the original code set 260167A), the green light on, please turn the key or knob in 5 seconds, (if there is handle, please turn the handle first), and pull out to open the safe.
- b. Each press the yellow light will flashing with the beep, indicating that micro processor confirmed it. If the yellow light keep on flash with the beep means the code is wrong. Three times' wrong code will result the micro processor refuse to accept the input for 20 seconds, three times' wrong code will result the micro processor refuse to accept for 5 minutes.

**2. Close the safe**

Close the door, and turn the key of knob (if there is handle, please turn the handle to the vertical place.)

**3. To set and change the user code**

*near hinge on  
it hand side of  
inside safe*


- a. Press the red button while the door is open, the yellow light will be on, please input the user code in 30 seconds (3-8bits), then press "A" or "B" to finish.
- b. The yellow light keep on flashing with beeps means the code is wrong. To change the user code please repeat above.

**4. How to use your override key**

If you forget your code. First, please take off the override cover beside the knob or key, insert the override key and turn to left. then rotate the knob or key (if there is handle, please rotate the handle first), the door will be opened.  
 \* **Do not put the override key in safe**

**5. The changing of battery**

If the red light is on with green light indicating that you should change the battery. To be sure the battery are installed correctly. Please have a test before you close the door.

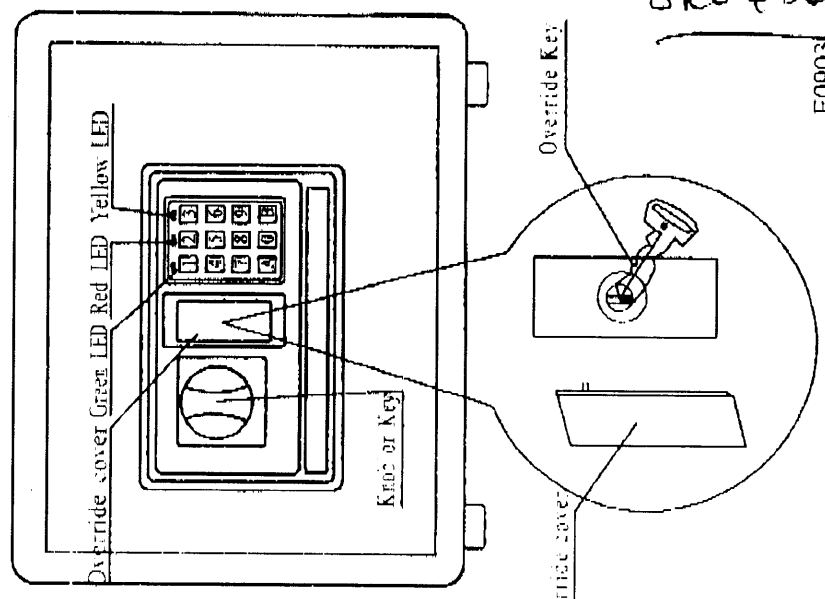

S204365  
E0903