



INSTRUCTION SHEET FOR G100-FL/FLA


Remove the 5-40x3/4" long screw from the G100-FL/FLA assembly and set aside. This screw will be used to mount the flashlight assembly on the wire wrapping gun (See sketch below).

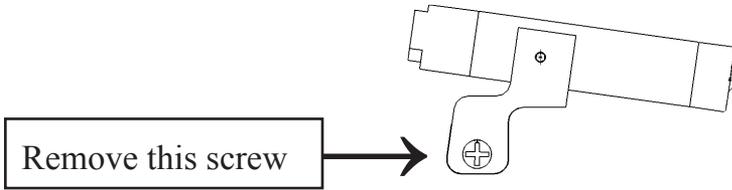

Remove the screw from the wire wrapping gun. This screw is no longer required (See sketch below).

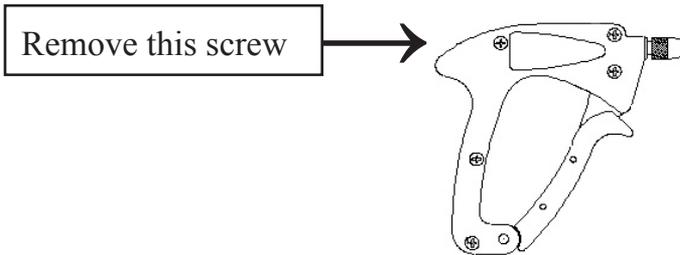

Place the G100-FL/FLA assembly on the wire wrapping gun as shown and insert the set screw and tighten. Do not over tighten.

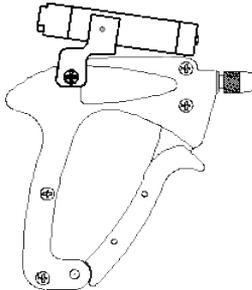

To turn flashlight on simply rotate the knob on the back of the flashlight Clockwise. To turn off the flashlight rotate the knob counterclockwise. Designed to be used with either 3" or 5" bits & sleeves. No adjustments necessary. Uses 1 AAA battery. To replace battery unscrew counterclockwise and remove knob, install new battery and replace knob.

Kit No.	For Use With
G100-FL	G100/R3278, G100/R3278INS, WG-350, WG-350INS
G100-FLA	Universal - For use with most manual wire wrapping guns