



# DNH<sup>AS</sup>

**N-3770 Kragerø  
NORWAY**  
 Phone:..... (47) 35 98 56 00  
 Fax:..... (47) 35 98 56 10  
 E-mail:..... dnh@dnh.no  
 Web-site: ..... [www.dnh.no](http://www.dnh.no)

**DNH WW Ltd.  
England**

Phone:.....(44) 1908 275 000  
 Fax:.....(44) 1908 275 100  
 E-mail:.....dnh@dnh.co.uk

**DNH GmbH  
Germany**



Phone:.....(49) 040 6569 30-0  
 Fax:.....(49) 040 6569 30-30  
 E-mail:.....dnh@dnh.de

**DNH  
Speakers Inc.  
USA**

Phone:.....(1) 484 494 5790  
 Fax:.....(1) 484 494 5793  
 E-mail:.....dnh@dnhspeakers.com

ISO 9001 CERTIFIED

## BPF-660(T)

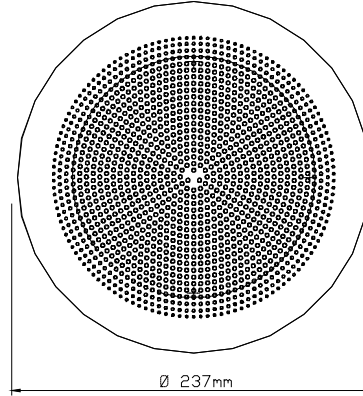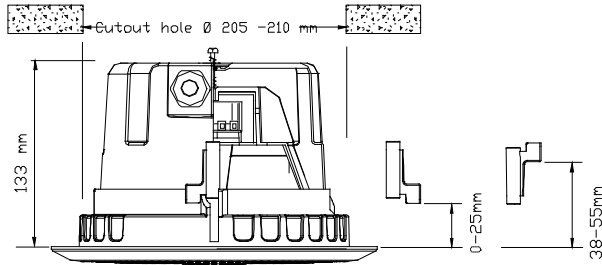

Transformer:  
 Combined  
 70/100Volt line  
 White : Red           100 V  
 White : Green         70 V

Secondary nominal  
 tapings:  
 C : 6                   6,0 W  
 C : 3                   3,0 W  
 C : 1,5                 1,5 W  
 C : 0,5                 0,5 W

**M20 cable gland and M20 blinding plug**

SPL at different frequencies at 1W/1m sine wave (P-6/15B)

**SPL vs Freq**



Material / Color .....PA ABS / RAL9010  
 Mounting..... Hooks  
 Termination..... Spring clamps  
 Weight ..... 1,33 kg  
 IP-rating.....  
 Max. / min. amb. temp ..... 90°C / -20°C  
 Rated / max. power ..... 6 W / 20 W  
 SPL 1W/1m ..... 93 dB  
 SPL rated power ..... 100 dB  
 Effective freq. range.....150 – 20000 Hz  
 Dispersion (-6dB) 1kHz / 4kHz..... 140° / 50°  
 Options.....Impedance, color, label

### **Installation, Operation and Maintenance Procedures**

- When mounting the loudspeaker please ensure that it is re-assembled in the same manner in which it was received.
- Hooks can be mounted both ways, see drawing at top of the page.
- For optimum performance, always use the correct voltage / power and operate within the frequency limits as stated.
- Take care when loudspeaker is energized (100V or 70V)
- Do not open loudspeaker when energized.
- This loudspeaker is supplied with a 2 year warranty against defective workmanship.