

Search...

[Home](#) > [Development Tools](#) > [Related Adapters](#) >
J-Link Needle Adapter (8.06.04)

Deal of the Day

RTOS & Middleware

- [embOS \(RTOS\)](#)
- [emWin \(GUI\)](#)
- [emFile \(File System\)](#)
- [emUSB Host \(USB\)](#)
- [emUSB Device \(USB\)](#)
- [embOS/IP \(TCP/IP\)](#)
- [emLoad \(Boot Loader\)](#)

Development Tools

- [J-Link \(Debug Probe\)](#)
- [J-Trace \(Trace Probe\)](#)

[Related Adapters](#)

[Related Software](#)

[J-Link Bundles](#)

[IDE & Compilers](#)

Production Tools

[Flasher \(Programmer\)](#)

[Related Adapters](#)

SEGGER Corporate

SEGGER Forum



Description [Technical Specs](#)

The Needle Adapter has been designed to connect the J-Link/Flasher to a PCB which does not come with a mating connector or programming header. The designed pattern with 3 locating pins ensures, that the adapter can not be connected the wrong way. The Needle Adapter allows manufacturers to save costs and space on their PCBs since there is no need to provide the PCB with additional connectors. It adapts from the 20-pin 0.1 inch to a 10-pin needle connector.