


Creda

850DL & 950DL

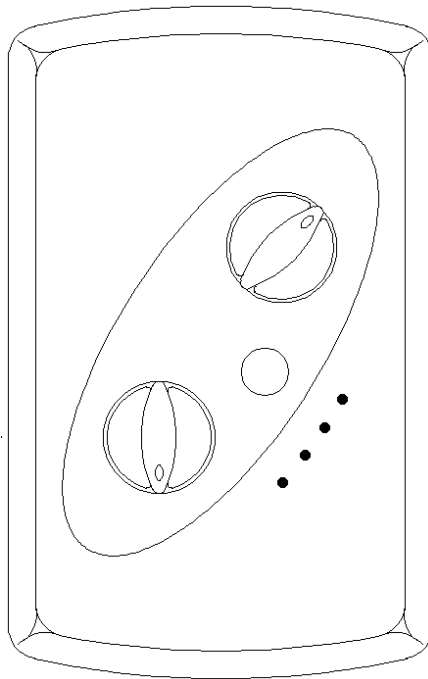

CREDA 850DL & 950DL

ELECTRIC SHOWER

Installation and User Guide

IMPORTANT:

**This booklet should be left with the user after
installation and demonstration**

CONTENTS

<u>Section</u>	<u>Page</u>
Introduction	2
Important Safety Information	2
How to install your <i>850DL/950DL</i> Shower	3
How to maintain your <i>850DL/950DL</i> Shower.	6
How to use your <i>850DL/950DL</i> Shower (Detailed)	7
What to do if things go wrong (1) Self Help	8
Additional Accessories and Common Spare Parts.	8
What to do if things go wrong (2) Professional Service	9
Creda After Sales Service	9
How your <i>850DL/950DL</i> Shower Works	10
Guarantee and Contact Details	11
How to use your <i>850DL/950DL</i> Shower (Summary)	12

INTRODUCTION

Thank you for purchasing a quality *Creda 850DL/950DL Electric Shower* manufactured in England. **To enjoy your new shower at its best, please take time to read this manual thoroughly to familiarise yourself with all instructions, BEFORE beginning installation.**

The *Creda 850DL/950DL* is an electric shower incorporating controls for on/off, power select and flow/temperature control.

Your shower is designed to stabilise temperature changes caused by water pressure fluctuations. These can result from toilets being flushed or taps being turned on and off.

When this happens your showering temperature will be held within a controlled band, provided that the minimum pressure required by the shower is maintained (see "Effect of Other Water Devices").

If you experience any difficulty with the installation or operation of your new shower, then please refer to the "What to do if things go wrong" section in this manual before contacting us.

IMPORTANT SAFETY INFORMATION

1. Your shower has been designed for convenience, economy and safety of use, provided that it is installed, used and maintained in good working order and in accordance with our instructions and recommendations.
2. **All wiring and installation must be supervised by a suitably qualified person.**
3. **THIS APPLIANCE MUST BE EARTHED.**
4. The installation must be in accordance with the current edition of BS.7671 (*the "IEE Wiring Regulations"*) and "Part P" of the "*Building Regulations*" in force at the time of installation. Installations outside England and Wales must also conform to any local regulations in effect. This appliance is intended to be permanently connected to the fixed electrical wiring of the mains supply with its own dedicated supply.
5. This appliance must **NOT** be fitted where it may be subjected to freezing conditions
6. **DO NOT** switch the appliance on if you suspect it of being frozen. Wait until you are sure it has thawed out.
7. **DO NOT** fit any sort of tap or control on the appliance outlet. The appliance is designed to have an open outlet and must only be used with "Creda" recommended fittings.
8. **THIS SHOWER IS DESIGNED AND APPROVED TO EN-60335 WITH THE HANDSET PROVIDED. UNDER NO CIRCUMSTANCES MUST ANY HANDSET THAT IS NOT APPROVED BY THE MANUFACTURER BE USED WITH THIS PRODUCT**
9. Take care to avoid restricting the outlet of the pressure relief device. If water is discharged from the pressure relief device, maintenance will be required before the appliance can be safely used.
10. Isolate the mains electrical and water supply before removing the front cover of the appliance.

HOW TO INSTALL YOUR 850DL / 950DL SHOWER

WARNING: ALL WIRING AND INSTALLATION MUST BE SUPERVISED BY A SUITABLY QUALIFIED PERSON.

WARNING: DO NOT INSTALL THIS SHOWER WHERE IT MAY BE SUBJECTED TO FREEZING CONDITIONS

We recommend that the installation is done in the following sequence.

- a. Fixing the shower to the wall b. Plumbing c. Electrical connections

a. FIXING THE SHOWER TO THE WALL

1. Position the riser rail at a convenient height for majority of users as detailed in Diagram 1a and mark its position.
2. Position the heater so that the top of the unit is horizontal and level with, **or a maximum of 0.6 metres (2ft) below the top of the riser rail.**
The heater MUST BE installed on a flat surface that extends beyond the boundary of the unit in ALL directions.
3. Adjust the position to get the most convenient arrangement taking the following into account.
 - **The unit must not be mounted in direct spray of the handset.**
 - The handset must not be able to come into contact with used water in the cubicle, bath or basin.
If it can, even after the hose has been retained by the retaining ring (see Diagram 1b), then a vacuum breaker must be fitted.
4. Fix the riser rail with screws provided.
The fixing holes at the base of the brackets will be revealed by removing the plastic. Assemble as shown in Diagram 1b.

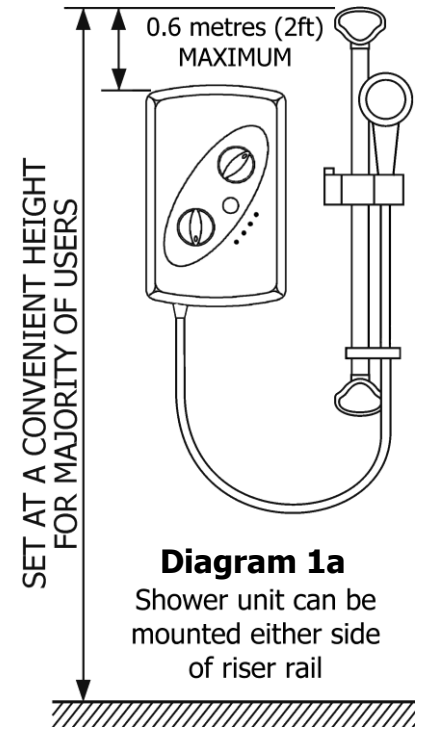


Diagram 1a

Shower unit can be mounted either side of riser rail

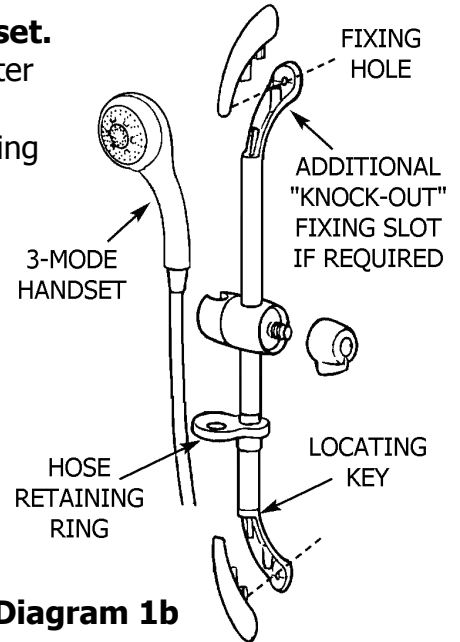


Diagram 1b


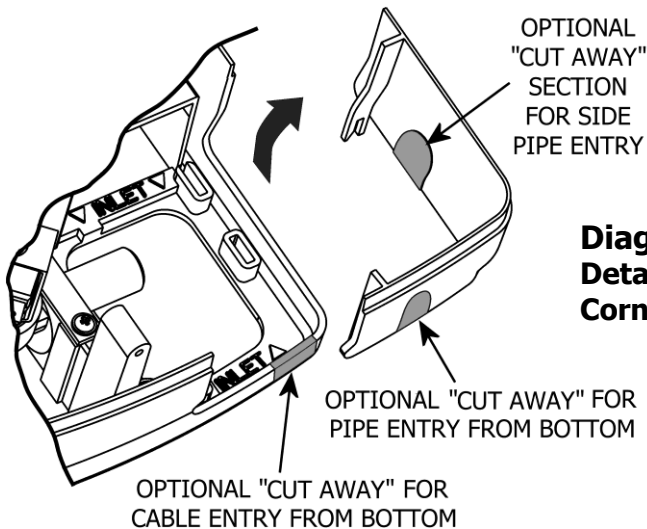


Diagram 2a
Detachable
Corner Section

5. Decide the position of the electrical cable into the unit.
If top or bottom entry is chosen, cut away the walls in the backplate as shown in Diagram 2a & 2b.
6. Decide the position of entry of the cold water pipe into the unit.
If top, cut away the backplate.
If rear, please read the section on plumbing.
If bottom or side, remove the front cover and carefully cut away the detachable corner section as shown in Diagram 2a, taking care to remain within the guide mark.

Diagram 2b

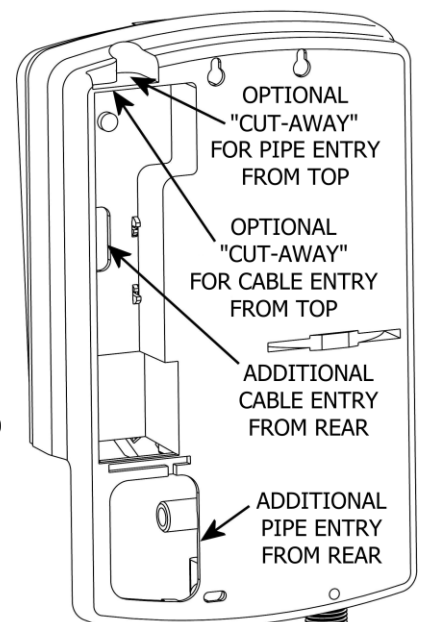


7. If you have not yet done so, remove the front cover assembly by undoing the retaining screws at the top and bottom of the unit and lifting the cover off.

Your shower is provided with 2 fixing positions in the backplate (see Diagram 7 on page 9). The top-fixing hole is a "key-hole" slot (another key-hole is provided for alternate fixing), and should be marked and drilled first.

Tighten top screw with head protruding about 10mm from the wall and hook the backplate over the screw head. This allows for correct and accurate alignment of your shower before marking and fixing the bottom position.

You may not wish to tighten up both screws at this stage as the holes are elongated to allow for adjustment after other connections have taken place.

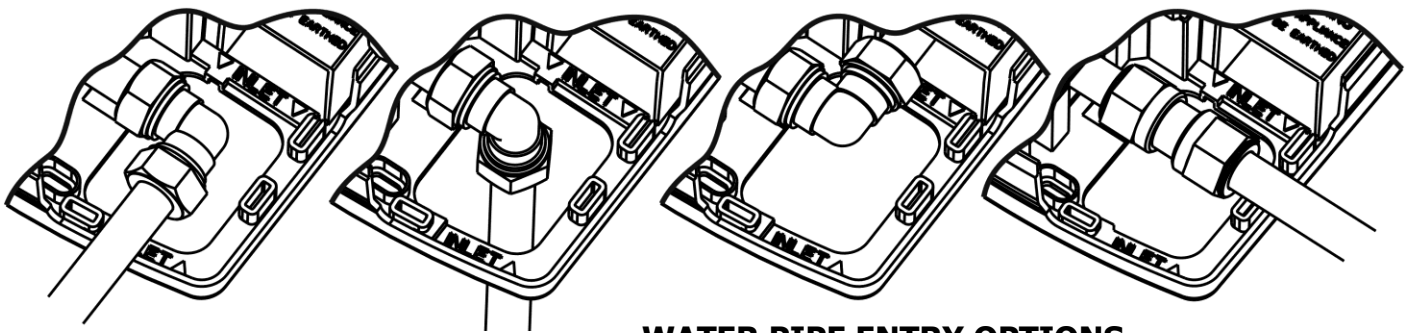

WATER PIPE ENTRY OPTIONS

b. PLUMBING

WARNING: ENSURE THAT THE MAINS WATER SUPPLY MEETS THE REQUIREMENTS BELOW BEFORE CONTINUING WITH INSTALLATION

The heater must be connected to the mains cold water supply.

This must have a **minimum** running pressure of 69kPa (0.7 bar, 10 psi) and a **maximum** pressure of 690kPa (7.0 bar, 100 psi).

WARNING: BEFORE CONNECTING THE PIPE WORK TO THE SHOWER, ENSURE THAT THE PIPE WORK IS FULLY FLUSHED OUT.

1. Unscrew the "Red Cap" from the shower outlet pipe and discard it in a suitable manner. This has been used to seal the shower during transit, and is no longer required.
2. It is recommended that a WRAS (Water Regulations Advisory Scheme) listed isolating valve is fitted to the incoming mains cold water before the shower unit. This will allow the unit to be serviced or exchanged without having to turn off the water at the water stop valve.
3. The heater can be fed from a header tank provided this has a minimum head of 7 metres (23ft).
4. Ø15mm copper or stainless steel pipe should be used.
The water inlet connection supplied is a plain Ø15mm straight shank/shaft. This connector will accept either a Ø15mm compression elbow or a Ø15mm "push-on elbow". If rear entry is required, take the pipe directly through the wall in the area provided **or** treat as top entry with an additional "Yorkshire" elbow (soldered type) for fitting into the rear channel. In multiple installations, correct pipe work sizes should be calculated to maintain adequate flow to each shower.
5. It is **ONLY** permissible to use a WRAS (Water Regulations Advisory Scheme) approved sealant on the pipework before an isolation valve as any excess after the valve will find its way into the shower operating parts.
6. With isolating valve connected, **flush the pipe work through to remove any particles etc**, before making the final connection to the shower. Blockages in the water ways (particularly the handset and solenoid valve) will prevent the heater working properly. *Note: You may be charged for a service call if it is due to incorrect installation.*

7. The shower is designed to have an open outlet and should only be used with "Creda" recommended fittings.

Do not connect the handset until after the shower front cover and corner section are fitted.

WARNING: DO NOT FIT A TAP ON THE SHOWER OUTLET.

WARNING: TAKE CARE TO AVOID RESTRICTING THE OUTLET OF THE PRESSURE RELIEF DEVICE.

c) ELECTRICAL

WARNING: THIS SHOWER MUST BE EARTHED.

The electrical installation must be in accordance with the current BS.7671 (IEE Wiring Regulations) and "Part P" of the Building Regulations and/or local regulations

1. The shower unit is designed for a single phase AC electrical supply.

Please check the rating plate on the unit to see what details apply to your shower.

AS A GUIDE ONLY (Only applies if external earth impedance is less than 0.35 Ohms)*

Rating	Cable Sizes	Fuse / MCB	Cable Length
8.5 / 7.8kW 240 / 230V	6.0mm ² 10.0mm ²	40A Type B MCB	27m Max. 45m Max.
	6.0mm ² 10.0mm ²	45A BS.1361 fuse	12m Max.* 21m Max.*
9.5 / 8.7kW 240 / 230V	6.0mm ² 10.0mm ²	40A Type B MCB	27m Max. 45m Max.
	6.0mm ² 10.0mm ²	45A BS.1361 fuse	12m Max.* 21m Max.*


Remember to upgrade the cable if it runs in thermal insulation in a loft, or for a longer distance.

2. A means for disconnection in all poles must be incorporated in the fixed wiring in accordance with the wiring rules.

We recommend a suitably rated ceiling switch mounted in a convenient position.

3. Cut back cable as in Diagram 3.

Connect cable to terminal block making sure that all the retaining screws are **VERY TIGHT** and that no cable insulation is trapped under the screws.

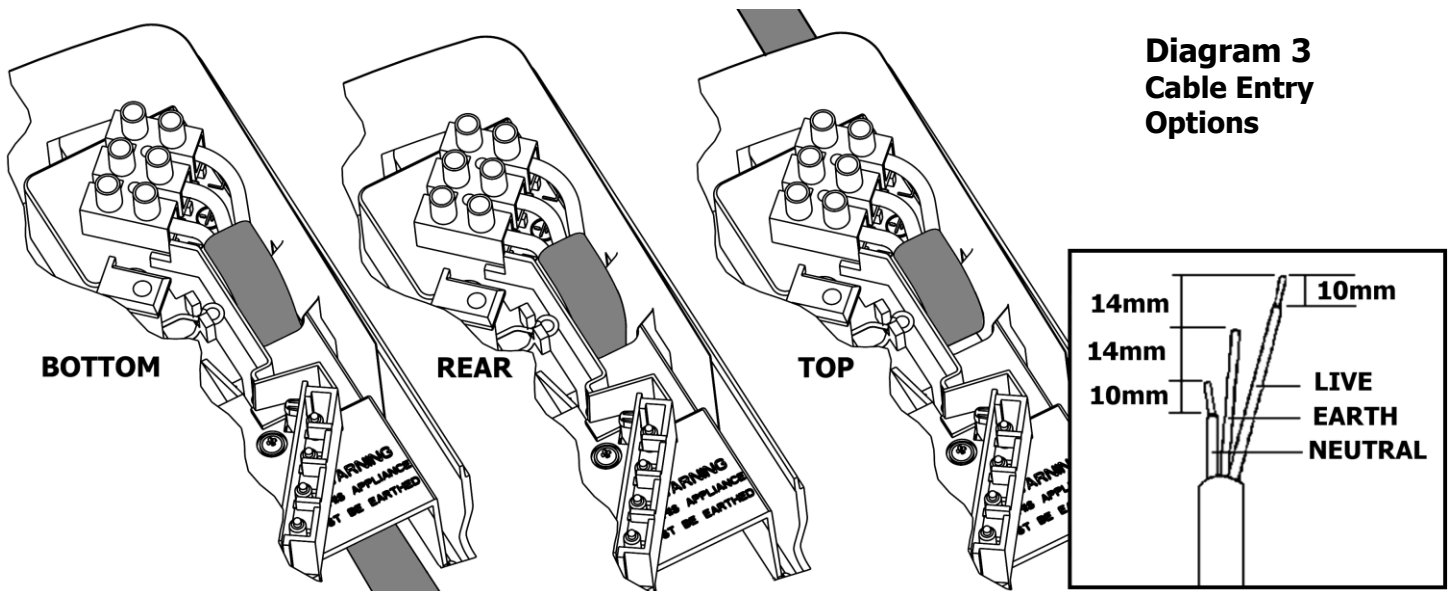

WARNING: FAILURE TO COMPLY WITH THESE INSTRUCTIONS COULD RESULT IN FAILURE OF THE TERMINAL BLOCK

4. Ensure the corner section is fitted back into the backplate.
5. Re-fit the front cover back into position **making sure the knobs are aligned correctly** with the flow valve and power selector (see Diagram 5).
Start by locating the "tang" around the recess for the outlet pipe, and then "roll" the front cover over the knobs and onto the top of the backplate.
Replace and secure the top and bottom fastening screws.

Diagram 5


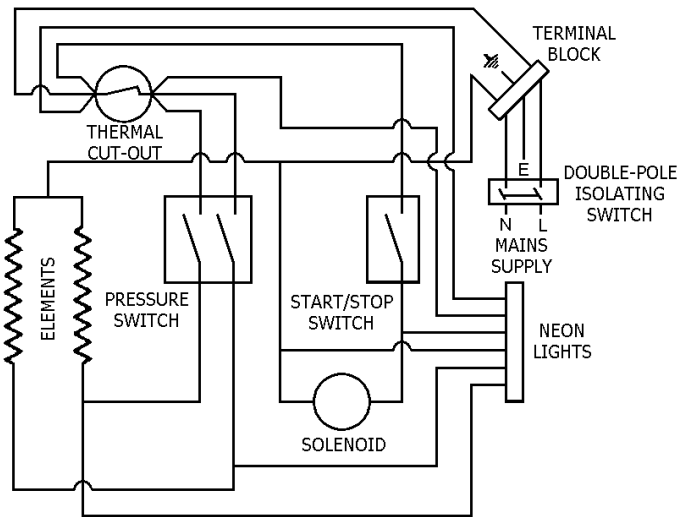


Diagram 4
Schematic Wiring Diagram

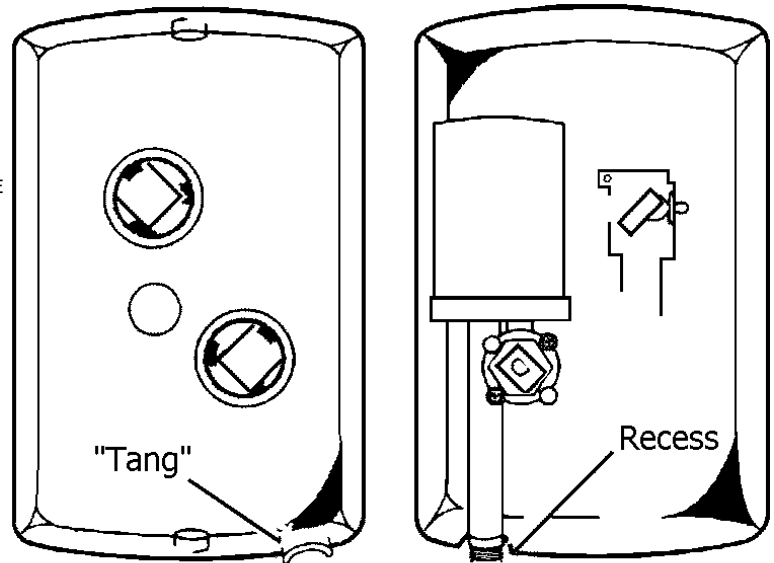

Reverse of front cover

Inside cover

6. Fit the shower hose, and operate the shower first on cold setting without the handset to flush out particles, fit the handset and then operate the shower as on page 7 or 12 and check:
 - a. That the water gets to a satisfactory temperature.
 - b. Water flow can be adjusted by knob "C".
 - c. Power selection does give a change in water temperature and that the power lights illuminate.
 - d. Check again for leaks and that the holes in the shower handset are not blocked

7. DEMONSTRATE OPERATION TO USERS

HOW TO MAINTAIN YOUR 850DL / 950DL SHOWER

It is recommended that the shower unit and hose etc. be cleaned using a soft cloth and that the use of abrasive or solvent based cleaning fluid be avoided, especially on any plated finishes. We recommend that before any cleaning, the isolating switch be turned off, thus avoiding accidentally switching on the shower.

WARNING: YOU MUST REGULARLY INSPECT THE SHOWER HOSE FOR WEAR AND DAMAGE. REPLACE IF NECESSARY, OR EVERY TWO YEARS, WITH A CREDA APPROVED PART.

WARNING: IN ORDER TO MAINTAIN THE PERFORMANCE OF YOUR SHOWER, YOU MUST DESCALE THE SHOWER HANDSET REGULARLY.

All water contains particles of lime-scale, which build up in the shower handset and unit reducing the performance.

It is therefore important to clean the shower handset by simply rubbing the rubber nozzles, or soaking in a proprietary lime-scale remover and rinsing thoroughly before use.

NOTE: After use it is normal for some water to drip from the shower handset for a few moments. This inhibits scale build-up over prolonged use.

HOW TO USE YOUR 850DL / 950DL SHOWER (DETAILED)


1. Ensure the electricity and water are turned on to the unit.
2. Your shower has 3 power settings selected by turning knob "A" (see Diagram 6).

The most popular is "high" and for your convenience this can be obtained in two positions so you are always only one step away from maximum power.

There are also options for a "med (medium)" or "cold" shower (see notes 8 and 9).

For this example turn knob "A" to "high" (either will do) and set knob "C" to "6 o'clock".

Diagram 6

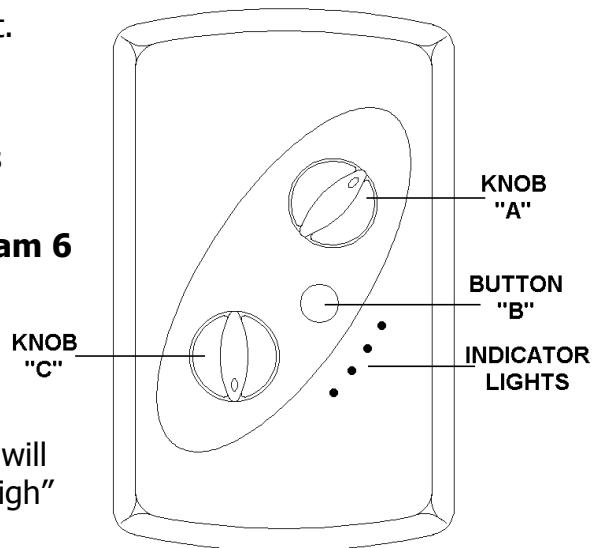

3. **Press button "B"**. The water will flow and three lights will illuminate to indicate that the selected power rating is "high" (indicated by "high" next to the lights).
4. **Allow about 20 seconds** for the temperature of the water to stabilise. It is recommended that you do not enter the water spray during this period, especially if the shower has just been used.

IF WATER IS TOO COLD

Turn knob "C" anti-clockwise in the direction of the "red arrows" to "5 o'clock" and continue turning anti-clockwise until you get the temperature of your liking.

Wait 20 seconds after each adjustment for the water temperature to stabilise.

IF WATER IS TOO HOT

Turn knob "C" clockwise in the direction of the "blue arrows" to "7 o'clock" and continue turning clockwise until you get the water temperature of your liking.

Wait 20 seconds after each adjustment for the water temperature to stabilise.

If after turning fully clockwise, water is still too hot, adjust knob "A" to "med (medium)" setting and re-adjust as above.

Water flow will be reduced on this setting.

5. Once a temperature setting to your liking has been achieved, knob "C" will rarely need adjusting. You must however take into account required adjustments for variations of incoming mains water temperature between summer and winter (see "Effect of Seasonal Incoming Water Temperature Changes" page 10).
6. When you have **finished** showering, push **button "B" only**. You have no need to adjust knobs "A" or "C". Switch off the electricity at the ceiling switch or local isolator.
7. The "med (medium)" setting of knob "A" reduces the power used by the shower giving a cooler shower or the option of reduced water flow. This option is mainly for summer usage and if this is used then knob "C" must be re-adjusted. On this setting two lights will illuminate to indicate that the selected power rating is "med".
8. The "cold" setting of knob "A" will supply water without any heating, and only the "power" light will illuminate to indicate this.
9. Your shower is **designed to stabilise temperature** changes caused by water pressure fluctuations (see "Effect of Other Water Devices on Incoming Water Supply" page 10).
10. Note that knob "C" **IS NOT A TAP** and does not turn the water off.

WARNING: DO NOT SWITCH THE SHOWER ON IF YOU SUSPECT IT OF BEING FROZEN. WAIT UNTIL YOU ARE SURE IT HAS THAWED OUT.

WARNING: DO NOT OPERATE THE SHOWER IF WATER IS DISCHARGED FROM THE PRESSURE RELIEF VALVE. MAINTENANCE IS REQUIRED BEFORE THE SHOWER CAN BE USED.

WARNING: CONSIDERATION SHOULD BE GIVEN TO SUPERVISING THE YOUNG, ELDERLY AND THE INFIRM WHILST THEY USE THIS SHOWER.

WHAT TO DO IF THINGS GO WRONG (1)

SELF HELP

If the shower is not working satisfactorily, make the following checks before calling out the installer. Any one of these adjustments could restore the performance.

The shower cycles from HOT to COLD	The shower temperature is set too hot causing the thermal cut-out (safety device) to operate. Turn knob "C" clockwise in the direction of the "blue arrows" to increase water flow. Slowly increase the water temperature by turning knob "C" anti-clockwise in the direction of the "red arrows" until a comfortable showering temperature has been reached. You MUST WAIT approximately 20 seconds for each adjustment to affect the water temperature. "med (medium)" setting may need to be selected.
Water too HOT	Increase water flow by adjusting knob "C" clockwise (direction of the "blue arrows"). "med (medium)" setting may need to be selected. Increase flow of water supply e.g. fully open service valve or stop cock. Check hose is not kinked restricting the water flow. Clean shower handset.
Water too COLD	Check power is on by neon being illuminated. Decrease water flow by adjusting knob "C" anti-clockwise (direction of the "red arrows"). "high" setting may need to be selected.
Spray pattern poor	Clean the shower handset.
Water takes longer to heat up	Thermal cut-out has operated after previous use ("overheat" light is still on) (automatically resets when unit cools down) "high" setting may need to be selected.
Water goes cold while using shower	Check neon light is on. Check water pressure has not fallen so far as to let pressure switch cut out, e.g. Another tap drawing water off. Raise position of shower handset.
Broken parts	Please contact our After Sales Service Department.

ADDITIONAL ACCESSORIES

COMMON SPARE PARTS

Please Note:- The fitting of Spare Parts must be supervised by a suitably qualified person.

Chrome 1.25 metre Shower Hose	Cat No. 93797641	Front Cover (Creda)	Cat No. 93590347
Chrome Multi-Mode Accessories	Cat No. 83595318	Tank-Base Assy	Cat No. 93590712
Chrome Premium Accessories	Cat No. 83595319	Control Knob	Cat No. 93590798
Chrome Curved Accessories	Cat No. 83595320	Flow / Stabiliser Valve	Cat No. 93794719
Curtain and Rail Pack	Cat No. 83792812	Solenoid Valve	Cat No. 93593588
Water Isolating Valve	Cat No. 93793757	Neon PCB Assy	Cat No. 93590716
		Tank Clip	Cat No. 93590715
		Thermal Cut-Out 50/88°C	Cat No. 93597836
		PRV Washer	Cat No. 93795817
		3-Mode Handset	Cat No. 93590736
		Height Adjuster	Cat No. 93593523
		Rail Brackets	Cat No. 93593522

Additional accessories and spare parts can be supplied against any Credit or Debit cards from Creda after Sales service 0844 372 7766

WHAT TO DO IF THINGS GO WRONG (2)

PROFESSIONAL SERVICE

If the previous "Self Help" checks fail to restore the performance, you should seek professional help. The person who installed the shower is probably the best one to investigate and correct it and is certainly the person to contact if you have had a problem in the guarantee period.

The following additional checklist is provided for the benefit of the qualified service person.

WARNING: SWITCH OFF THE ELECTRICITY AT THE LOCAL ISOLATOR BEFORE REMOVING THE COVER TO MAKE CHECKS

Water too HOT	Water flow restricted. possible blockage in filter of solenoid valve. Switch off water, loosen inlet connection to solenoid and replace.
Water too COLD	Check circuit through thermal cut-out. Check circuit through microswitches on the pressure switch. Check each element circuit. Check tightness of electrical connections.
No control over water flow	Undo headworks of stabiliser valve. Check stabiliser is in place and remove any debris in valve.
Water discharges from pressure relief valve	Check for cause of high pressure and remove it. Blockage on outlet e.g. blocked shower handset. Replace the pressure relief disc (not covered by guarantee).
Water does not flow when button "B" pressed	Check circuit through solenoid coil. If defective then replace. Check circuit through switch. If defective then replace. Power supply not reaching shower.

CREDA AFTER SALES SERVICE

We offer a technical advisory service on the telephone to installers and other customers with problems in the field.

Please call our technical team on:

0844 372 7766 (UK ONLY)

Or alternatively email us on :

Service.request@redringxpelair.com

Remember to quote the exact type of shower, as written on the front of the shower and on this leaflet. The model and serial number are located on the bottom face of the shower.


Make a note of those numbers here, and be sure to quote them if you call for advice.

Model Number: 53- _____

Serial Number: _____

Note: You may be charged for a service call if you do not have the serial number.

Diagram 7

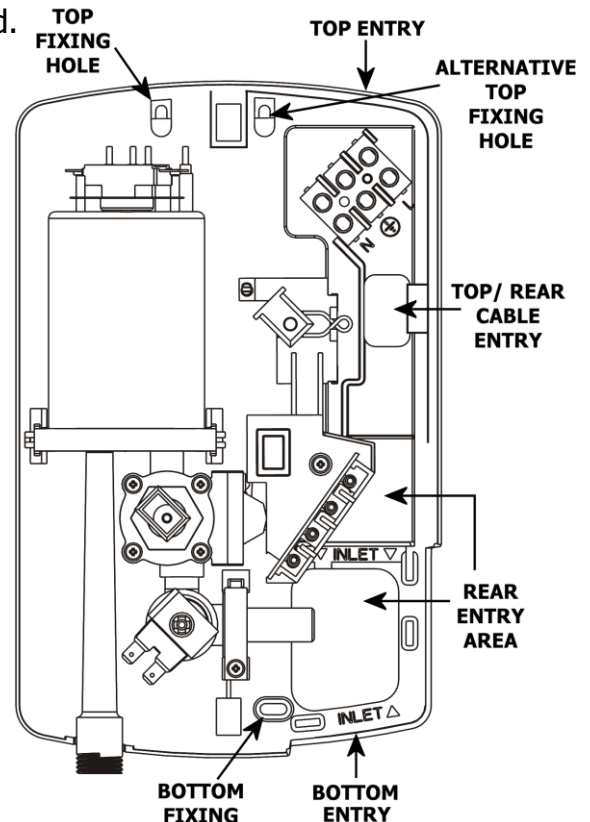

HOW YOUR 850DL / 950DL SHOWER WORKS

1. Water is heated instantaneously as it flows over the heating elements in the copper cylinder (Diagram 8).
2. The heaters are only switched on when sufficient water is flowing. This is done automatically with a switch which works on water pressure and is indicated by two or three lights illuminating depending on the power selected by knob "A".
3. The water is turned on and off by the solenoid valve built into the shower. This is switched on when button "B" is pressed.
4. The flow of water is automatically held at the level set by the user even though the supply pressure may vary (see "Effect of Other Water Devices on incoming Water Supply").

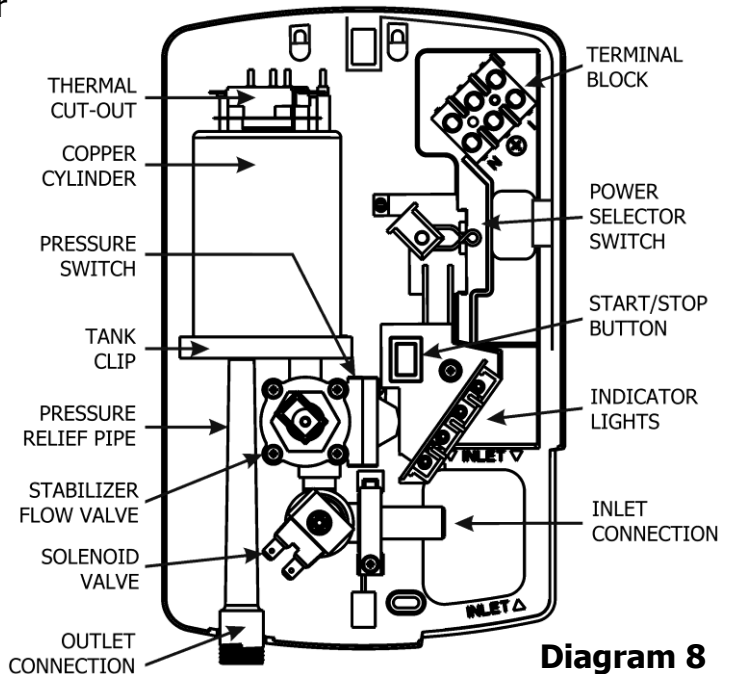


Diagram 8

5. If the water supply falls below a set limit, the pressure switch will operate and switch off the power to the elements. This is indicated by the neon light going out (see "Effect of Other Water Devices on Incoming Water Supply").
6. **As a further safeguard**, a thermal cut-out switches the power off if the water temperature climbs above the set limit and the "**Overheat**" light will illuminate. This cut-out, which gives an audible click, may also operate due to residual heat when the shower is switched off. It will reset itself if water is run through the shower for 10 to 20 seconds, and the "**Overheat**" light will go out.
7. The pressure relief device is to safeguard against abnormal pressure conditions, and provides a level of appliance protection should an excessive build of pressure occur within the shower.

Effect of Seasonal Incoming Water Temperature Changes

The required water temperature is achieved by adjusting the rate of water flow. Diagram 9 shows the principle involved in relating temperature rise to flow rate.

The higher the water rate the lower the temperature and vice versa.

The temperature of the water supplied from the mains can vary considerably throughout the year from 5°C to 20°C.

This means that in the winter, flow rate will be less than in the summer to achieve the same outlet temperature.

In summer the "med (medium)" power setting may give adequate hot water.

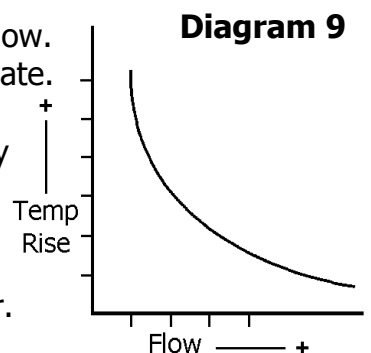


Diagram 9

Effect of Other Water Devices on Incoming Water Supply

Your shower is **designed to stabilise temperature** changes caused by water pressure fluctuations. These can result from toilets being flushed or taps being turned on and off.

When this happens your showering temperature will be held within a controlled band, provided that the minimum pressure required by the shower is maintained.

Your shower requires a minimum running pressure of 69kPa (0.7 bar, 10 psi).

At pressures above 69kPa (0.7 bar, 10 psi) it will minimise temperature fluctuations as detailed above. If the water pressure falls below 69kPa (0.7 bar, 10 psi) it is likely that the pressure switch will turn off the power to the heating elements, resulting in a cold shower.

The two middle power indication lights will flicker and go out and the "overheat" light may illuminate to indicate this has happened.

GUARANTEE

Terms and Conditions for UK (outside UK contact your local distributor)

We guarantee this product for a period of 12 months from the date of purchase.

Within the guarantee period we will resolve, **free of charge**, any manufacturing defects in the product resulting from faulty workmanship or material on condition that:-

- a) The product has been correctly installed and commissioned in accordance with our instructions and is being used on the supply circuit or voltage printed on the rating plate.
- b) The product has been used in accordance with these instructions and has not been tampered with or otherwise subject to misuse, neglect or accident.
- c) The product has not been taken apart, modified or repaired except by a person authorised by us.
- d) Evidence of the date of purchase in the form of an invoice or receipt will be required in order to qualify under the terms of this guarantee.
- e) For the service work to be undertaken free of charge, the work must only be undertaken by Redring Xpelair Group Limited, or our approved agents.
- f) Service under guarantee has no effect on the expiry date.
The guarantee on any exchanged parts or product ends when the original guarantee period ends.

EXCLUSIONS

This guarantee **DOES NOT** cover damage or defects arising from poor or incorrect installation, improper use or lack of maintenance, including the build-up of limescale.

It is the responsibility of the installer to check that the installation parameters meet the requirements of the products, and any relevant regulations.

If we are called out to a fault, which is subsequently identified as being an installation fault, we will make a charge, it is important that the routine checks are completed before calling us out, as many issues can be simply diagnosed and resolved.

A charge will be made where a call under the terms of the guarantee has been booked and a failure was not product related, or an engineer arrives and is not able to gain access.

We make no guarantees as to response time for repairs.

We will endeavour to achieve the most timely response possible but while we indicate an average response time, this should not be taken as a guarantee.

The guarantee applies to a repair or replacement (at our discretion) of the product subject to the conditions above, and **DOES NOT** cover compensation for the loss of the product or consequential loss of any kind.

This guarantee does not apply to the repair or replacement of pressure relief devices, sprayheads, hoses, accessories, isolating switches, electrical cable, fuses and/or circuit breakers.

This guarantee does not affect your statutory rights.

Full details of terms and conditions are available on request from:-



Creda

**REDRING XPELAIR GROUP LIMITED
NEWCOMBE HOUSE, NEWCOMBE WAY,
ORTON SOUTHGATE, PETERBOROUGH, PE2 6SE
TEL: +44 (0) 1733 456789 / FAX: +44 (0) 1733 319610
Website: www.redringxpelair.com**

HOW TO USE YOUR 850DL / 950DL SHOWER (SUMMARY)

1. Ensure the electricity and water are turned on to the unit.
2. Press the **start / stop button "B"**.
This will turn the shower on, the water will flow and the indicator lights will glow showing chosen Power Selection. We recommended you do not enter the water spray during this period, especially if the shower has just been used.

Knob "A" controls the power selection.
Select "**high**", "**med** (medium)" or "**cold**".

(The most popular is "high" and for your convenience this can be obtained in two positions so you are always only one step away from maximum power).

3. If the water is not at your **desired** showering temperature, turn **knob "C"** a **small amount** until you reach the desired showering temperature.

Turn clockwise (follow blue arrows) for cooler.

Turn anti-clockwise (follow red arrows) for warmer.

4. When you have finished showering, **press the start / stop button "B"** again.
The indicator lights will go out.
5. Wait for the water to stop, switch off the electricity supply at the ceiling switch or local isolator.

Notes

- **Wait 20 seconds for the temperature to stabilise after each adjustment.**
- **The indicator lights illuminate when the heaters are on and, if the shower has been recently used, they may take up to 20 seconds to come on. During this time the water may go from very hot to cold before stabilising.**
- **The position of knob "C" will be approximately the same each time the shower is used, varying only with incoming water temperature or pressure changes (e.g. you will only need to change from summer to winter).**
- **During normal operation, if an overheated water temperature is sensed then the heater will switch off and the "overheat" light will illuminate. Water will continue to flow and cool down before the heater switches back on again.**


IMPORTANT WARNINGS!

**DO NOT SWITCH THE APPLIANCE ON IF YOU SUSPECT IT OF BEING FROZEN.
WAIT UNTIL YOU ARE SURE IT HAS THAWED OUT.**

DO NOT OPERATE THE APPLIANCE IF WATER DISCHARGES FROM THE PRESSURE RELIEF VALVE. MAINTENANCE IS REQUIRED BEFORE THE APPLIANCE CAN BE SAFELY USED.

THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN AND THE INFIRM) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.

**CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY
DO NOT PLAY WITH THE APPLIANCE.**

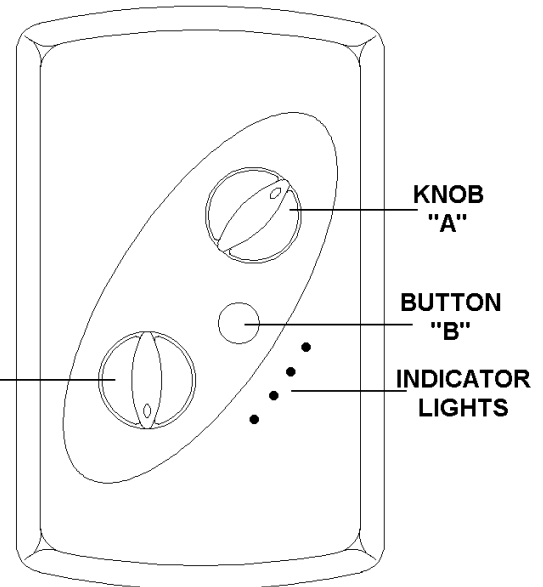

**We offer a technical advisory service on the telephone: CALL 0844 372 7766 (UK ONLY)
Or alternatively email us at:- Service.request@redringxpelair.com**