

# OPERATOR'S INSTRUCTION MANUAL DIGITAL MULTIMETER IN07221


MODEL.

- ☒ DT830A
- ☒ DT830B
- ☒ DT830C
- ☒ DT830D
- ☒ DT831
- ☒ DT832
- ☒ DT838



 
## WARNING

READ AND UNDERSTAND THIS MANUAL  
BEFORE USING THE INSTRUMENT.

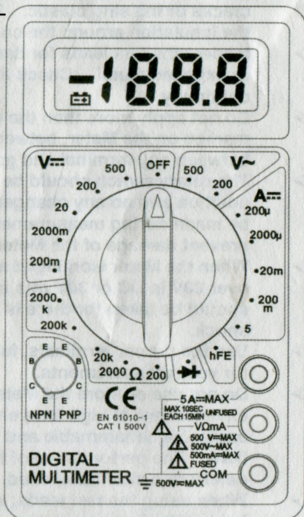

## **BATTERY AND FUSE REPLACEMENT**

Fuse rarely need replacement and blow almost always as a result of operator error.

If  appears in display, it indicates that the battery should be replaced.

To replace battery & Fuse (F500mA/250V for mA terminal and F5A/250V for 5A terminal) remove the 2 screws in the bottom of the case, simply remove the old, and replace with a new one. Be careful to observe polarity.

 
## **ACCESSORIES**

- Operator's instruction manual
- Set of test leads
- Gift box
- TP01 K-type thermoelectric couple (DT830C & DT838 only)
- 9-volt battery, NEDA 1604 6F22 type.

## Warning

To avoid possible electric shock or personal injury, and to avoid possible damage to the Meter or to the equipment under test, adhere to the following rules:

- Before using the Meter inspect the case. Do not use the Meter if it is damaged or the case (or part of the case) is removed. Look for cracks or missing plastic. Pay attention to the insulation around the connectors.
- Inspect the test leads for damaged insulation or exposed metal. Check the test leads for continuity.
- Do not apply more than the rated voltage, as marked on the Meter, between the terminals or between any terminal and grounding.
- The rotary switch should be placed in the right position and no any changeover of range shall be made during measurement is conducted to prevent damage of the Meter.
- When the Meter working at an effective voltage over 60V in DC or 30V rms in AC, special care should be taken for there is danger of electric shock.
- Use the proper terminals, function, and range for your measurements.
- Do not use or store the Meter in an environment of high temperature, humidity, explosive, inflammable and strong magnetic field. The performance of the Meter may deteriorate after dampened.
- When using the test leads, keep your fingers behind the finger guards.
- Disconnect circuit power and discharge all


- Replace the battery as soon as the battery indicator  appears. With a low battery, the Meter might produce false readings that can lead to electric shock and personal injury.
- Remove the connection between the testing leads and the circuit being tested, and turn the Meter power off before opening the Meter case.
- When servicing the Meter, use only the same model number or identical electrical specifications replacement parts.
- The internal circuit of the Meter shall not be altered at will to avoid damage of the Meter and any accident.
- Soft cloth and mild detergent should be used to clean the surface of the Meter when servicing. No abrasive and solvent should be used to prevent the surface of the Meter from corrosion, damage and accident.
- The Meter is suitable for indoor use.
- Turn the Meter power off when it is not in use and take out the battery when not using for a long time. Constantly check the battery as it may leak when it has been using for some time, replace the battery as soon as leaking appears. A leaking battery will damage the Meter

## *General Specifications*


 
 
Max display: LCD 3 ½ digits (1999 count) 0.5" high  
Polarity: Automatic, indicated minus, assumed plus.  
Measure method: double integral A/D switch implement



Product net weight: 108g (including battery)

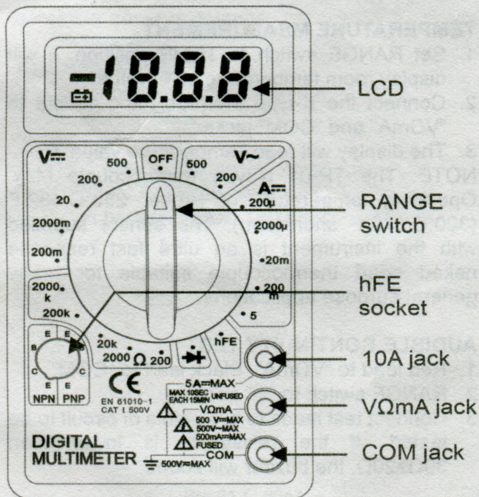

## Series Multimeters Function Table

Model	DCV	ACV	DCA	OHM			hFE	BAT		°C
830A	✓	✓	✓	✓	✓		✓	✓		
830B	✓	✓	✓	✓	✓		✓			
830C	✓	✓	✓	✓	✓	✓	✓			✓
830D	✓	✓	✓	✓	✓	✓	✓		✓	
831	✓	✓	✓	✓	✓	✓				
832	✓	✓	✓	✓	✓	✓	✓		✓	
838	✓	✓	✓	✓	✓	✓	✓			✓

### Technical Specifications

Accuracies are guaranteed for 1 year, 23°C±5°C, less than 80%RH

#### DC VOLTAGE

RANGE	RESOLUTION	ACCURACY
200mV	100uV	±(0.5% of rdg + 3D)
2000mV	1mV	±(0.8% of rdg + 5D)
20V	10mV	
200V	100mV	
500V	1V	±(1.0% of rdg + 5D)


 
 
OVERLOAD PROTECTION: 220V rms AC for 200mV range and 500V DC or 500V rms for all ranges.

#### AC VOLTAGE

RANGE	RESOLUTION	ACCURACY
200V	100mV	±(2.0% of rdg + 10D)
500V	1V	

RESPONSE: Average responding, calibrated in rms of a sine wave.

## Series Multimeters Function Table

Model	DCV	ACV	DCA	OHM			hFE	BAT		°C
830A	✓	✓	✓	✓	✓		✓	✓		
830B	✓	✓	✓	✓	✓		✓			
830C	✓	✓	✓	✓	✓	✓	✓			✓
830D	✓	✓	✓	✓	✓	✓	✓		✓	
831	✓	✓	✓	✓	✓	✓				
832	✓	✓	✓	✓	✓	✓	✓		✓	
838	✓	✓	✓	✓	✓	✓	✓			✓

### Technical Specifications

Accuracies are guaranteed for 1 year,  $23^{\circ}\text{C} \pm 5^{\circ}\text{C}$ , less than 80%RH

#### DC VOLTAGE

RANGE	RESOLUTION	ACCURACY
200mV	100uV	$\pm(0.5\% \text{ of rdg} + 3\text{D})$
2000mV	1mV	$\pm(0.8\% \text{ of rdg} + 5\text{D})$
20V	10mV	
200V	100mV	
500V	1V	$\pm(1.0\% \text{ of rdg} + 5\text{D})$

OVERLOAD PROTECTION: 220V rms AC for 200mV range and 500V DC or 500V rms for all ranges.

#### AC VOLTAGE

RANGE	RESOLUTION	ACCURACY
200V	100mV	$\pm(2.0\% \text{ of rdg} + 10\text{D})$
500V	1V	

RESPONSE: Average responding, calibrated in rms of a sine wave.

**MAXIMUM OPEN CIRCUIT VOLTAGE: 3V.**

**OVERLOAD PROTECTION: 15 seconds maximum 220Vrms.**

### **TEMPERATURE (with K-TYPE PROBE)**

RANGE	RESOLUTION	ACCURACY
-40°C to 150 °C	1°C	$\pm(1.0\% + 4)$
150°C to 1370 °C		$\pm(1.5\% + 15)$

### **OPERATING INSTRUCTIONS**

#### **DC & AC VOLTAGE MEASUREMENT**

1. Connect red test lead to "VΩmA" jack, Black lead to "COM" jack.
2. Set RANGE switch to desired VOLTAGE position, if the voltage to be measured is not known beforehand, set switch to the highest range and reduce it until satisfactory reading is obtained.
3. Connect test leads to device or circuit being measured.
4. Turn on power of the device or circuit being measured voltage value will appear on Digital Display along with the voltage polarity.

#### **DC CURRENT MEASUREMENT**


1. Red lead to "VΩmA" Black lead to "COM" (for measurements between 200mA and 5A connect red lead to "5A" jack with fully

2. Set RANGE switch to desired DCA position.
3. Open the circuit to be measured, and connect test leads IN SERIES with the load in with current is to measure.
4. Read current value on Digital Display.
5. Additionally, "5A" function is designed for intermittent use only. Maximum contact time of the test leads with the circuit is 10 seconds, with a minimum intermission time of 15 minutes between tests.

## **RESISTANCE MEASUREMENT**

- 1 Red lead to "V $\Omega$ mA" Black lead to "COM"
2. Set RANGE switch to desired  $\Omega$  position.
3. If the resistance being measured is connected to a circuit, turn off power and discharge all capacitors before measurement.
4. Connect test leads to circuit being measured.
5. Read resistance value on Digital Display.

## **DIODE MEASUREMENT**

- 1 Red lead to "V $\Omega$ mA" Black lead to "COM"
2. Set RANGE switch to " position.
3. Connect the red test lead to the anode of the diode to be measured and black test lead to cathode.
4. The forward voltage drop in mV will be displayed. If the diode is reversed, figure "1" will be shown.



## **TRANSISTOR hFE MEASUREMENT**

1. Set RANGE switch to the hFE position.
2. Determine whether the transistor is PNP or NPN type and locate the Emitter, Base and Collector leads. Insert the leads into the proper holes of the hFE Socket.
3. The meter will display the approximate hFE value at the condition of base current  $10\mu\text{A}$  and  $V_{CE}2.8\text{V}$

## **TEMPERATURE MEASUREMENT**

1. Set RANGE switch to TEMP position, it will display room temperature in  $^{\circ}\text{C}$  value.
2. Connect the K-type thermoelectric couple to "V $\Omega$ mA" and "COM" jacks.
3. The display will read Temperature value  $^{\circ}\text{C}$

NOTE: The TP-01 K-type thermocouple Max. Operating temperature of Probe:  $250^{\circ}\text{C}/482^{\circ}\text{F}$  ( $300^{\circ}\text{C}/572^{\circ}\text{F}$  short-term). The sensor supplied with the instrument is an ultra fast response naked bead thermocouple suitable for many general purpose applications.

## **AUDIBLE CONTINUITY TEST**

1. Red lead to "V $\Omega$ mA" Black lead to "COM"
2. RANGE switch to "•)))" position.
3. Connect test leads to two points of circuit to be tested. If the resistance is lower than  $30\Omega \pm 20\Omega$ , the buzzer will sound.