



User Manual

G002GCA - G002GCB

Cheetah Party Time Portable Bubble Machine

This manual forms an integral part of the product and should be kept safe for future reference.

Product

This machine uses a wheel on a motorised axis. The wheel rotates through the liquid reservoir to create bubbles.

Cautions

- 1) Do not overfill the liquid reservoir.
- 2) Clean any overflow/spillages immediately with a wet cloth.
- 3) Always use professional quality bubble fluid, such as Soundlab or Venu fluids.
- 4) This machine is for indoor use only.
- 5) Fluid may cause spots/bleaching on clothing/upholstery etc.
- 6) If fluid is spilt on the floor it is important to clean up immediately as this will cause the floor to become slippery.
- 7) Be sure to warn people that the floor may become slippery and that risk of slipping is possible.
- 8) Do not ingest bubble fluid. If ingested consult a doctor immediately.
- 9) Avoid contact with skin and eyes. If contact is made rinse thoroughly with water.

Instructions for use

- 1) Place the machine on a level surface and fill the reservoir with fluid, making sure to leave a 10mm gap from the surface of the fluid to the top of reservoir.
- 2) Point the machine in the desired direction and switch the unit on (the power switch is located on the back of the machine).
- 3) After use empty any remaining fluid out of the reservoir back into the original bottle.

Specifications

Dimensions : 220 x 180 x 140mm

Weight : 1.2kg

Output : Up to 150 bubbles per minute.

Power : 3V power supply (included) or 2 x C size batteries (not included)

Electrovision Ltd., Lancots Lane, Sutton, St.Helens, Merseyside WA9 3EX

Tél 01744 745000 • Fax 01744 745001 • E-mail : sales@electrovision.co.uk • Web : www.electrovision.co.uk