



TAKING THE RISK
OUT OF TIGHTENING

Preset Torque Screwdrivers

Prime, Pro & ESD

Drehmomentbegrenzende Schraubendreher,
Tournevis dynamométrique a Pre-Reglage,
Atornilladores Con Limitador De Par – Grifiviti Limitadori Di Coppia



Operators Manual

Instruction Part Number P34980 Issue 2



Products:	Prime, Pro & ESD
Mechanism Type:	Slipping
ISO 6789 Designation:	Type 2, Class F (Pro & ESD only)
Repeatability:	+/- 6% of Torque Setting (Pro & ESD) +/- 10% of Torque Setting (Prime)
Calibration Period:	Every 12 Months or 5000 cycles (minimum) (Pro & ESD only)

Safety & Maintenance

- Use only as a Torque Screwdriver.
- Do not use as a hammer, chisel or pry bar.
- Only hold the tool using the hand grip.
- For increased leverage, use the T-Bar provided (Large Pro & ESD Only)
- For ease of identification use different colour cap ends (Pack of four, Order Code:065800)
- Always ensure that the screwdriver is in correct alignment with the fastener
- Torque tools should be regularly calibrated and inspected to ensure correct operation
- Ensure the tool is clean and free of oil, grease and water before use
- Never dip into cleaning fluid or petroleum

Spare parts, servicing and calibration instructions are available from **Torqueleader**. Please contact us or visit www.torqueleader.com for further information.

Adjustment Procedure


1



Check Setting

Using a Torque Analyser, check the setting of the screwdriver.


2

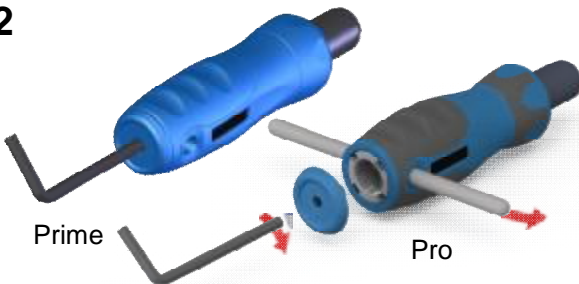

If adjustment is necessary

Use a 5mm hexagon key to remove the end cap fitted to Pro & ESD models only. Also remove the T-Bar where fitted. Then insert the hexagon key into the end of the hand grip to engage the adjusting screw.

3

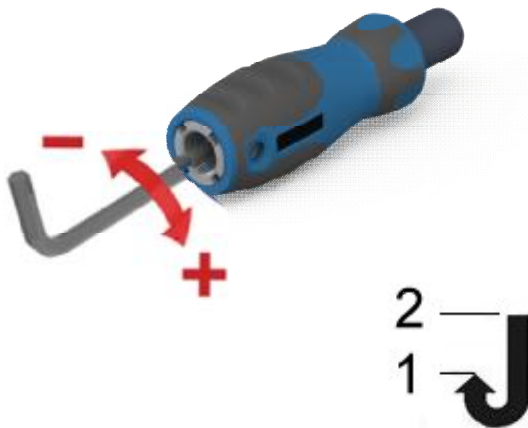

Increase Torque

Rotate the key clockwise until the correct torque is shown consistently on the analyser. (10 readings).

Reduce Torque

When adjusting, always approach the required torque from a lower setting.

To reduce the torque, rotate the key anti-clockwise past your setting, then increase torque to the required value.



TLS Screwdrivers are designed for use with sockets, screwdriver bits and blades.

At the set torque, the handle rotates through an angle of 60° before resetting.

Torqueleader – TAKING THE RISK OUT OF TIGHTENING

Measure



- Torque measuring tools are used in Research, Development, Inspection and Quality Control where there is a need to check torque settings. This type of tool can also be used in a servicing or Production environment to apply torque.
- Measuring Torque Tools feature a dial or digital readout and are available in screwdriver or wrench formats, covering torque values up to 2000 N.m.

Apply



- Torque applying tools are used to apply a set torque to a fastener. The tool will **Click**, **Break** or **Slip** to signal to the operator when the set torque has been achieved.
- **Preset** tools are ideal for production areas where the same torque is applied repeatedly.
- **Calibrated Scale** tools are operator adjustable and are ideal for servicing applications where ease of adjustment is essential.

Calibrate



Torqueleader offer two types of Torque Analyser:

- **Mechanical** Analysers offer a low cost robust and easy to use device, designed to set and calibrate low range torque tools.
- **Digital** Analysers allow the user to download test results, test powered torque tools and reach higher torque values than are possible using mechanical analysers.

Torqueleader's Calibration Service

Professional, Quality and Competitive



- Regular calibration to International Standards is vital to ensure that your torque equipment is operating at its peak performance.
- We have a UKAS Calibration Laboratory, accredited to ISO/IEC 17025:2005 on site, capable of recalibrating most Hand Torque Tools, Analysers and Transducers in accordance with the International Standards.

Torqueleader, Tannery Lane, Gosden Common,
Bramley, Guildford, Surrey, GU5 0AJ

Sales Hotline: +44 (0) 1483 894476
Switchboard: +44 (0) 1483 892772
Faxsmile: +44 (0) 1483 898536
Email: salesandrepairs@torqueleader.co.uk



TAKING THE RISK OUT OF TIGHTENING

Torqueleader is a partner in the **GEORE** Group

www.torqueleader.com