

STI Wireless Chimes











PRODUCT OVERVIEW

The Entry Alert Chime and Wireless Motion-Activated Chime greet your visitors with the sound of music and at the same time alerts you of their presence. Wireless Chime can be used as a doorbell or pager for family members who require special care. Entry Alert and Wireless Motion-Activated Chime also have an alarm mode. All chimes are compatible with each other.

HOW IT WORKS

Wireless Chime (STI-32500)

Mount the wireless button next to your door, plug the receiver into any 120 VAC indoor electrical outlet and the chime is ready to operate. Transmitter has up to 250 foot operating range and includes two 3 Volt (CR2032) lithium batteries.

Entry Alert® Chime (STI-32600)

Mount the small transmitter and magnet to any door, and plug the remote receiver unit into any electrical outlet. That's it. No wiring is required. When a monitored door is opened, the Entry Alert Chime sends a signal to the receiver announcing an entrance with choice of selectable melody or alarm. Transmitter has up to 150 foot operating range and includes one 6 Volt alkaline battery.

Wireless Doorbell Extender (STI-32000)

This doorbell chime connects to your existing traditional hard wired doorbell system and extends a new chime to hard-to-hear areas. Once the unit is wired into existing system, the included receiver can be plugged into any standard electrical outlet up to 150' from the new hard wired transmitter. This allows you to hear when someone is at your front door when in remote areas. Normally open switch, 16 VAC.

Wireless Motion-Activated Chime (STI-46100)

Mount the motion sensor and plug door chime receiver into any electrical outlet within operating range. Alerts when someone enters the transmitter's detection zone. The weather sealed transmitter has up to 100 foot operating range and 140° x 40 ft. detection zone. Requires four "AA" batteries (not included). Activation switch allows user to select alarm or chime sounds. Includes adjustable mounting bracket.

FEATURES

- · All of these chimes are compatible with each other.
- Know when your door opens or when a person enters the detection zone... and greet your visitors with pleasant music.
- · Can distinguish between front and back doors by adding transmitters and programming a different tune on each.
- · Receiver requires 120V AC 60Hz (STI-32000 16 VAC).
- · For security 32 individual privacy codes to protect against outside interference.
- · Select any of 13 sounds with the push of a button on the transmitter. The STI-32000 offers six sounds.
- · Entry Alert and Wireless Motion-Activated Chime also have an alarm
- · ETL Listed. FCC Certified.
- · Ideal for the home, store or office.
- · Quick and easy to install no wiring needed.
- · Two year limited warranty.



STI Wireless Chimes

Dimensions and Technical Information

MODELS AVAILABLE

STI-32000 Wireless Doorbell Extender

STI-32500 Wireless Chime STI-32600 Entry Alert Chime

STI-46100 Wireless Motion-Activated Chime

Accessories:

STI-32530 Wireless Chime Receiver

STI-33010 Wireless Button
STI-35500 Wireless Transmitter
STI-46010 Wireless Motion Sensor
STI-30950 6 Volt Alkaline Battery
STI-33950 3 Volt Lithium Battery

Selectable Sounds:

- · Dong
- · Ding Dong
- · Westminster Chime
- · Star Spangled Banner
- · Hail! Hail! The Gang's All Here
- · Jingle Bells
- · Auld Lang Syne
- · Dixie
- · The Yellow Rose of Texas
- · Happy Birthday
- · Beethoven's 5th
- \cdot Joy to the World
- · Take Me Out to the Ballgame

NOTE: STI-32000 plays the first six sounds.

STI-32600 and STI-46100 have an optional alarm mode. Alarm will sound for four minutes or until reset.

WARRANTY

Two year limited warranty.

SPECIFICATIONS

Decibels: 75dB

FCC Certified: Receiver DE47DC3051

Transmitter DE47DC3750

ETL Listed: Intertek Listed to US and Canadian standards

ST3253R

Frequency: 315 MHz

Power Source: Receiver requires 120V AC 60 Hz

Transmitter requires: STI-32000 - None


STI-32500 - Two 3 Volt batteries

STI-32600 - One 6 Volt Photo Cell battery

STI-46100 - Four AA batteries

NOTE: End user must verify the alarm and battery every six months

and replace battery annually or as required.

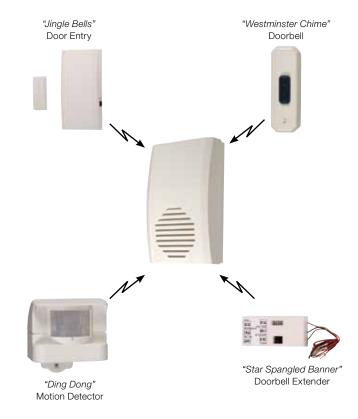

All accessories can work together!

Make each a different selectable sound and know the exact transmitting source.

