Stellar@<u>Labs</u>® Contents: INTRODUCTION 1 piece 1 piece 1 piece HDMI Switch Dear customer 5V power adapter User manual Thank you for purchasing this Stellar Labs product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference. Remote 1 piece 1 piece Figure 2 rear panel **USER MANUAL** MHL to HDMI cable Our selection of HDMI Converter, switchers, extenders, matrixes and splitters are designed to make your AV device use more convenient, comfortable, productive and cost-efficient. DC5V: DC in jack (DC5V~12V) HDMI IN1~4: HDMI input ports 4 Port HDMI Switch and Audio Extractor HDMI OUT: HDMI output port (support ARC) L-OUT-R: Left & right analog audio output ports. This unit is a 3 Port HDMI Switch with Audio Extraction that supports ARC, 3D and 4Kv2K, which can easily switch between three HD Sources to one HD Display, Also, any of the inputs are capable of audio extraction, with the output being a Tositik connection or a set of UR RCAs. The Switcher supports ARC function that can return audio back from the TV to the AV receiver. AN. Optical OUT: SPDIF digital audio output Model #: 33-12772 SRI 60 User Manual Our devices offer solutions for noise, space, security concerns, data center control, information distribution, conference room presentations, schools, and corporate training environments. FEATURES Operating and Connecting: 1.To add input sources, use HDMI cables to the corresponding input ports on the unit. Three HDMI inputs can switch freely to one HDMI output. Support Full HD 1080P, Full 3D.4K*2K Support ARC Function: Without adding one extra HDMI Cable, it can reverse the audio to the AV Amplifier by HDMI Cable connection with HD TV while the HD TV receives the audio and video orgentert Figure 1 Front Panel (If you are using an MHL device, use the provided cable and plug the cable into input ARC LED: ARC status indicator LED On: ARC turn on, then output TV audio by optical port. 2. To add an output, use an HDMI cable to connect the HDMI output port of the unit to the monitor. LED off: ARC turn off, then output HDMI audio by optical and RCA ports. HDMI working in dual mode, can reduce the number of ports 3.To use Toslink output, connect a Toslink cable to the SPDIF port on the unit to an AV Out LED: HDMI output status indicator ED indication when the source is call indicate the fund the of poins ED indication when the source is active, the corresponding LED with light up. Support a source up to 30 feet away using a standard HDM cable. The IR remote can change the source and the audio output mode. Mo lear of unable. receiver. IN1~4 LED: HDMI input port indicator 4.To use the L/R RCA output, connect an RCA patch cable to the L/R port of the unit to IR: IR receiver interface an analog audio input port. EDID Select: Built-in EDID mode selection switch (Used in conjunction with the SAVE 5.To use the IR remote or the switch button to do control and switch to the Input sources and the ARC/SPDIF function. No loss of quality Installs in minutes SAVE: EDID mode Enter and save key 6.Connect the 5V adapter to the device. ARC: ARC Turn on/off key Switch: Short press is HDMI input signal source selection. Long press (more than 2seconds) is power ON / stand by. Mcmelectronics.com Mcmelectronics.com Mcmelectronics.com

OPTICAL OUT

L-QUT-R OFTIGLI QUT	Support video color format Audio output. Max transmission bandwidth. Max baud rate. Input/Output TMDS signal Input cable distance. Output cable distance. Max working current. Power adapter format. Operating Temperature range. Storage Temperature range. Operating Humidity range. Storage Humidity range. Dimension (L x W x H).			N2 LC N4 AC > SAE
n the unit.			No.	EDIE
nto input			0	Auto / Pas
the unit to			1	
			2	Copy out
t to an AV			<u> </u>	4K/2 cha
he unit to			3	
			4	4K / 5.1 d
nput			5	4K / HD a
			6	1080P / 2
			7	1080P / 5
Mcmelectronics.com		Mcmelectronics.com		

SPECIFICATIONS:

4KX2K/1080p/1080i/720p/576p/576i/480p/480i
L/R+SPDIF
0.5~1.5Volts p-p
5Volts p-p (TTL)
≤10m AWG26 HDMI standard cable
Input: AC (50HZ, 60HZ) 100V-240V; Output: DC5V/1A
-10 to +55 C
-20 to +60 C
13.1.07

IR Remote Functions

() : Power standby/Power on IN1: Select HDMI IN1 for the input port IN2: Select HDMI IN1 for the input port IN3: Select HDMI IN1 for the input port IN4: Select HDMI IN1 for the input port < ARC: ARC turn on, output TV audio SAVE: Same with the SAVE key on the machine

ilt-in EDID mode selection switch (Used in conjunction with the SAVE key)

No.	EDID information description	No.	EDID information description
0	Auto / Pass mode	8	1080P / HD audio, up to 7.1 channel
1	Copy output	9	1080P 3D / 2channel
2	DVI mode	A	1080P 3D / 5.1 channel
3	4K / 2 channel	В	1080P 3D/HD audio, up to 7.1 channel
4	4K / 5.1 channel	С	1080l / 2channel
5	4K / HD audio, up to 7.1 channel	D	1080l / 5.1 channel
6	1080P / 2 channel	E	1080I / HD audio, up to 7.1 channel
7	1080P / 5.1 channel	F	720P / 2channel

Please use this device as the instructions have described to improve the longevity and safety of the unit. 1. The unit should be placed in a location away from damp, high-temperature, dusty, erosive, and oxidative conditions.

2.Please hold the power adapter head and do not pull the power cord when disconnecting from the socket.

3.Please turn the power off when the unit is not being used for long time. Please use the original factory power adapter.

Troubleshooting

	Housieshooting			
Issue	Cause and Ways to deal with			
No Power	1. Make sure the power plug is inserted securely into the			
	unit.			
	2. Check the power source to make sure it is connected to			
	an outlet.			
No Picture	1. Make sure the monitor is on and connected to the unit.			
	2. Make sure the source is on and connected to the unit.			
	3. Check all connections to make sure they are secure.			
	4. Connect the source to the monitor to see if the issue with			
	your other components.			
	5. Inspect your HDMI cable for damage.			
Obscure Picture	1. Connect the source to the monitor to see if the issue with			
	your other components.			
	2. Inspect your HDMI cable for damage.			
No Sound	1. Make sure audio settings correspond with your source.			
	1. Make sure the plastic tab is removed from the battery			
Remote Not Working	compartment.			
	2. Make sure the battery has a charge.			
	Mcmelectroni			

Warranty

This device is warranted against manufactures defects for a period of one year from the date of purchase from the dealer. This warranty extends solely to the repair or replacement of this product and does not cover additional costs, including but not limited to installation or removal of the product or any incidental or consequential damages. Nor does it cover damage due to improper use, storage or application of this device. Should a service issue arise within the one year period, please contact the dealer in which this device was purchased. It will be the sole decision of Stellar Labs to repair or replace any device found to be defective during this period.

Mcmelectronics.com