

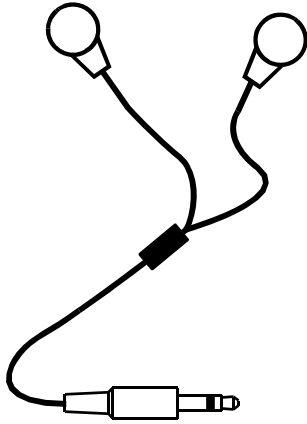


IR Emitters

Model 50-14871  
Dual IR Emitter

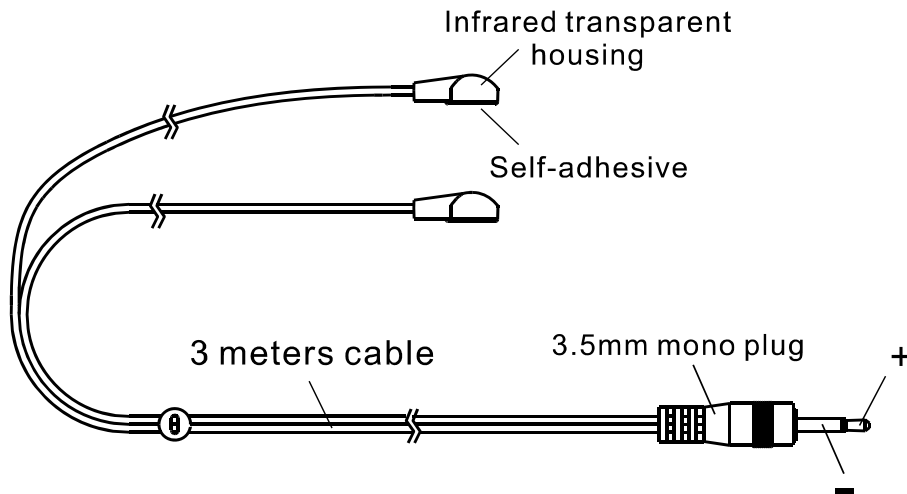

Model 50-14870  
Single IR Emitter


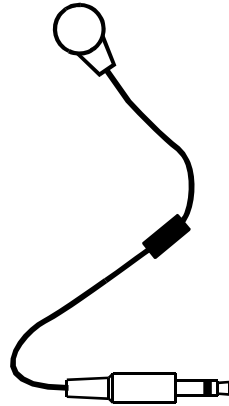


## ◆ IR Emitters

---


### A. Standard installation

1. IR emitter attached directly to IR sensor window.
2. Most reliable activation

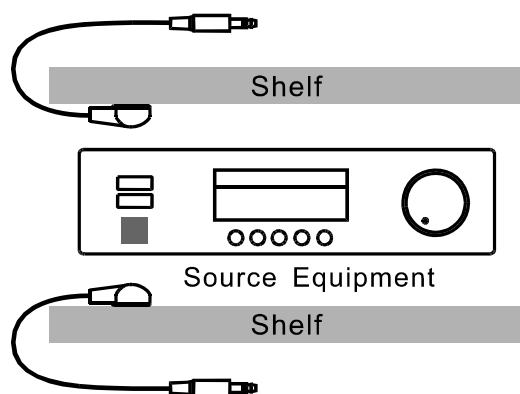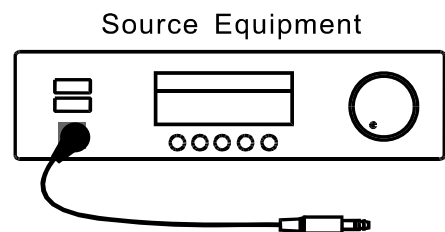


### B. Attach emitter on inside shelf

1. Attach emitter on shelf above or below IR sensor.
2. Less reliable activation.

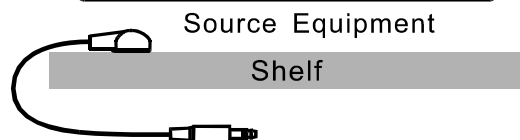

### C. Cabinet with door installation

1. Attach emitter on door, round shape facing the IR sensor.
2. Less reliable activation.

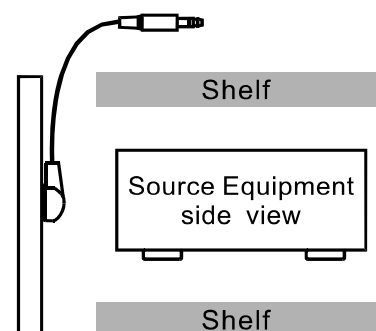

**Note:** Occasionally, more reliable activation can occur by moving the IR emitter further away from the device. This may be due to improper placement of the emitter, or that the sensor itself is partially obscured. It may also be due to a peculiar remote control unit / sensor combination. Placing the emitter 5~10cm away from the IR sensor can achieve significantly better activation in such cases. Please experiment to achieve optimal activation before securing with the self-adhesive pads.